


Introduction

This Manual contains a parts list for your 1996 GO-4 Interceptor and is divided into major sections which correspond to the groups shown in the Table of Contents and the accompanying illustration. The first page of each major section lists the contents of that section, each of which consists of exploded views and related listing tables.

REFERENCE VIN NUMBER.....


This Parts Book is effective for the following Serial Numbers;

..... to

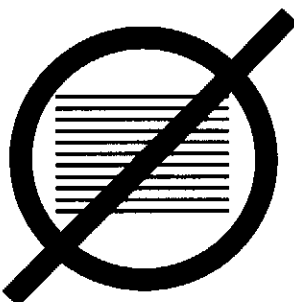

**DO NOT PHOTO COPY
THIS DOCUMENT**

Contents are protected under copywrite laws,
additional Manuals are available.

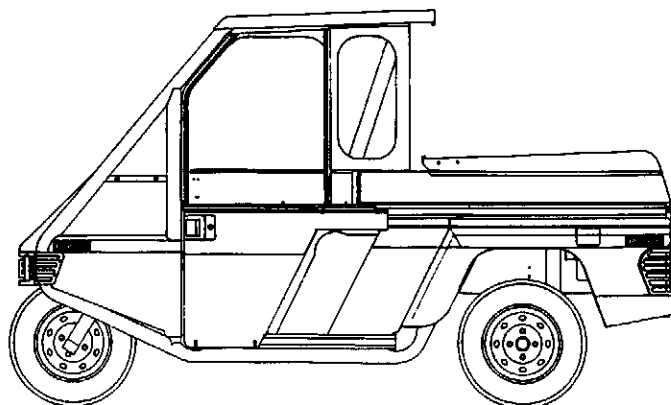

using the manual...

When ordering parts...

Always provide the **Model** and **Serial Number** of your vehicle to assist in ordering and obtaining the correct parts. Use the exploded view and table listing of the area of interest for exact identification.

Using the Manual...

Parts information consists of exploded view illustrations and photographs of the associated Parts List tables as follows;

REFERENCE NUMBER

The Reference number is the identifier number from the illustration.

For example;

Number 3 on an illustration page points to the component which is item 3 on the accompanying page, under the column "*Ref. No.*"

DESCRIPTION

This column contains the name and description of the Part.

PART NUMBER

The Part Number is the six digit number which is specific to the part you are ordering.

QUANTITY

This column shows the quantity of each part used in the component or assembly required.


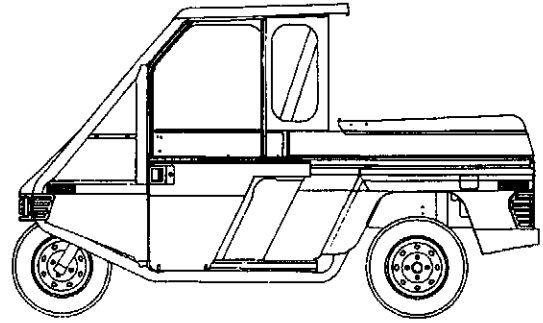


Table of Contents

Introduction and VIN Numbers	1
Instructions for Using the Manual	2
Table Of Contents	3
Frame	4
Oil Pan & Timing Cover	6
Cylinder Block	8
Cylinder Head & Cover	10
Piston, Crankshaft & Flywheel	12
Fuel System	14
Air Cleaner	16
Fuel Distributor	18
Exhaust Manifold	20
Air Cleaner	22
Intake Manifold	24
Cooling System	26
Transmission	28
Battery	30
Starter	32
Alternator	34
Distributor	36
Engine Electrical System	38
Switches & Relays (Engine)	40
Torque Converter, Oil Pump & Rings	42
Transmission Case & Main Control System	44
Rear Suspension	46
Drive Shafts	50
Steering	52
Front Suspension	56
Tires & Jack	58
Engine & Transmission Mount	60
Exhaust System	62
Accelerator	64
Fuel Tank & Line	66
Brake System	68
Parking Brake	70
Change Control	72
Bumpers	74
Lighting	76
Body Panels	78
Interior Body Panels	82
Seats & Seat Belts	84
Door, Lower	86
Door Windows	88
Heating	90
Air Conditioner	92
Upper Trunk Assembly	100
Lower Trunk	102
Windows	104
Windshield Wiper	106
Electrical Panel assembly	108
Wiring Harness	112
Dash & Wiring Harness	114
Caution Plates	116


FRAME

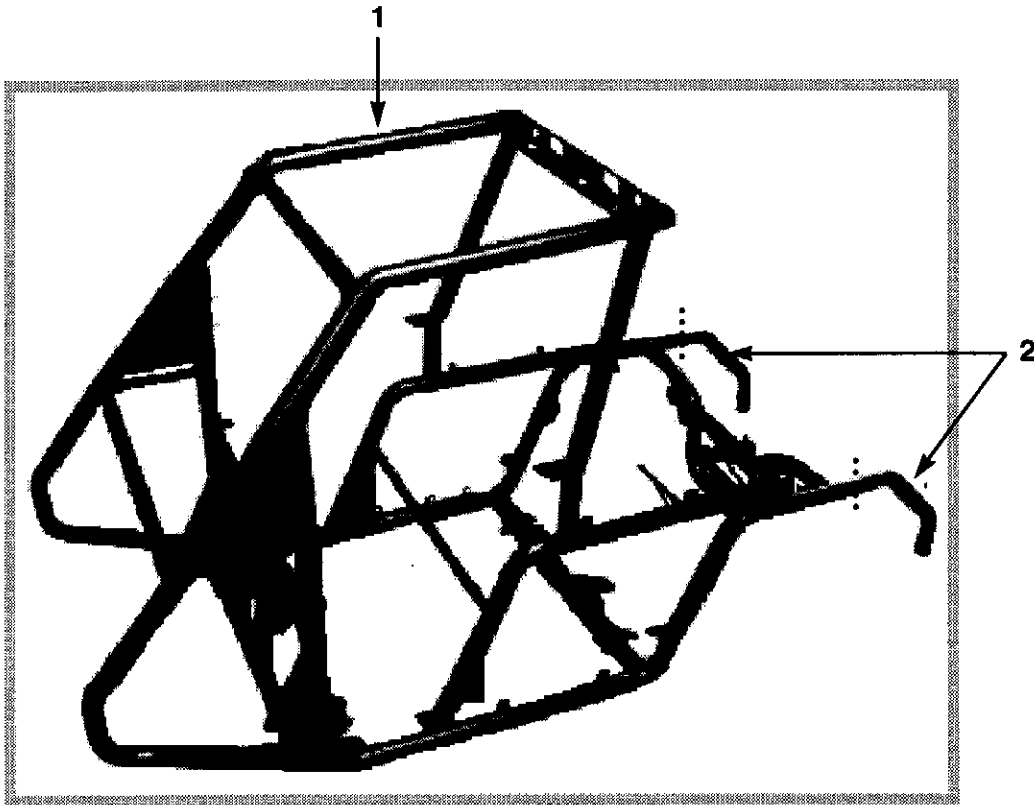

FRAME

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Frame	018021	1
2	Frame Extension	013782	2



OIL PAN & TIMING COVER

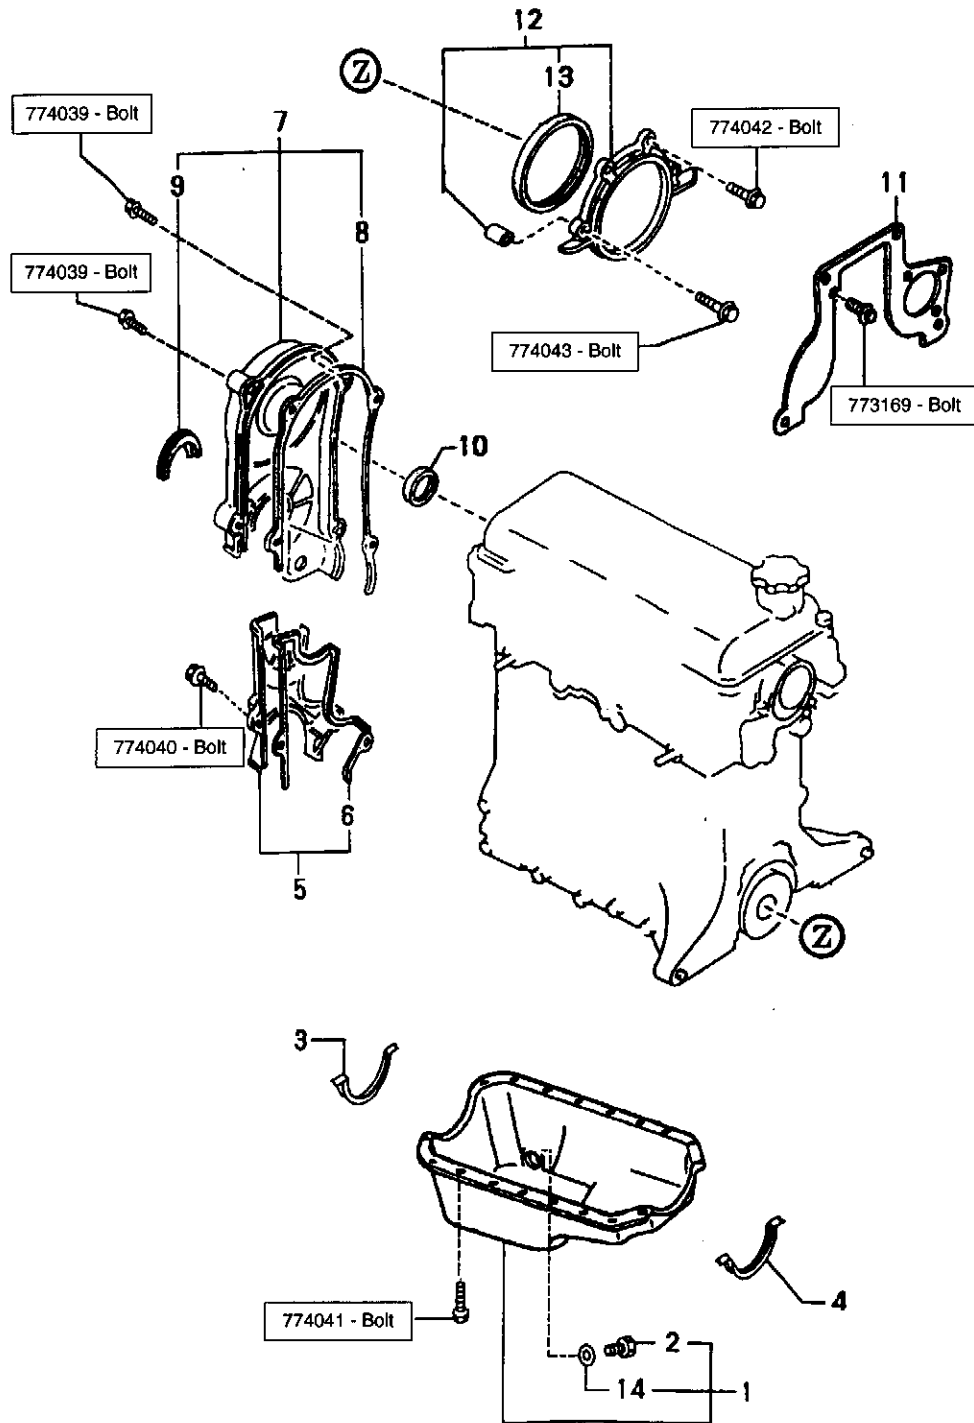

OIL PAN & TIMING COVER

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Pan Assembly-Oil	104000	1
2	Plug	104001	1
3	Gasket-Oil Pan	104002	1
4	Gasket-Oil Pan	104003	1
5	Cover, Assembly, Lower	104004	1
6	Gasket-Cover, T, Belt	104005	1
7	Cover, Assembly, Upper	104006	1
8	Gasket-Cover, T, Belt	104007	1
9	Gasket	104008	1
10	Seal-Oil	104009	1
11	Plate-End	104010	1
12	Cover Assembly- Rear	104011	1
13	Seal-Oil	104012	1
14	Seal-Plug	104013	1


CYLINDER BLOCK

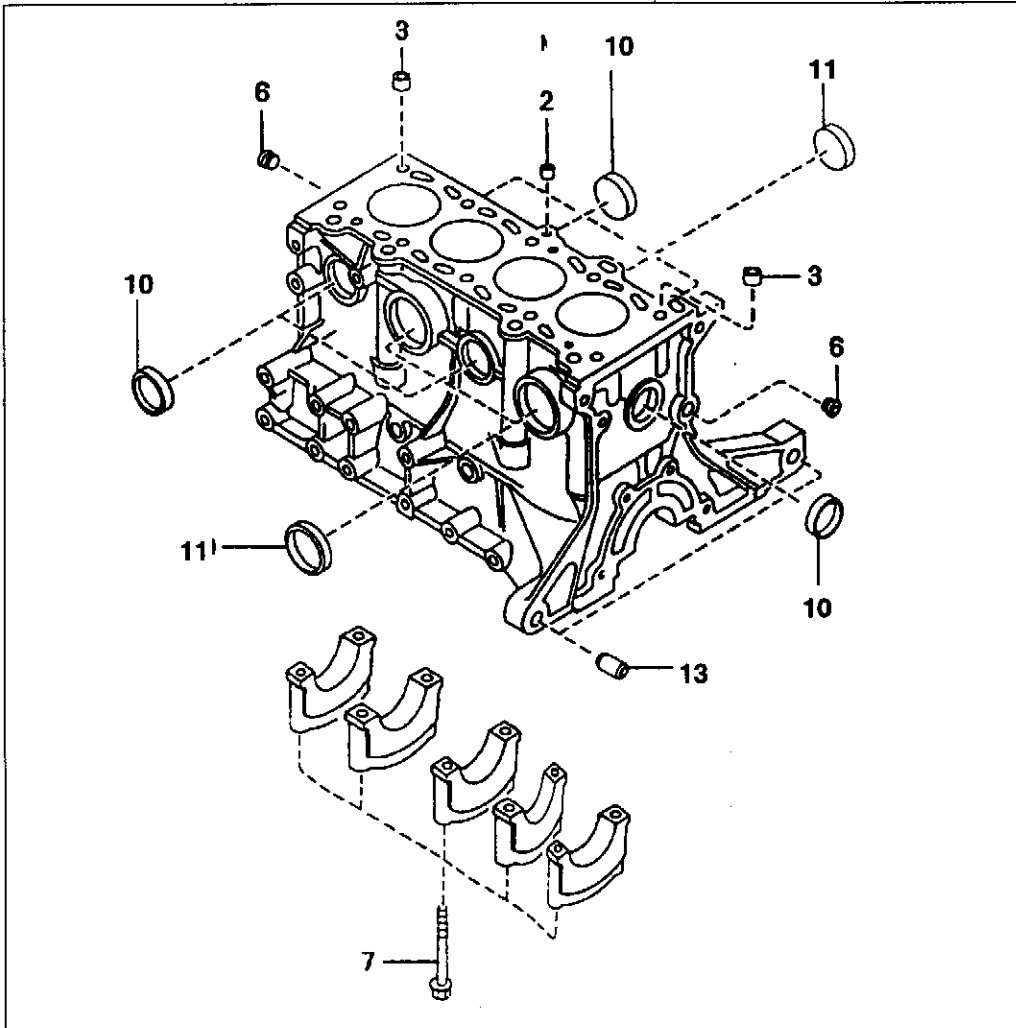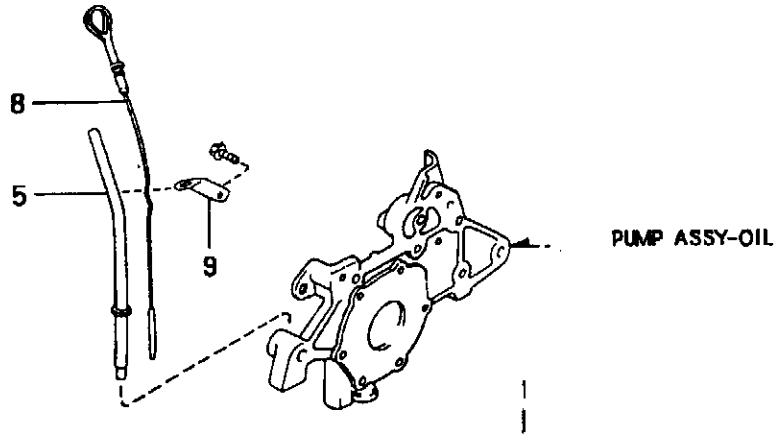

CYLINDER BLOCK

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>Q'TY</i>
1	Block Assembly-Cylinder	104014	1
2	Plug-Oil Control	104015	1
3	Pin-Tubular	104016	2
5	Joint-Oil Filter	104017	1
6	Blind Plug	104018	2
7	Bolt-C.Shaft Cap	104019	10
8	Gage Assembly-Oil Level	104020	1
9	Bracket-Oil Level Gage	104021	1
10	Frost Plug	104022	3
11	Frost Plug	104023	2
13	Sleeve Mount	104025	1


CYLINDER HEAD & COVER

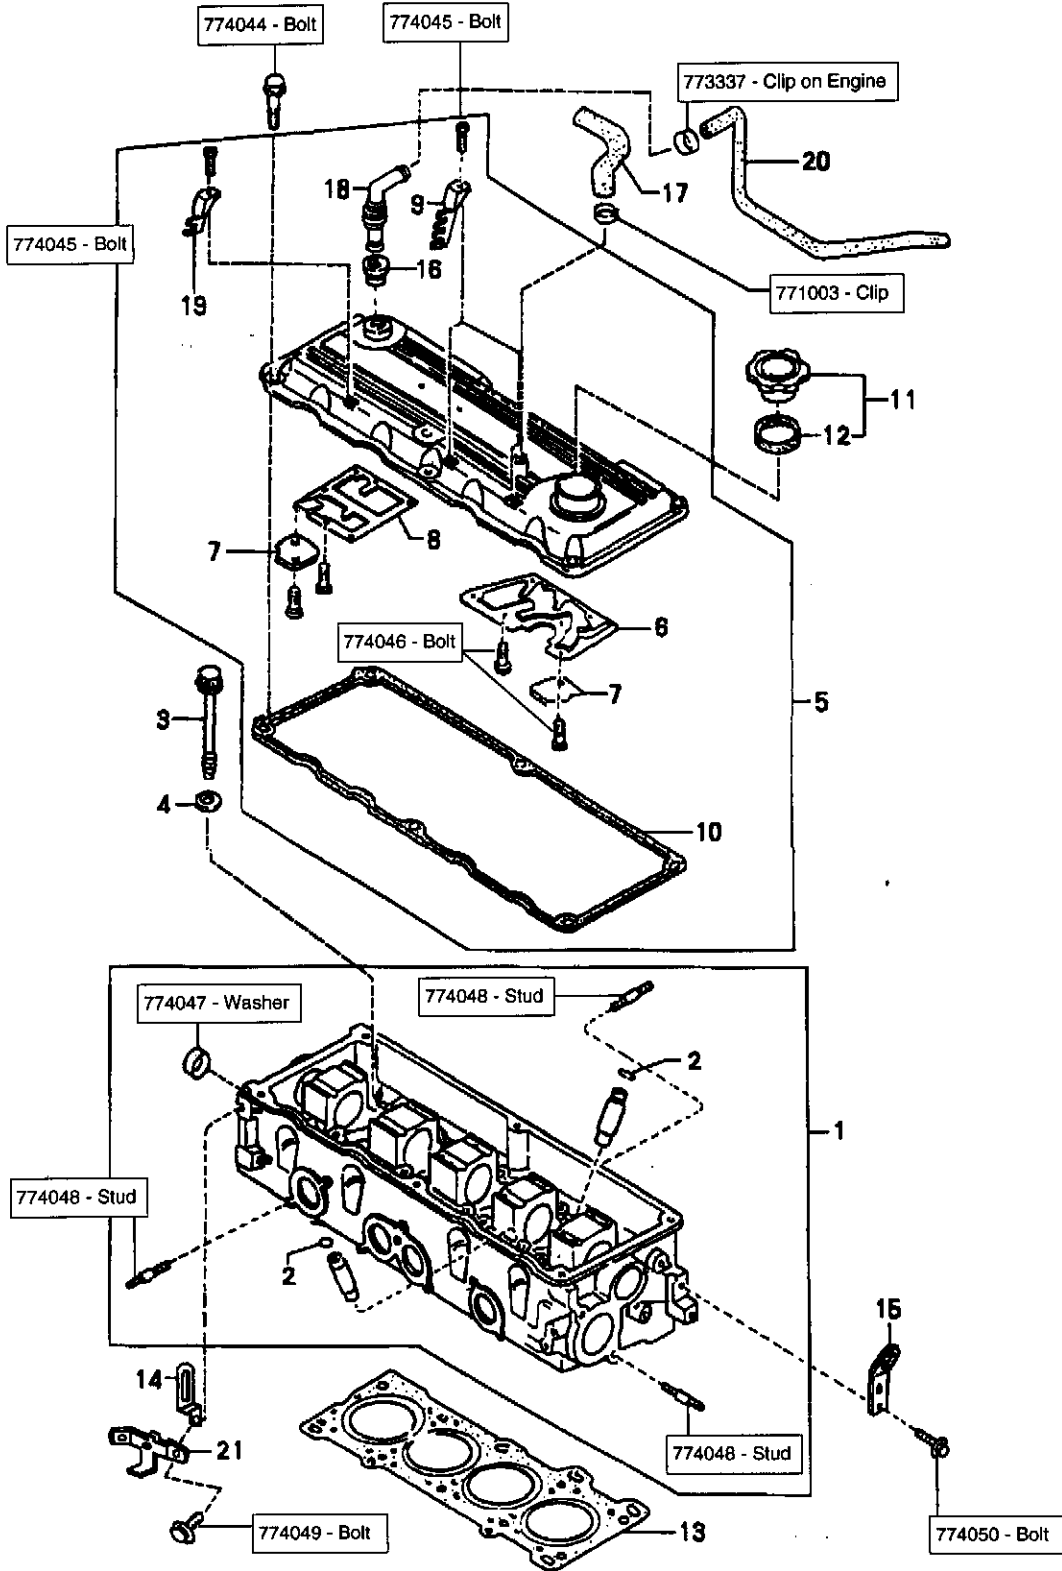

CYLINDER HEAD & COVER

REF.	PART NAME	PART NO.	Q'TY
1	Head Assembly-Cylinder	104026	1
2	Clip Valve Guide	104027	8
3	Bolt-Cylinder Head	104028	10
4	Washer-Head Bolt	104029	10
5	Cover Compt Head	104030	1
6	Plate Baffle A-	104031	1
7	Plate Baffle B-	104032	2
8	Plate, Oil Separator	104033	1
9	Protector-H.T.Cord	104034	20
10	Gasket-Head Cover	104035	1
11	Cap Assembly-Oil Filler	104036	1
12	Gasket-Oil Cap	104037	1
13	Gasket-Cylinder Head	104038	1
14	Hanger-Engine, F	104039	1
15	Hanger-Engine, R	104040	1
16	Rubber Seal		1
17	Hose-Ventilation (<i>on engine</i>)	103013	1
18	Valve-P,C.V.	104041	1
19	Protector-H.T.Cord	104042	1
20	Hose-Ventilation (<i>on engine</i>)	103014	1
21	Bracket, Assembly, Coupler	104043	1



PISTON, CRANKSHAFT & FLYWHEEL

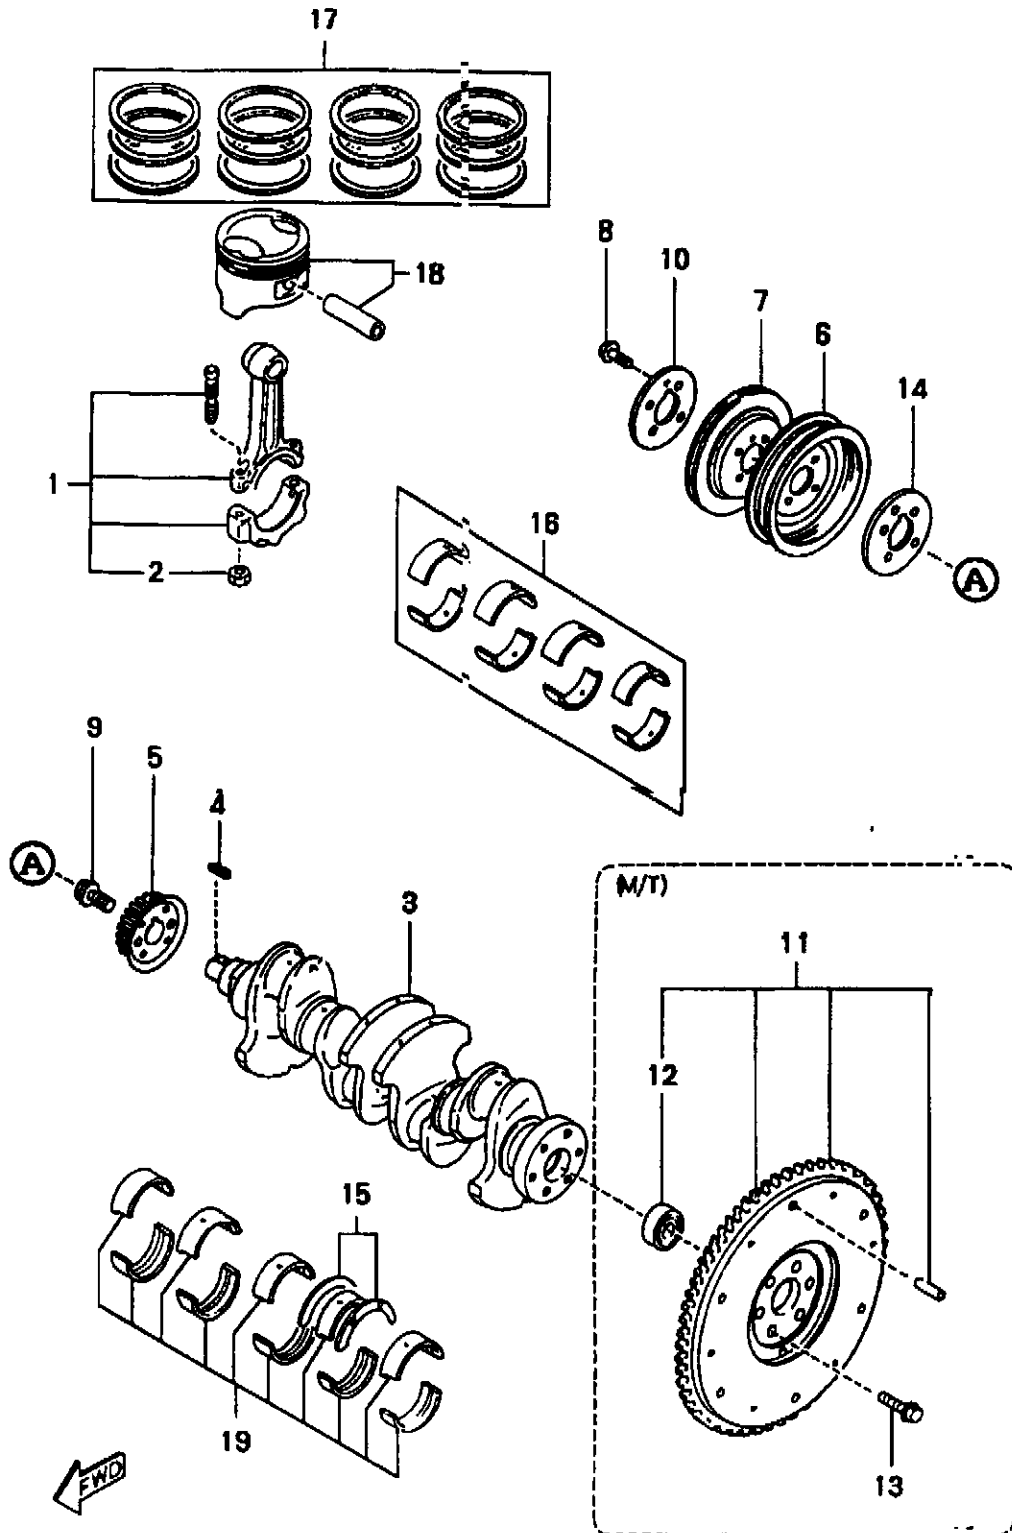

PISTON, CRANKSHAFT & FLYWHEEL

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Rod Assembly-Connecting	114000	4
2	Nut-Connecting Rod Cap	114001	8
3	Crankshaft	114002	1
4	Key-Crankshaft	114003	1
5	Pulley-T.Belt	114004	1
6	Pulley, C. Shaft	114005	1
7	Pulley, C. Shaft	114006	1
8	Bolt	114007	4
9	Bolt-Pulley Lock	114008	1
10	Plate	114009	1
11	Flywheel Assembly	114010	1
12	Bearing-Pilot	114011	1
13	Bolt-Flywheel Lock	114012	6
14	Pulley Assembly C.S.	114013	1
15	Metal Set-Thrust	114014	1
16	Metal Set- Conrod	114015	1
17	Ring Set-Piston	114016	1



FUEL SYSTEM

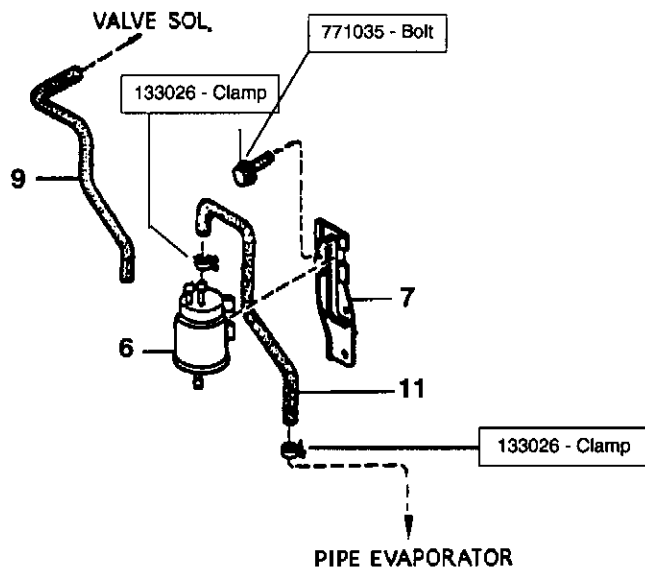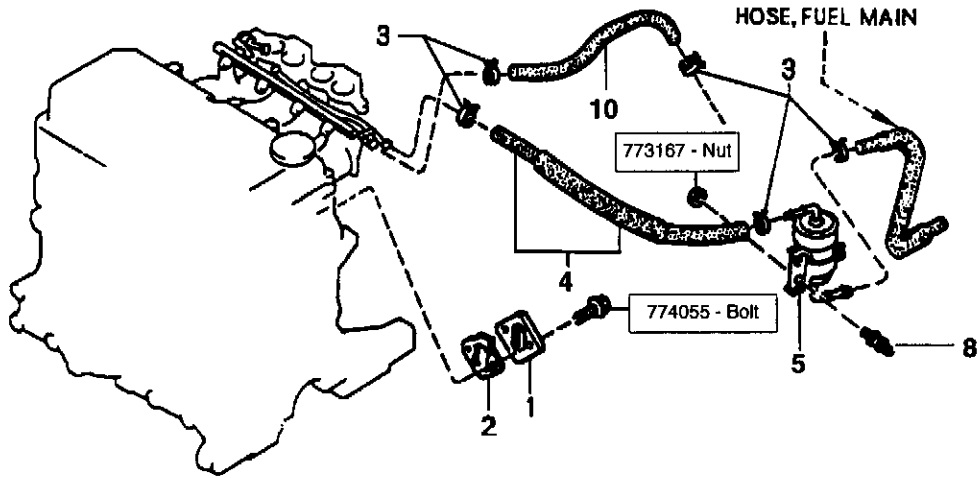

FUEL SYSTEM

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Cover-Blind	124009	1
2	Gasket-Fuel Pump	134008	1
3	Clip	133015	1
4	Hose Assembly-Fuel EGI	133826	1
5	Filter Assembly-Fuel	133016	1
6	Canister	133017	1
7	Bracket-Canister	133018	1
8	Rubber-Mounting	133026	2
9	Tube-Vacuum, Canister	134006	1
10	Fuel Return Hose	421732	1
11	Fuel Vapour Line	133827	1


AIR CLEANER

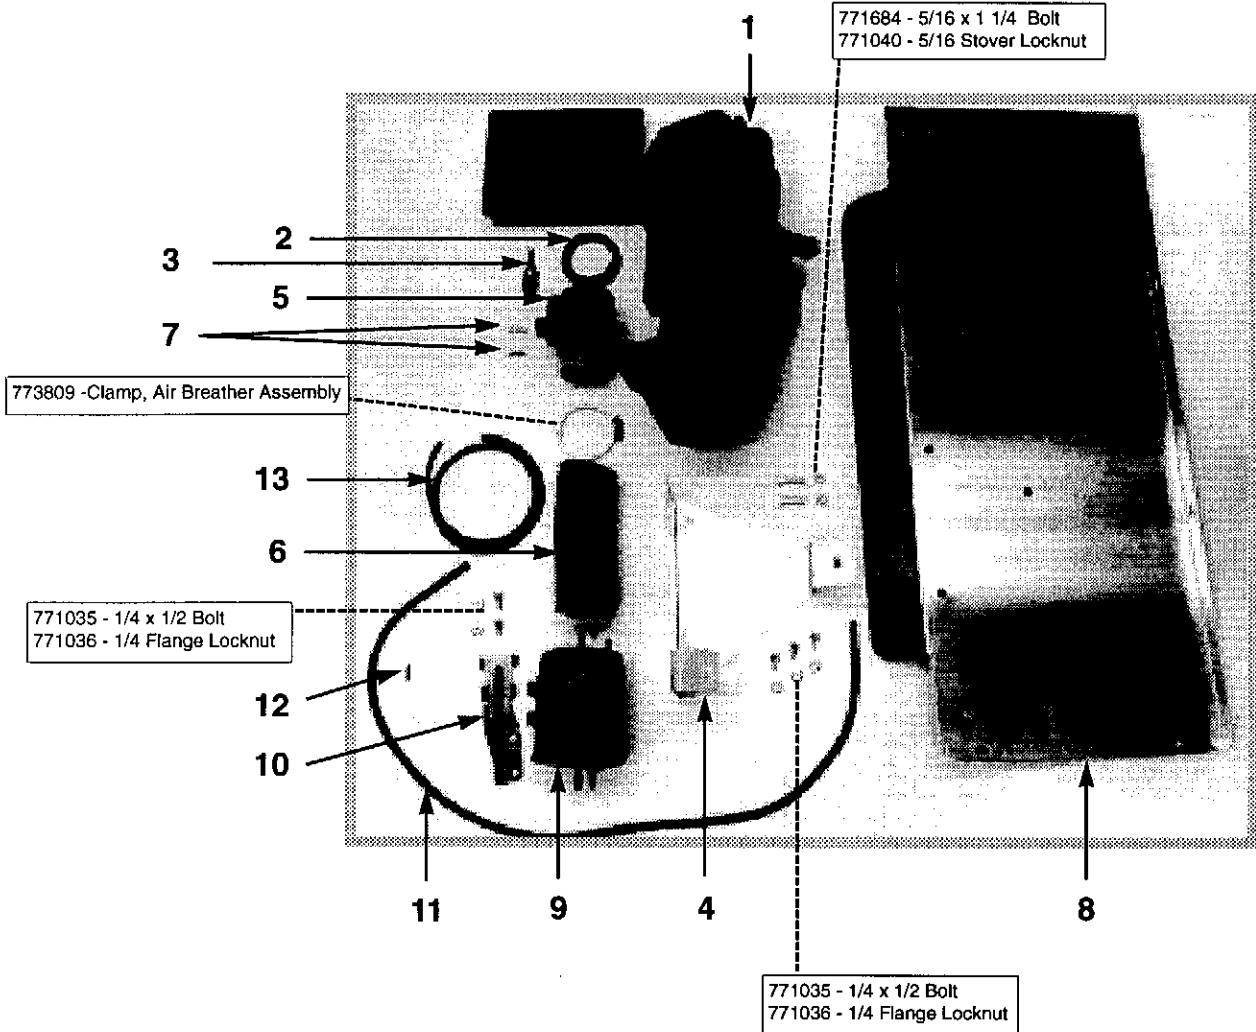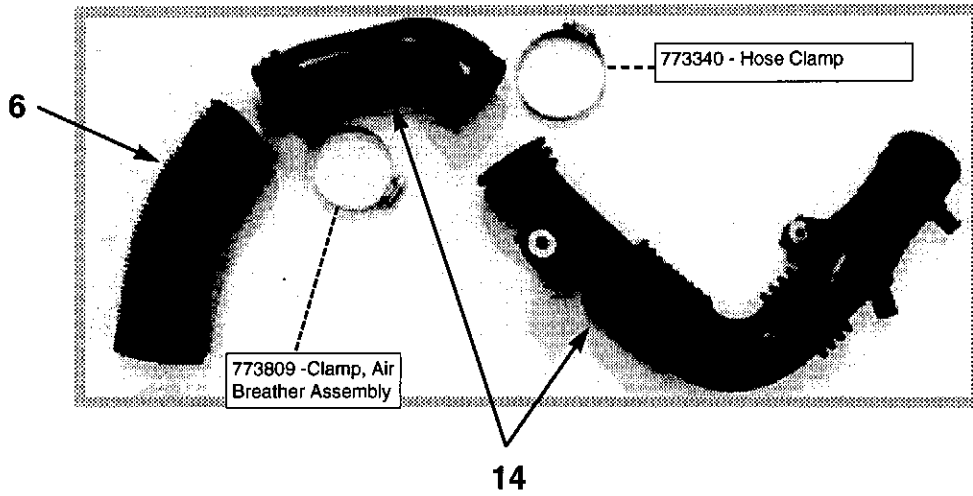

AIR CLEANER

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Cleaner-Air	133020	1
2	Rubber Joint	133265	1
3	Sensor-Air Flow	133348	
4	Mount-Air Intake	133558	1
5	Sensor-Air Temperature	133632	1
6	Air Intake Hose	133753	1
7	Bolt-Air Vane	133803	2
8	Panel-Floor Extension	534001	1
9	Canister	133017	1
10	Canister Bracket	133018	1
11	Canister HoseEngine	134006	1
12	1/8 Vacuum Connector	423732	1
13	Hose-Air	133028	1
14	Pipe Assembly-Air Intake	133023	1


FUEL DISTRIBUTOR

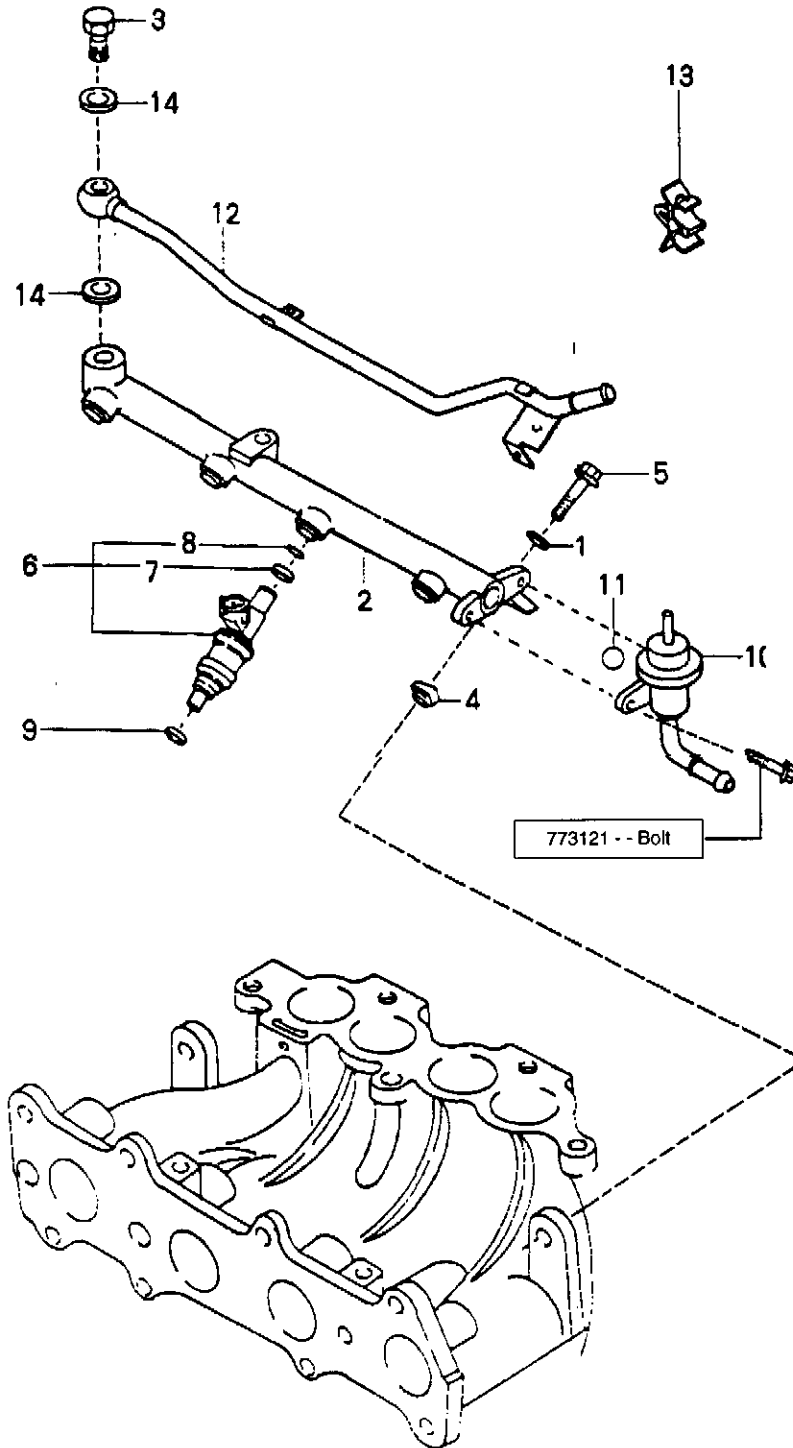

FUEL DISTRIBUTOR

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>Q'TY</i>
1	Insulator-Fuel Distributor	134010	2
2	Dist.-Fuel	134011	1
3	Bolt-Fuel Connector	134012	1
4	Insulator-Fuel Distribution	134013	2
5	Bolt-Fuel Dis.	134014	2
6	Injector-Fuel	134015	4
7	Grommet	134016	4
8	Ring	134017	4
9	Insulator-Injection	134018	4
10	Pressure Ring-Fuel	134019	1
11	Ring-O	134020	1
12	Pipe Assembly-Fuel	134021	1
13	Clamp-Hose	134022	2
14	Packing, Fuel	134023	2





EXHAUST MANIFOLD

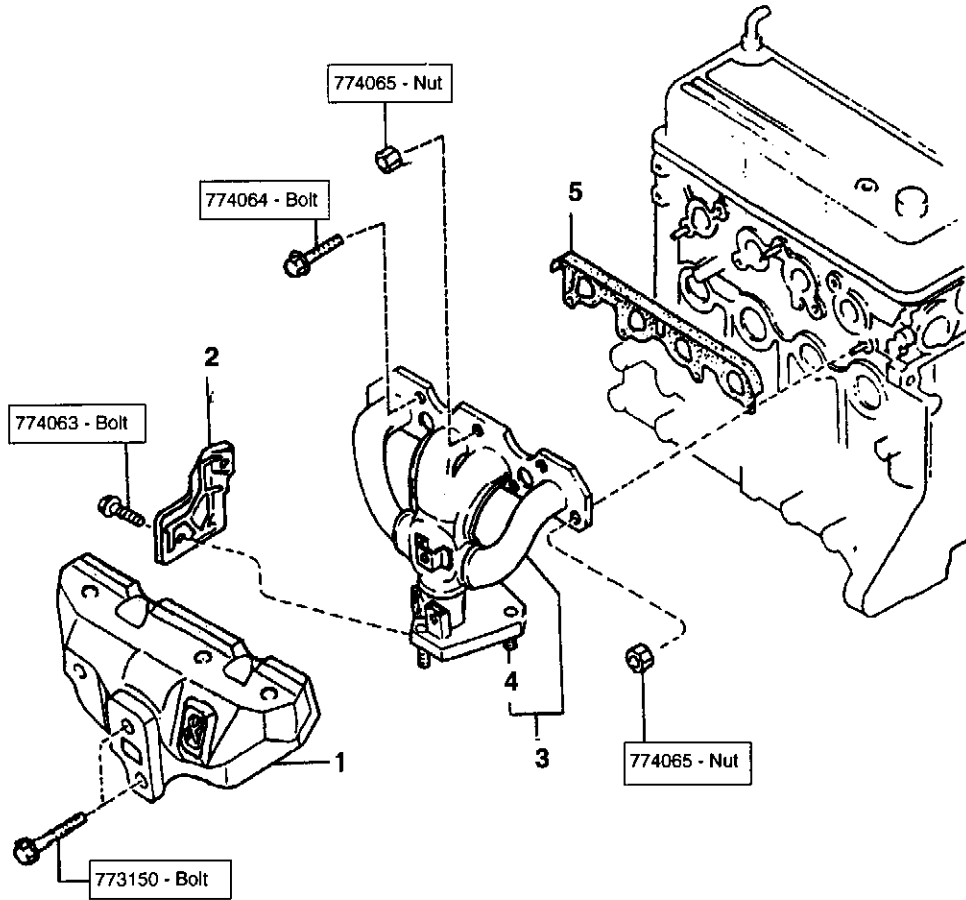

EXHAUST MANIFOLD

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Insulator Assembly Exhaust	403149	1
2	Insulator-Heat	134031	1
3	Manifold Assembly-Exhaust	134032	1
4	Stud	134033	3
5	Gasket Assembly-Exhaust Manifold	134034	1


AIR CLEANER

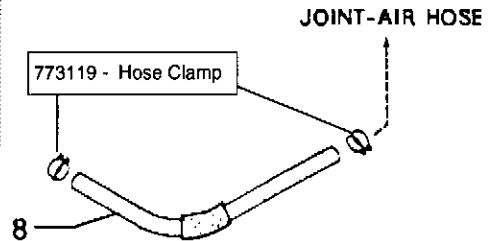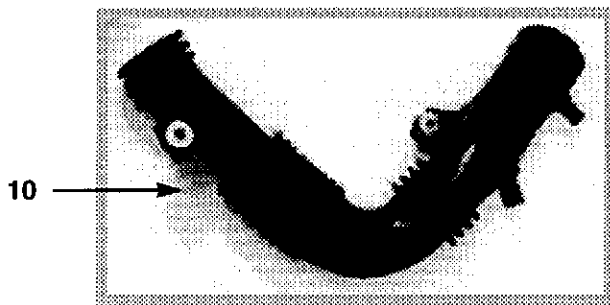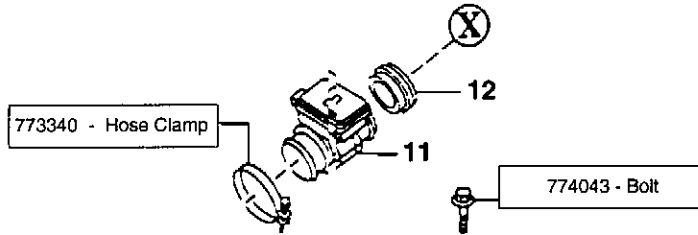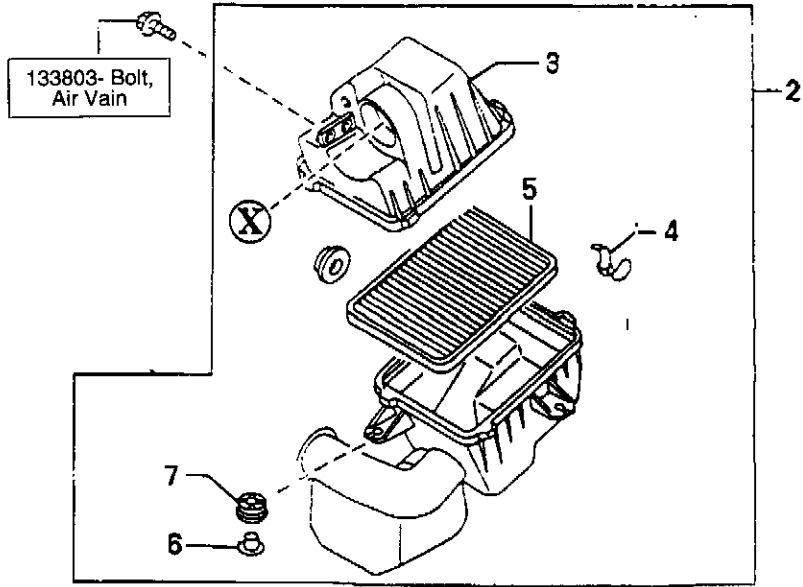

AIR CLEANER

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
2	Cleaner-Air	133020	1
3	Cover-Air Cleaner	134035	1
4	Clip	134036	4
5	Element-Air Cleaner	134037	1
8	Hose-Air	133021	1
10	Pipe Assembly-Air Intake	133023	1
11	Sensor-Air Flow	133348	1
12	Joint-Rubber	133265	1


INTAKE MANIFOLD

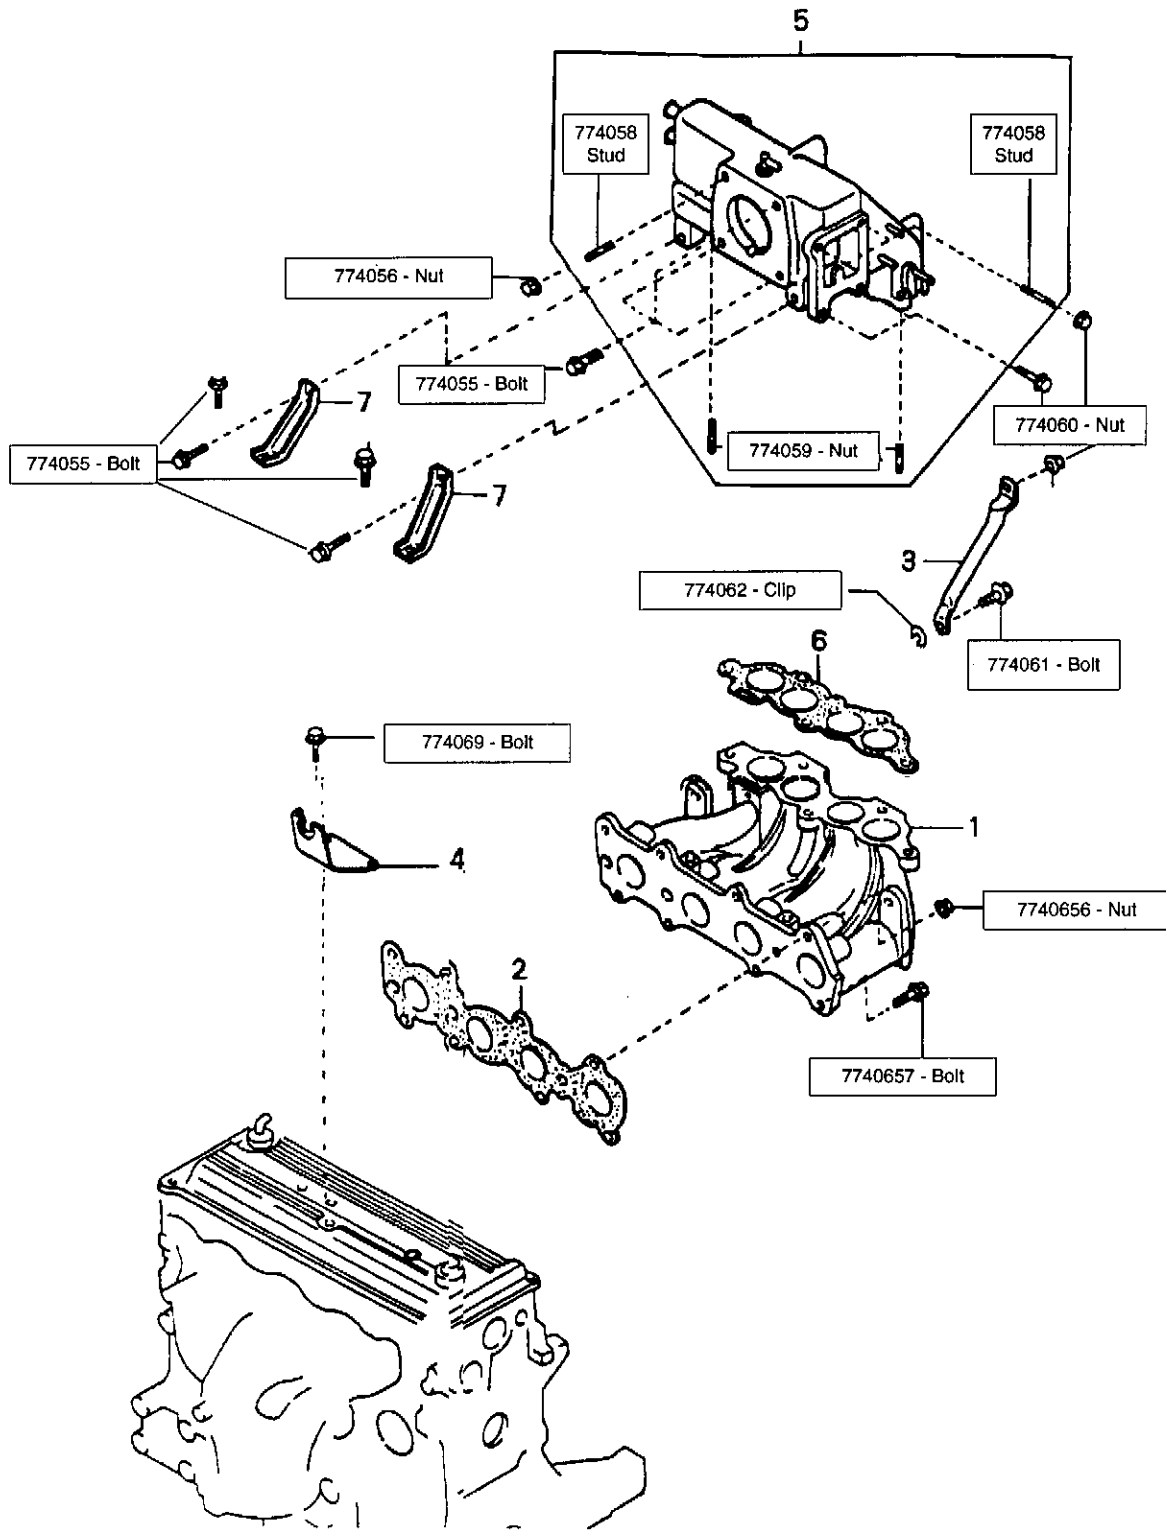

INTAKE MANIFOLD

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Manifold Assembly-Intake	134024	1
2	Gasket-Intake Manifold	134025	1
3	Stay-Intake Manifold	134026	1
4	Bracket-Acc. Wire	134027	1
5	Tank Assembly-Surge	134028	1
6	Gasket-Surge Tank	134029	1
7	Bracket-Surge Tank	134030	2


COOLING SYSTEM

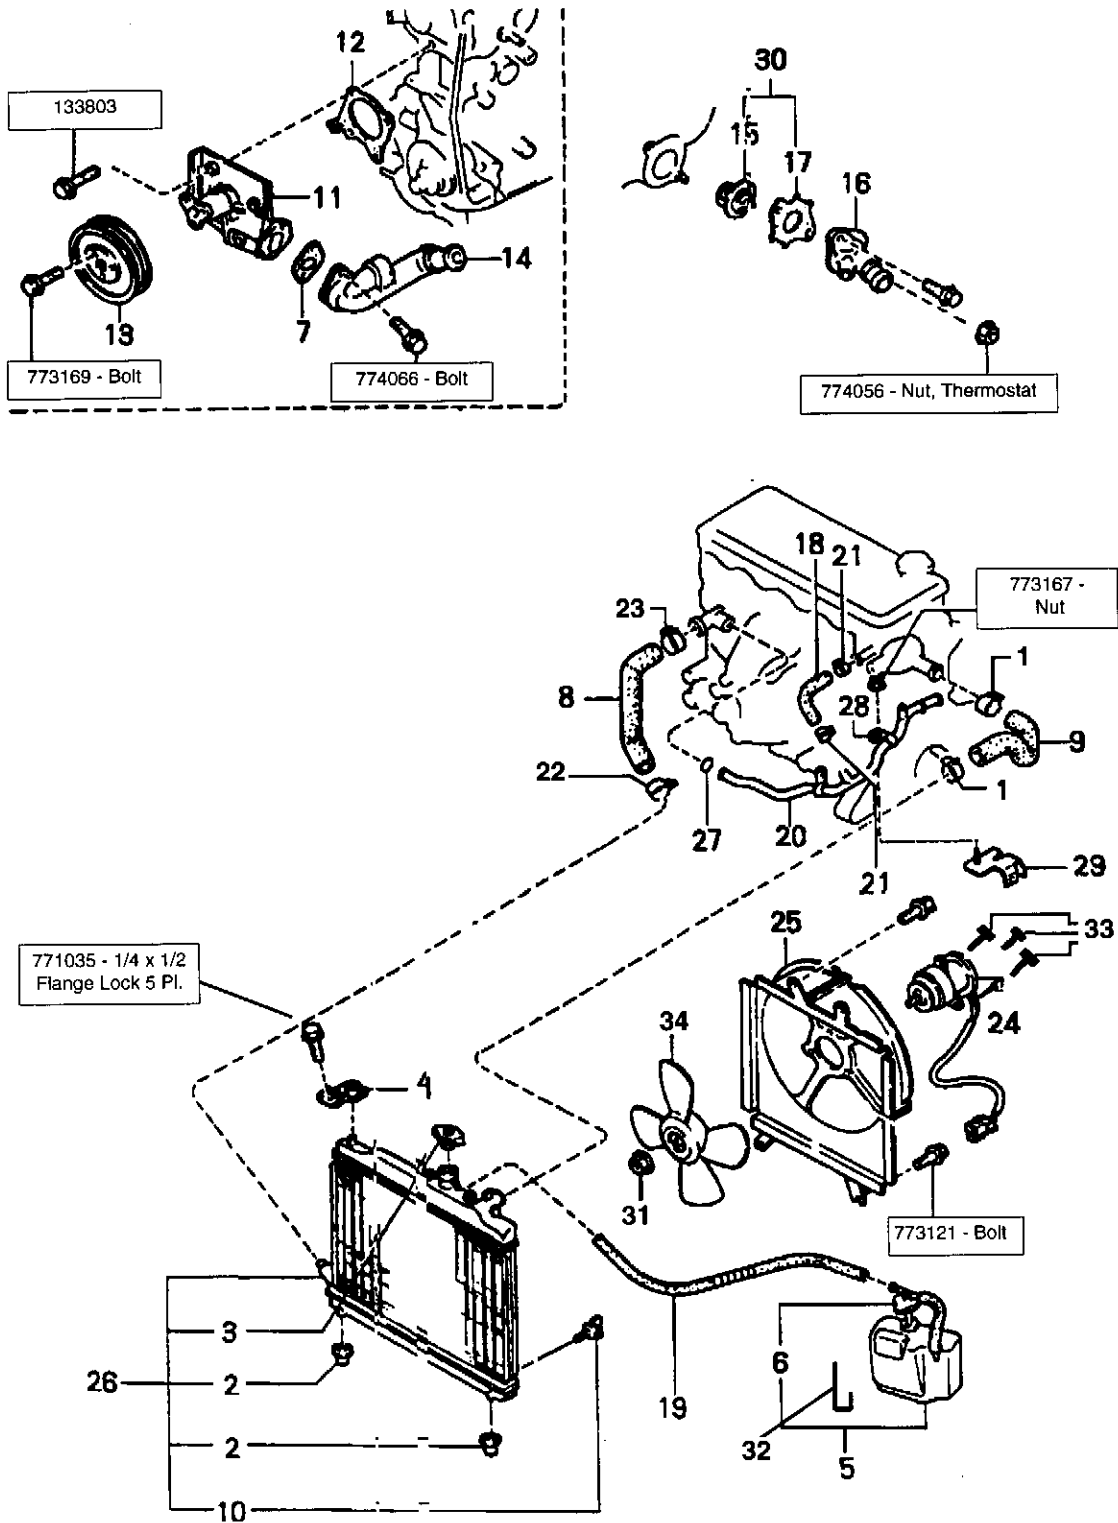

COOLING SYSTEM

REF.	PART NAME	PART NO.	QTY
1	Clamp-Hose Water	153704	2
2	Rubber -Mount	154003	2
3	Cap-Radiator	154004	1
4	Bracket Assembly-Radiator, Upper	153798	2
5	Tank Assembly-Sub	153031	1
6	Cap-Sub Tank	154005	1
7	Gasket-Inlet Water Pump	154006	1
8	Hose-Water, Lower	153032	1
9	Hose-Water, Upper	153347	1
10	Cock-Water Drain	154007	1
11	Water Pump	154008	1
12	Gasket Water Pump	154009	1
13	Pulley Water Pump	154010	1
14	Inlet Water Pump	154011	1
15	Thermostat	154012	1
16	Cover-Thermostat	154013	1
17	Gasket-Thermostat	154014	1
18	Hose-Bypass, Thermostat	154015	1
19	Hose-Sub Tank	154001	1
20	Piper Assembly-Bypass	154016	1
21	Clip-Hose	133015	2
22	Clamp	153702	1
23	Clamp	153029	1
24	Motor-Drive Fan	153346	1
25	Cowling-Radiator	153036	1
26	Radiator	153035	1
27	O-Ring	154017	1
28	Clip	154018	1
29	Bracket Assembly-Air P.Pc.	154019	1
30	Thermostat Set	154020	1
31	Nut-Fan Blade	153708	1
32	Mount-Sub Tank	153706	1
33	Screw-Fan Cooling	153350	3
34	Fan-Cooling	153345	1



TRANSMISSION

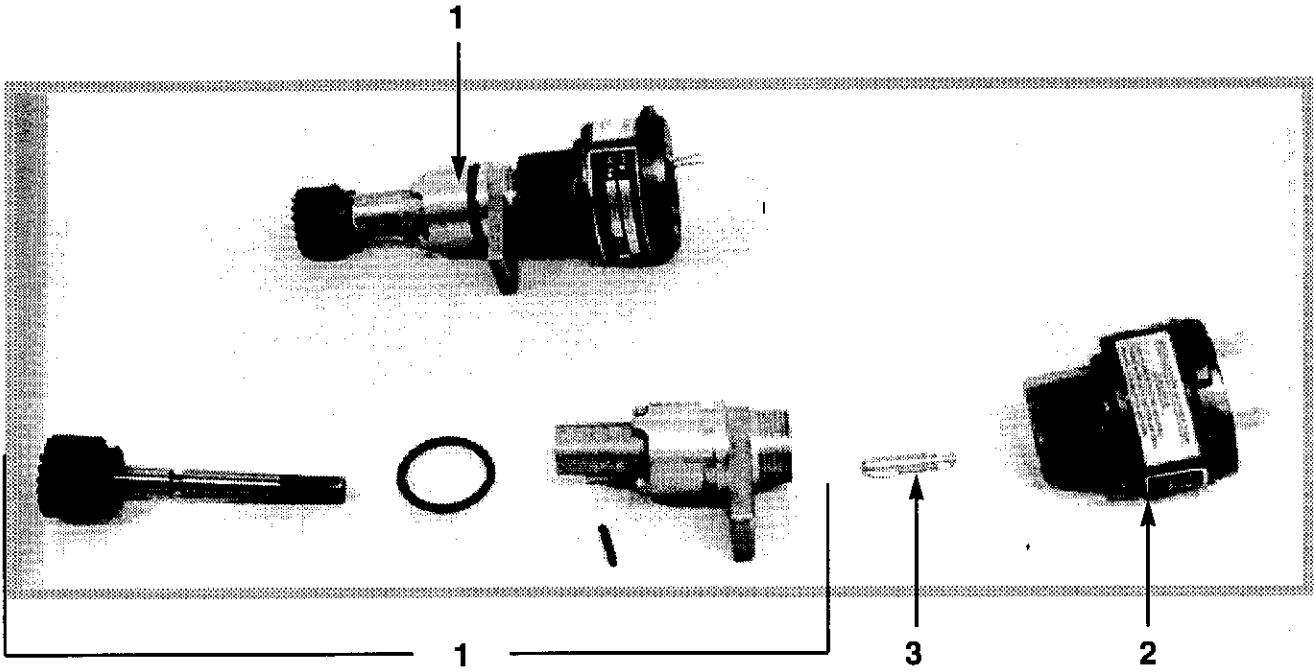

TRANSMISSION

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>Q'TY</i>
1	Speedo Gear Assembly	179001	1
2	Speed Signal Generator	170004	1
3	Drive Pin	171413	1


BATTERY

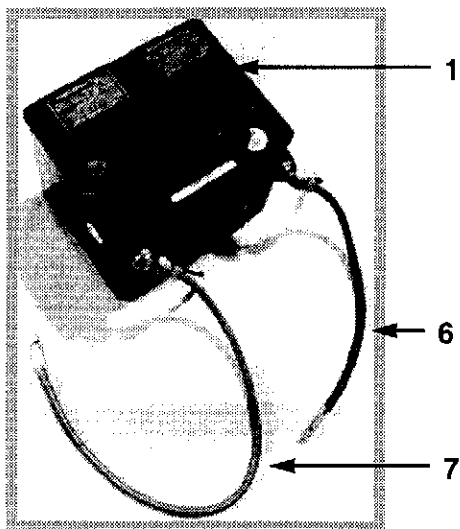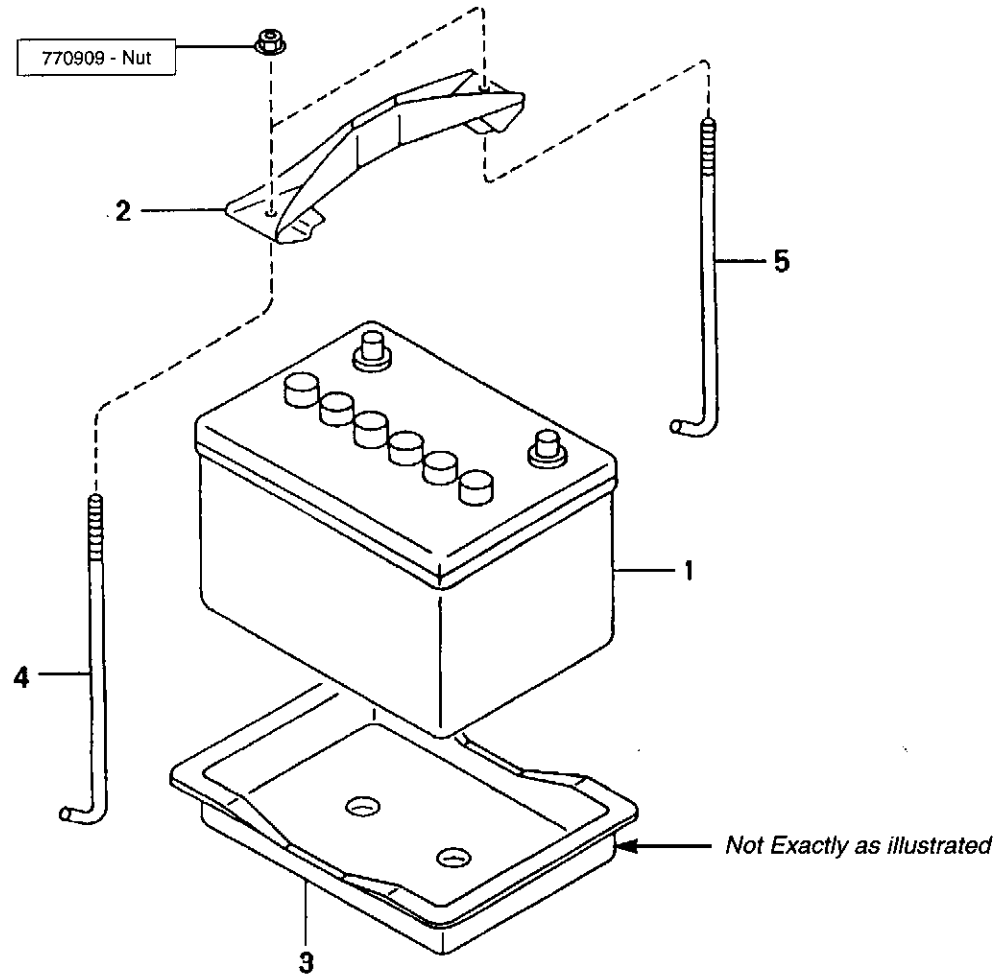

BATTERY

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Battery-550 CCA	182863	1
2	Clamp-Battery	181671/184003	1
3	Tray-Batttery <i>(not exactly as shown)</i>	183799	1
4	Bolt-Clamp	183043	
5	Bolt-Clamp	183044	1
6	Negative Battery Cable	181409	1
7	Positive Battery Cable	183728	1


STARTER

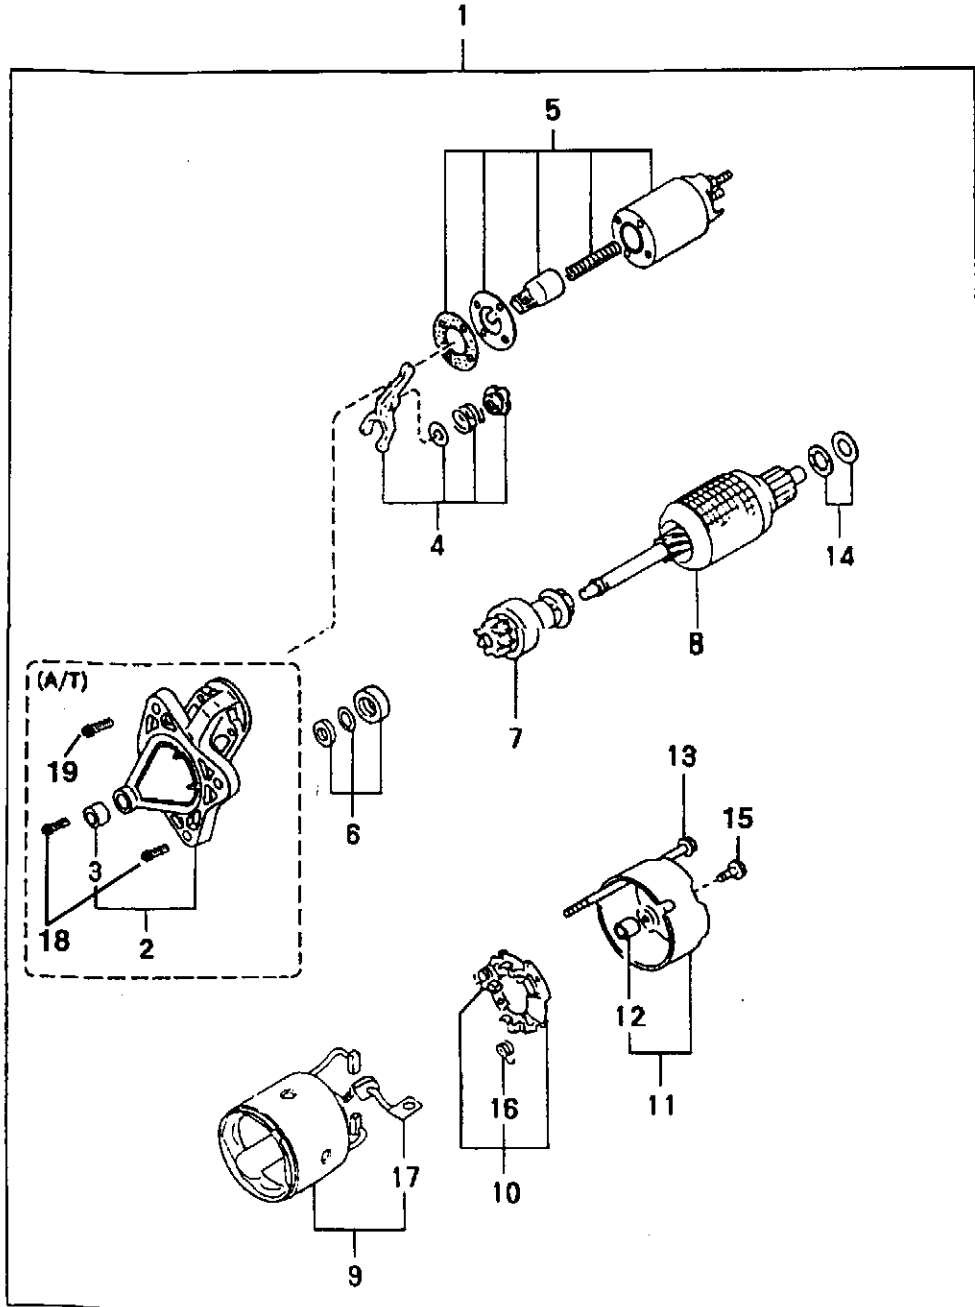

STARTER

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>Q'TY</i>
1	Starter	183041	1
2	Front Bracket Assembly	184006	1
3	Bearing-F.	184007	1
4	Lever Set	184008	1
5	Switch Assembly	184009	1
6	Stopper Set	184010	1
7	Clutch-Over Running	184011	1
8	Armature Assembly	184012	1
9	Yoke Assembly	184013	1
10	Brush Holder Assembly	184014	1
11	Bracket Assembly-R.	184015	1
12	Bearing-R.	184016	1
13	Bolt Through	184017	1
14	Washer	184018	1
15	Screw	184019	1
16	Spring-Bushing	184020	3
17	Brush	184021	2
18	Bolt	180410	2
19	Bolt	180411	1


ALTERNATOR

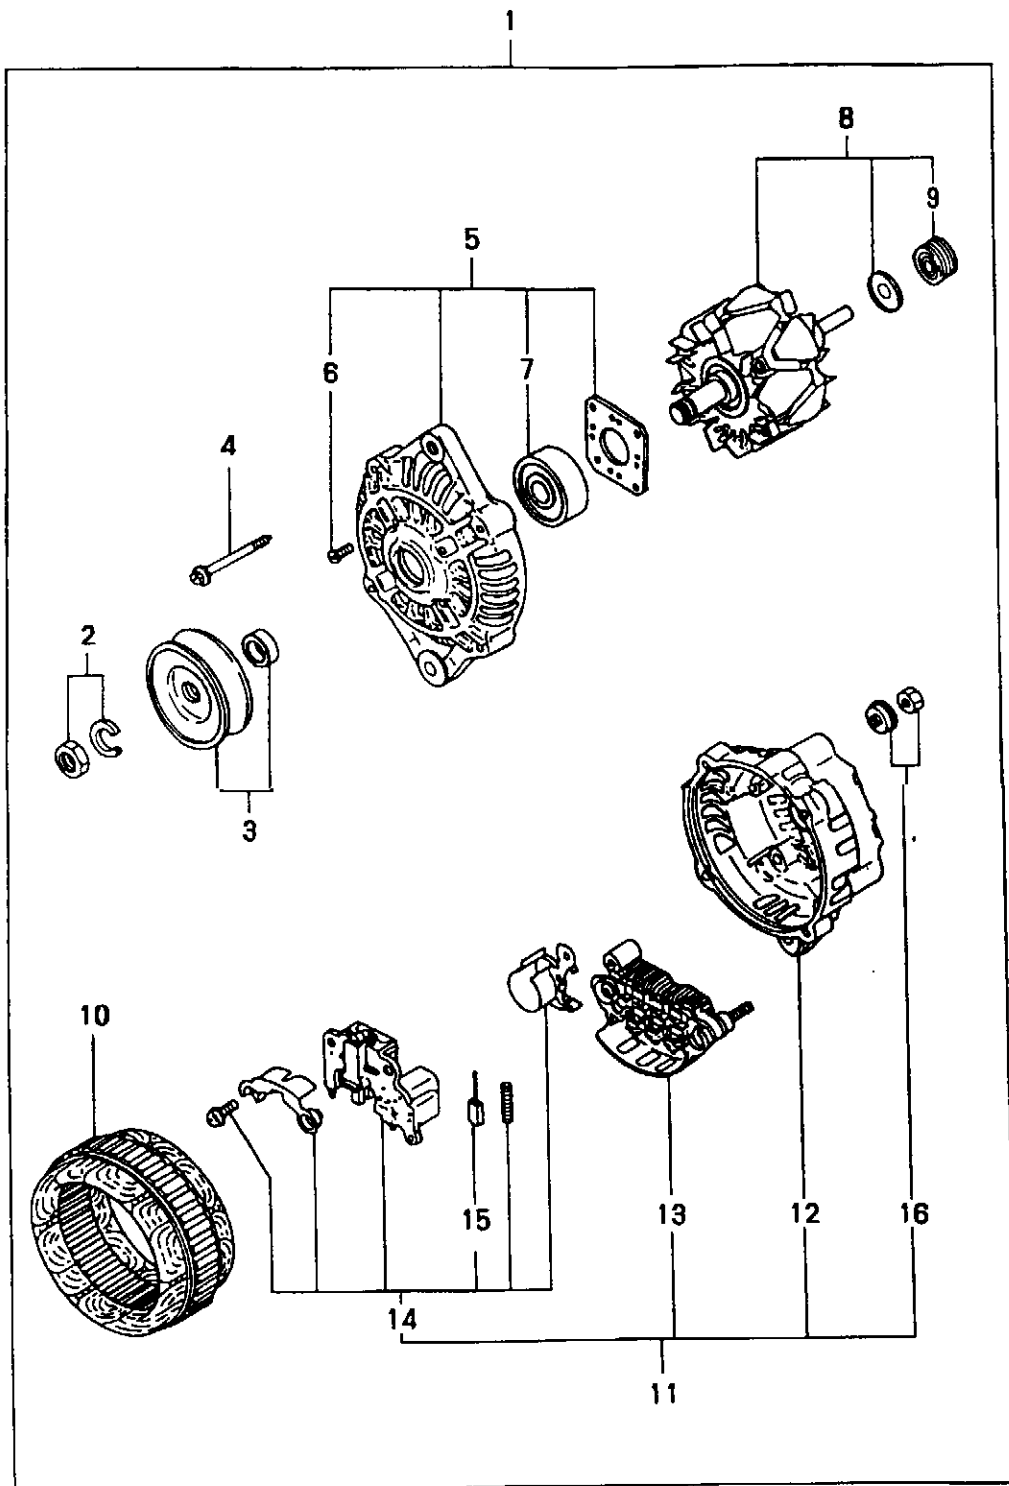

ALTERNATOR

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Alternator	184022	1
2	Nut Set	184023	1
3	Pulley Assembly	184024	1
4	Screw Set	184025	1
5	Cover Assembly F.	184026	1
6	Screw Set	184027	1
7	Bearing, F.	184028	1
8	Rotor Assembly	184029	1
9	Bearing, RR.	184030	1
10	Stator Assembly	184031	1
11	Cover Assembly R.	184032	1
12	Cover Assembly	184033	1
13	Rectifier Assembly	184034	1
14	Regulator Assembly	184035	1
15	Brush	184036	1
16	Nut Set	184037	1


DISTRIBUTOR

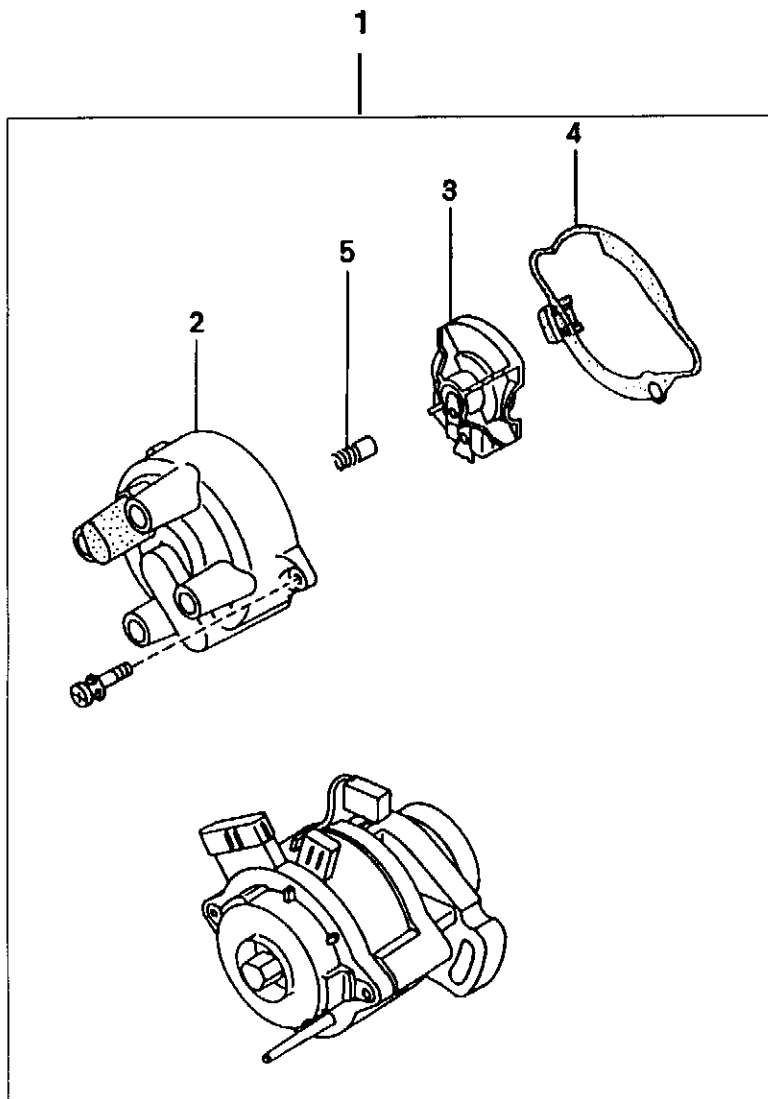

DISTRIBUTOR

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>Q'TY</i>
1	Distributor	184000	1
2	Cap Assembly	184038	1
3	Rotor Assembly	184039	1
4	Packing	184040	1
5	Point Assembly-Carbon	184041	1


ENGINE ELECTRICAL SYSTEM

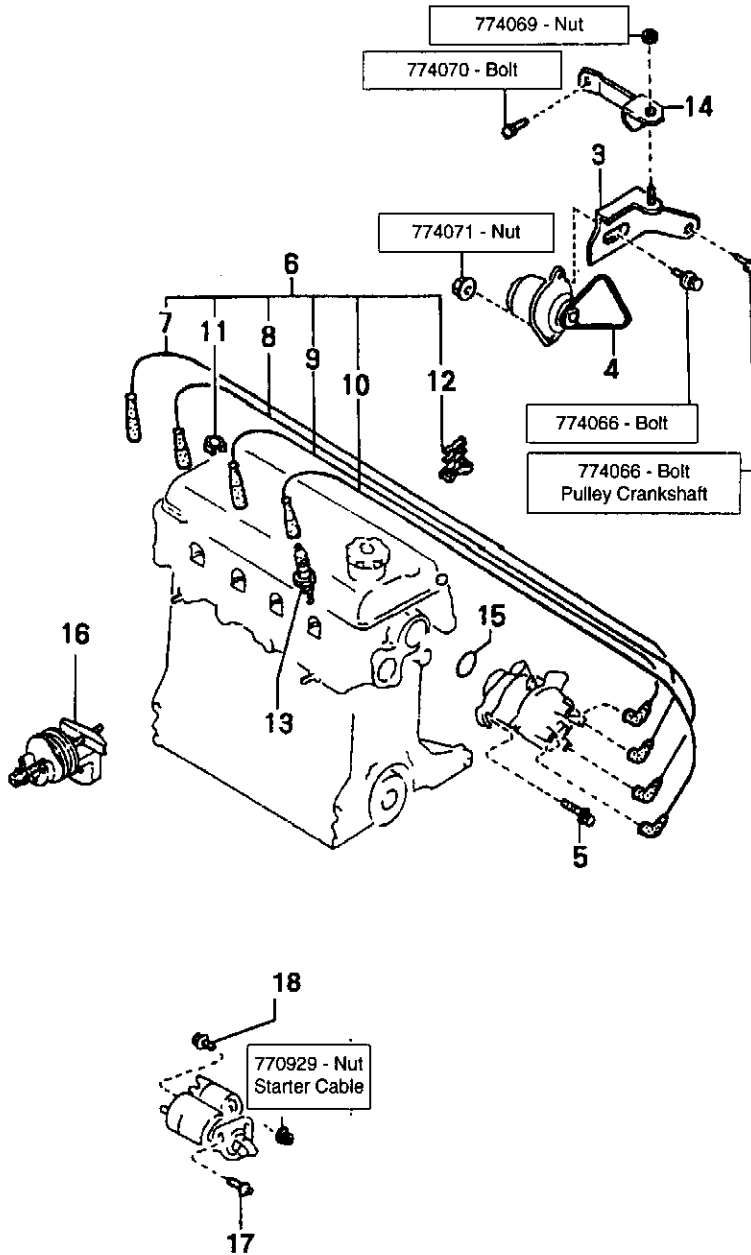

ENGINE ELECTRICAL SYSTEM

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>Q'TY</i>
1	Bracket. Assembly-Starter	183037	1
4	Belt-V.Rubber	184044	1
5	Bolt-Distributor	184045	2
6	Cord Assembly-Ht.	184046	1
7	Cord-Ht.,No.1	184047	1
8	Cord-Ht.,No.2	184048	1
9	Cord-Ht.,No.3	184049	1
10	Cord-Ht.,No.4	184050	1
11	Clip	184051	1
12	Supporter	184052	1
13	Spark Plug	184002	4
14	Pipe Guide	184053	1
15	Ring-O	184054	1
16	Heater Assembly-Block	184055	1
17	Bolt-B Side Starter	180410	1
18	Bolt-F Side Starter	180411	1




SWITCHES & RELAYS (ENGINE)

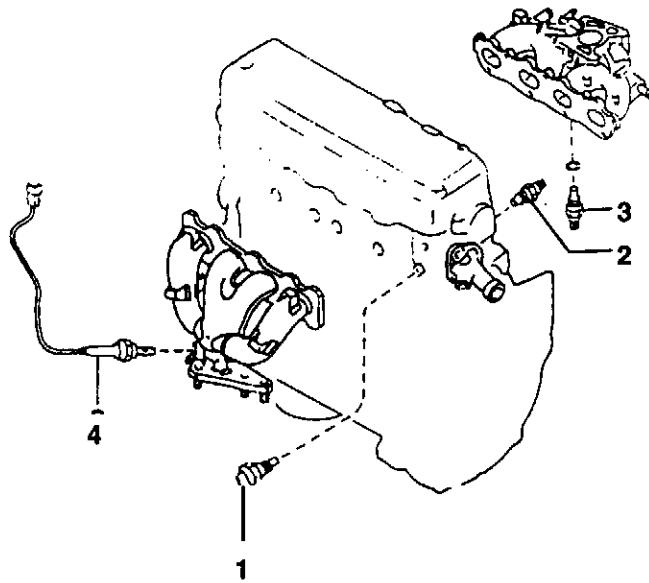

SWITCHES & RELAYS (ENGINE)

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Sender-Water Temperature	181734	1
2	Sender-Oil Pressure, SW	184056	1
3	Senensor-W.Temperature	184057	1
4	Sensor-Oxygen	184058	1


TORQUE CONVERTER, OIL PUMP & RINGS

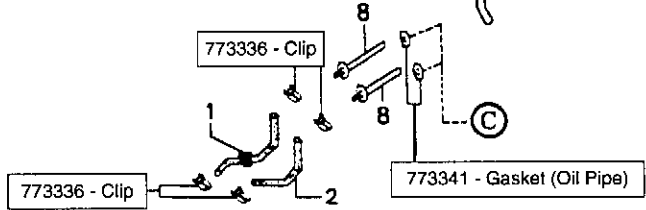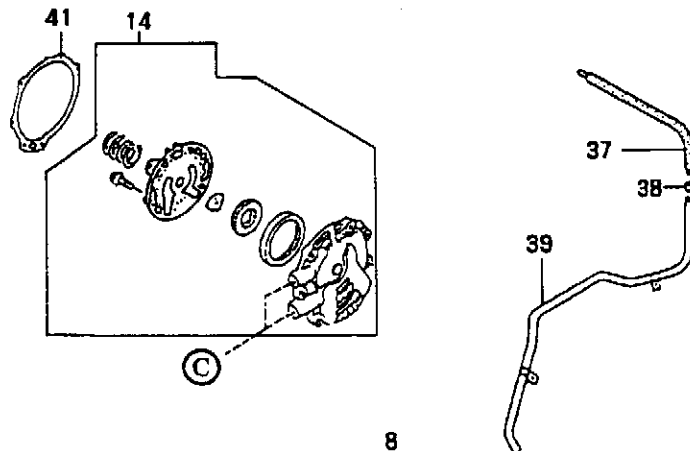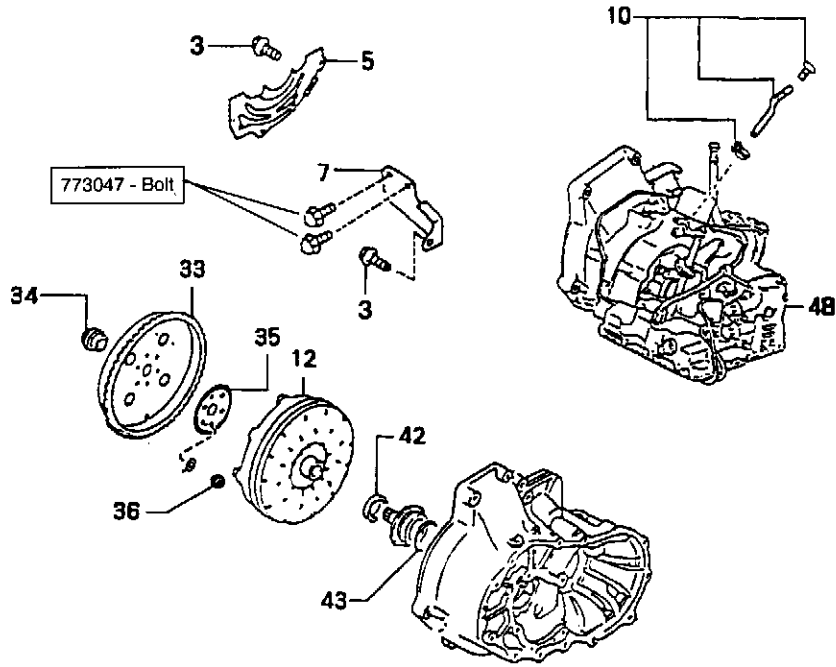

TORQUE CONVERTER, OIL PUMP & RINGS

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Hose Assembly-Oil	193045	1
2	Hose Assembly-Oil	193046	1
3	Bolt	153699	1
5	Cover Under	193048	1
7	Plate Gusset-Front	190451	1
8	Pipe Assembly-Oil	193050	2
10	Breather Assembly	193052	1
12	Torque Converter	194001	1
14	Oil Pump	194002	1
33	Drive Plate Assembly	194003	1
34	Adaptor	194004	1
35	Backing Plate	194005	1
36	Nut	194006	6
37	Hose	193344	1
38	Insert	193343	1
39	Pipe Assembly-Vacuum	193126	1
41	Gasket-Oil Pump	194007	1
42	Oil Seal	194008	1
43	O-Ring	194009	1
48	Transmission-Complete	193057	1


TRANSMISSION CASE & MAIN CONTROL SYSTEM

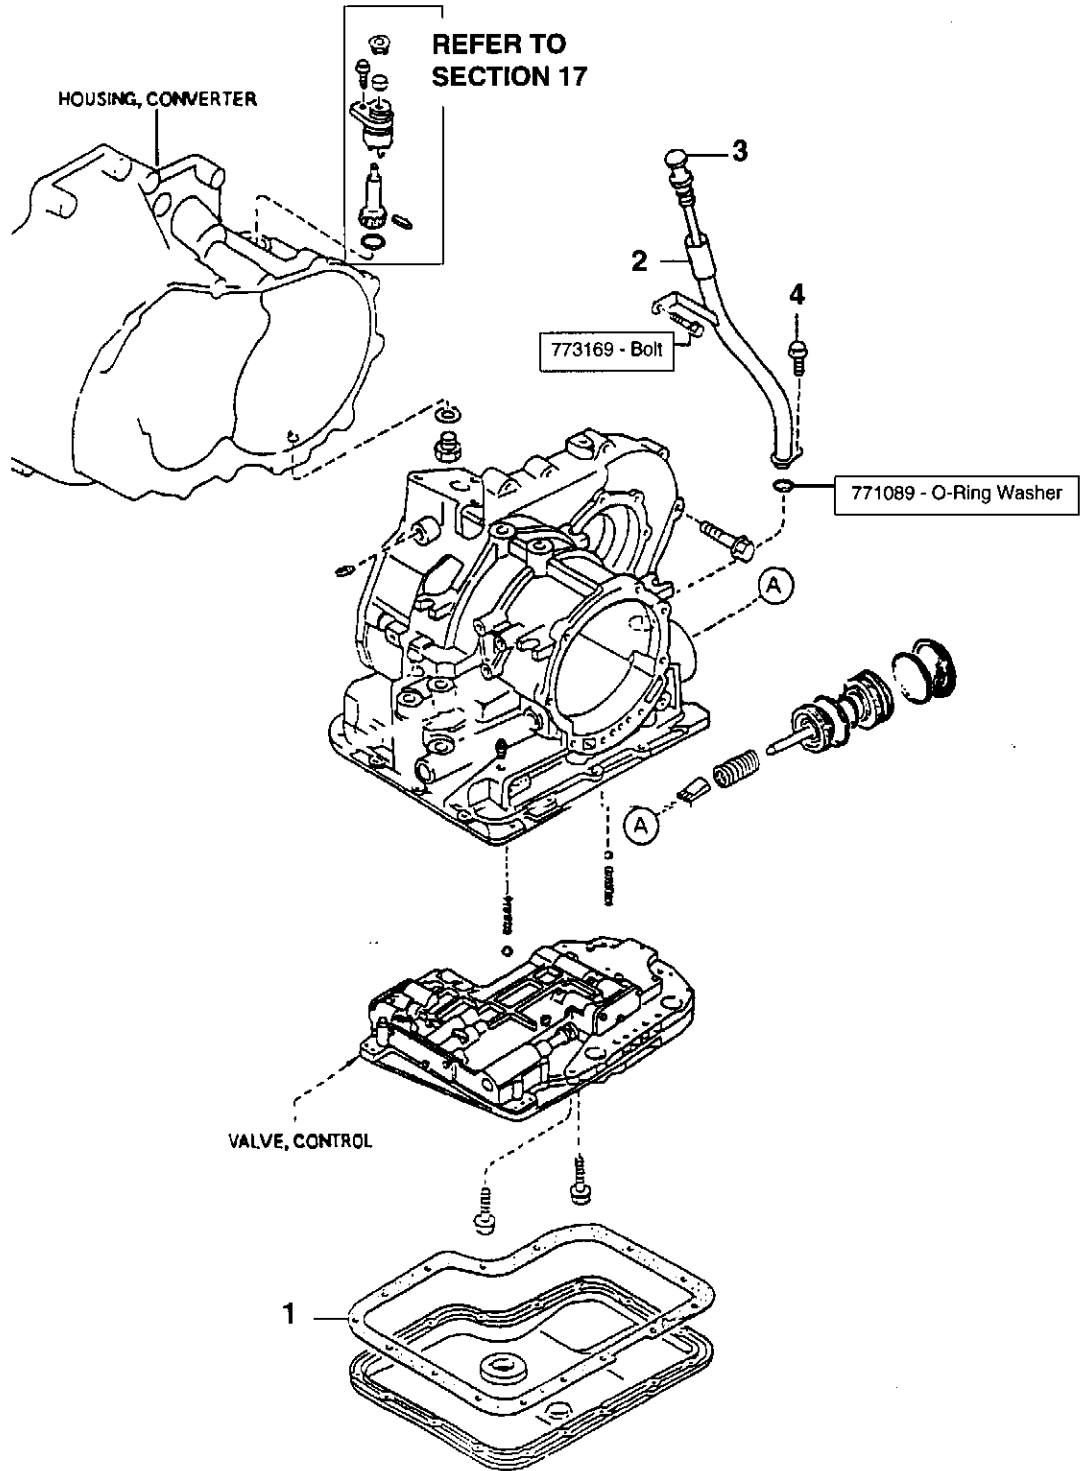

TRANSMISSION CASE & MAIN CONTROL SYSTEM


<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>Q'TY</i>
1	Gasket-Oil Pan	194000	1
2	Tube Assembly-Oil	193055	1
3	Gage-Oil Level	193056	1
4	Bolt	150204	1

REAR SUSPENSION

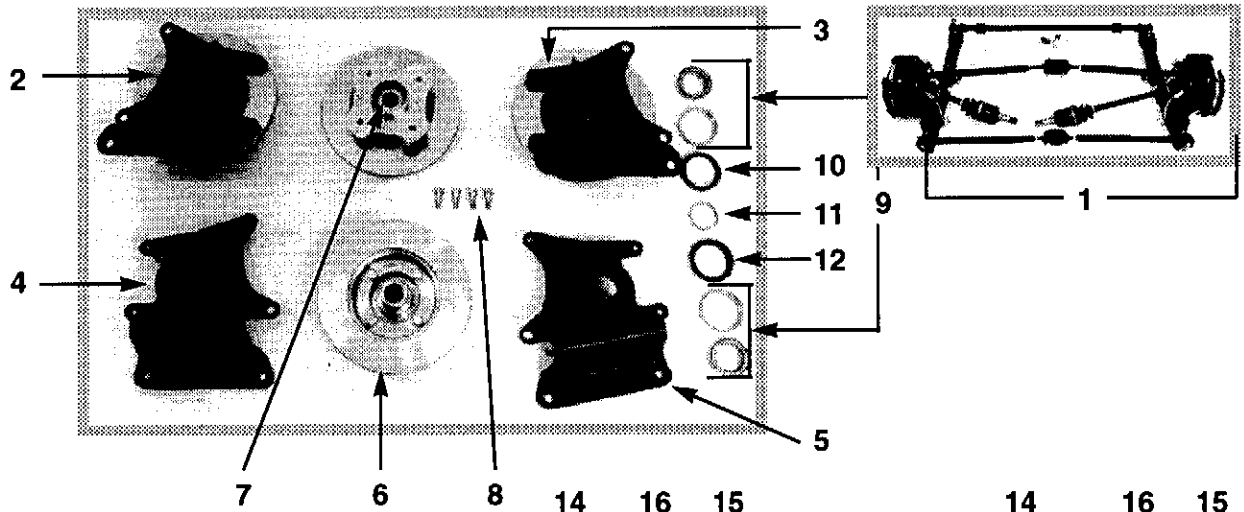



771862 - 1/2 Jam Nut
 772215 - 3/8 x 2-1/2 Bolt
 770223 - 3/8 Stover Locknut

771862 - 1/2 Jam Nut
 772215 - 3/8 x 2-1/2 Bolt
 770223 - 3/8 Stover Locknut

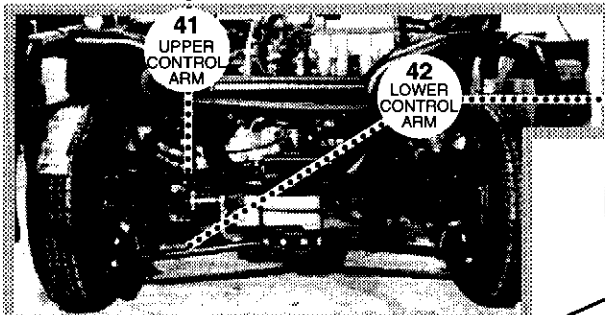

41
 UPPER
 CONTROL
 ARM



42
 LOWER
 CONTROL
 ARM

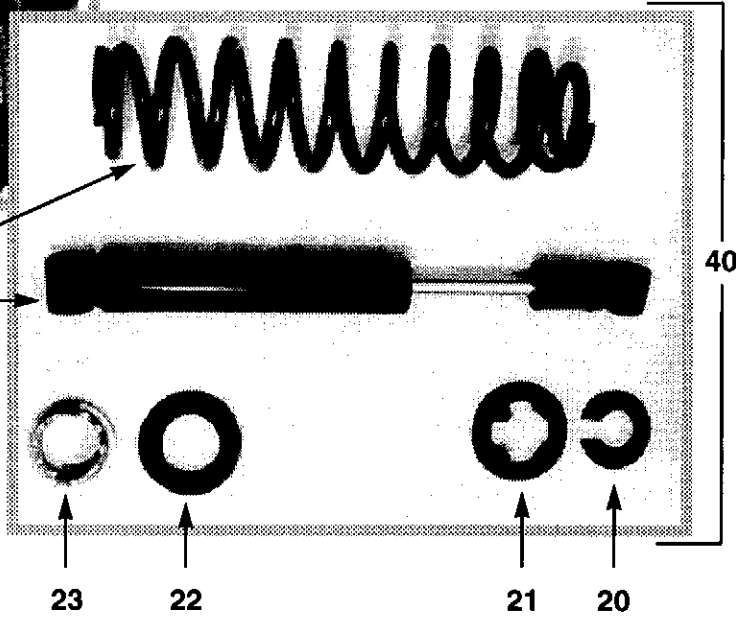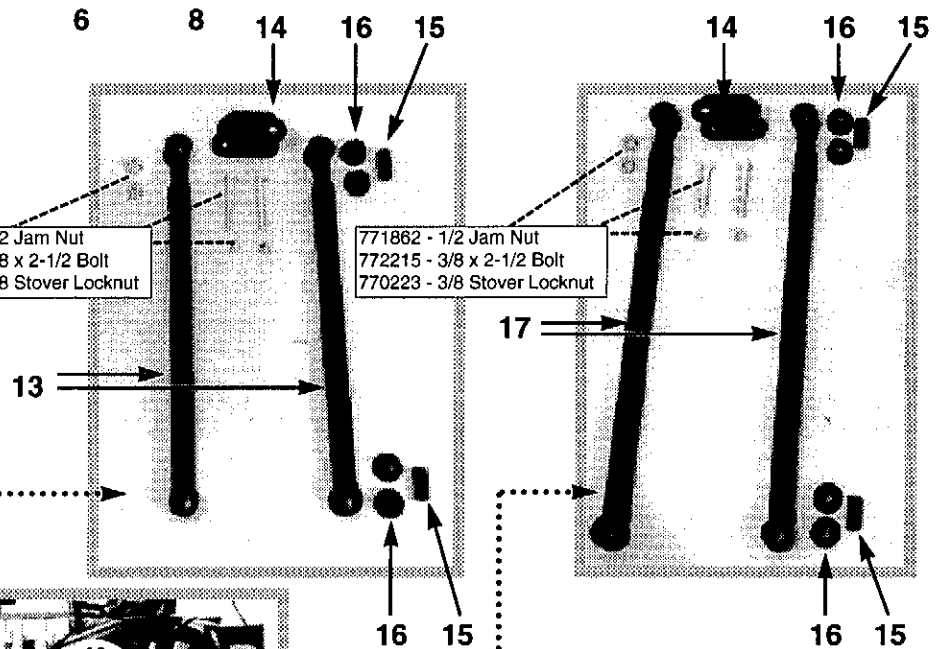

REAR SUSPENSION

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Rear Suspension Assembly	289001	1
2	Hub-LH Rear Assembly	289005	1
3	Hub-RH Rear Assembly	289004	1
4	LH Wheel Mount	283500	1
5	RH Wheel Mount	283499	1
6	Plate-Disc	430756	2
7	Hub-Drive Axle	280753	2
8	Bolt-Brake Disc	430757	8
9	Bearing-Drive Axle	280752	4
10	Seal-Oil Outer	280755	2
11	Seal-Oil Inner	280754	2
12	Spacer-Bearing	280788	2
13	Lower Control Arm	284005	2
14	Centre Control Arm Mount	282784	2
15	Inner Control Arm	282802	8
16	Rubber Bushing, Control Arm	282709	8
17	Upper Control Arm	284006	2
18	Coilover Spring	282274	2
19	Shock Absorber	282177	2
20	Retainer	282179	2
21	Upper Coil Spring Retainer	283258	2
22	Coil Spring Retainer	282661	2
23	Cam Sleeve	282178	2


REAR SUSPENSION

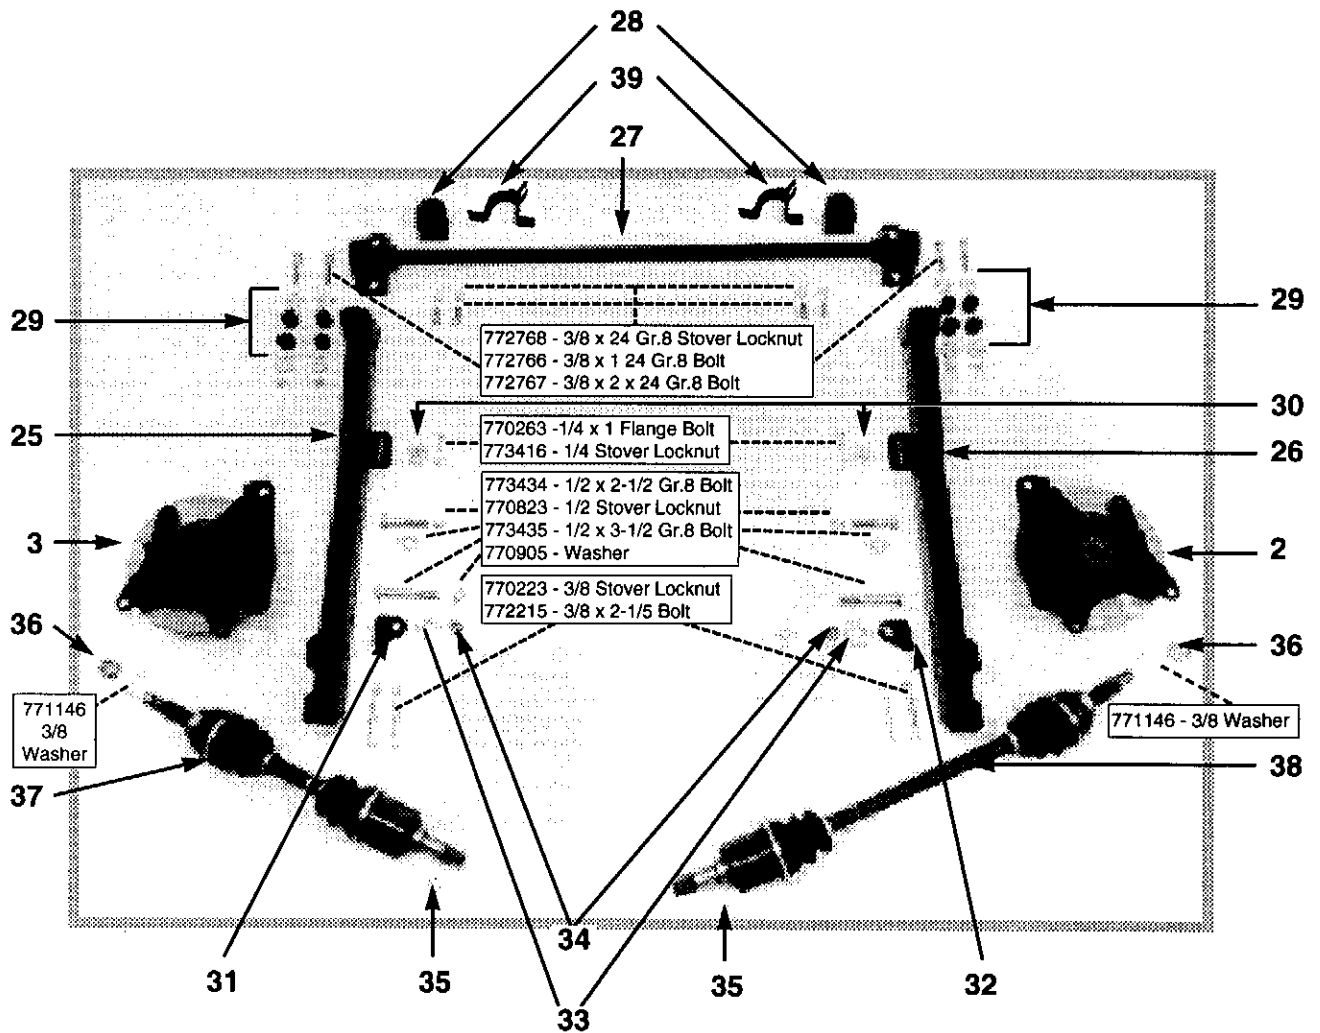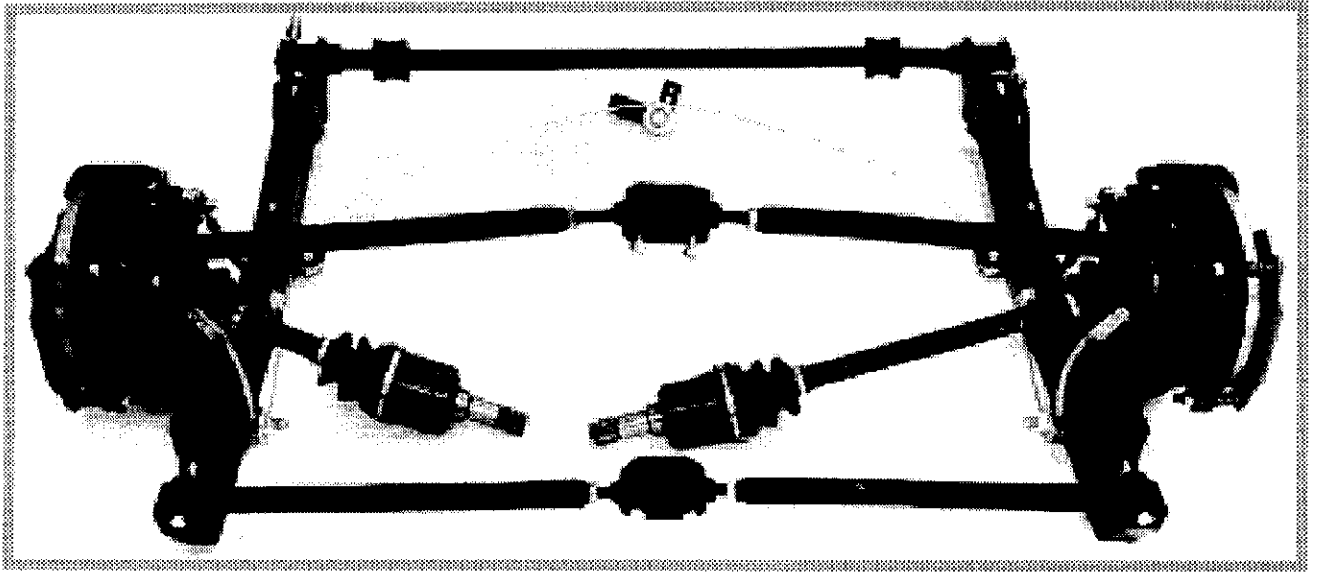

REAR SUSPENSION

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>Q'TY</i>
25	LH Suspension Arm	283882	1
26	RH Suspension Arm	283883	1
27	Torsion Bar	283599	1
28	Rubber Torsion Bushing	282729	2
29	Rubber Bushing Kit	282728	4
30	Pulley	583873	2
31	LH Cable Bracket	442887	1
32	RH Cable Bracket	442888	1
33	Pulley-Emergency Brake	442868	2
34	Bushing-Pulley	442867	2
35	Clip	250747	2
36	Locknut with Washer	280751	2
37	LH Drive Shaft	250745	1
38	RH Drive Shaft	250744	1
39	Clamp-Torsion Bar	283683	2
40	Rear Shock Assembly	289000	2
41	Upper Control Arm Assembly	289002	2
42	Lower Control Arm Assembly	289003	2





DRIVE SHAFTS

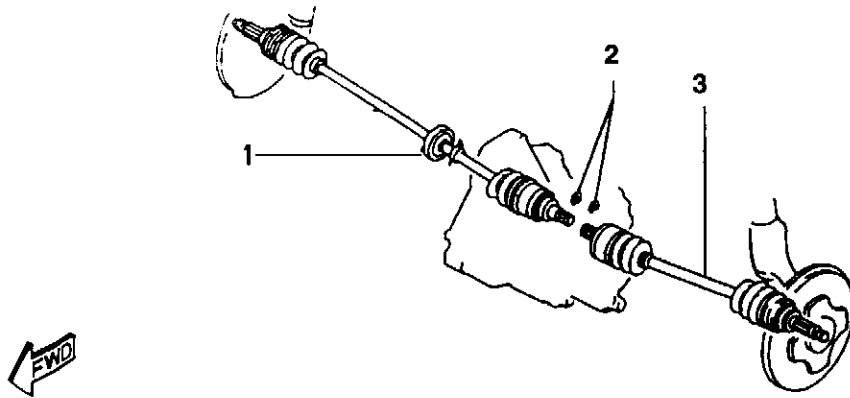

DRIVE SHAFTS

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Shaft RH Drive	250744	1
2	Clip	250747	2
3	Shaft LH Drive	250745	1


STEERING

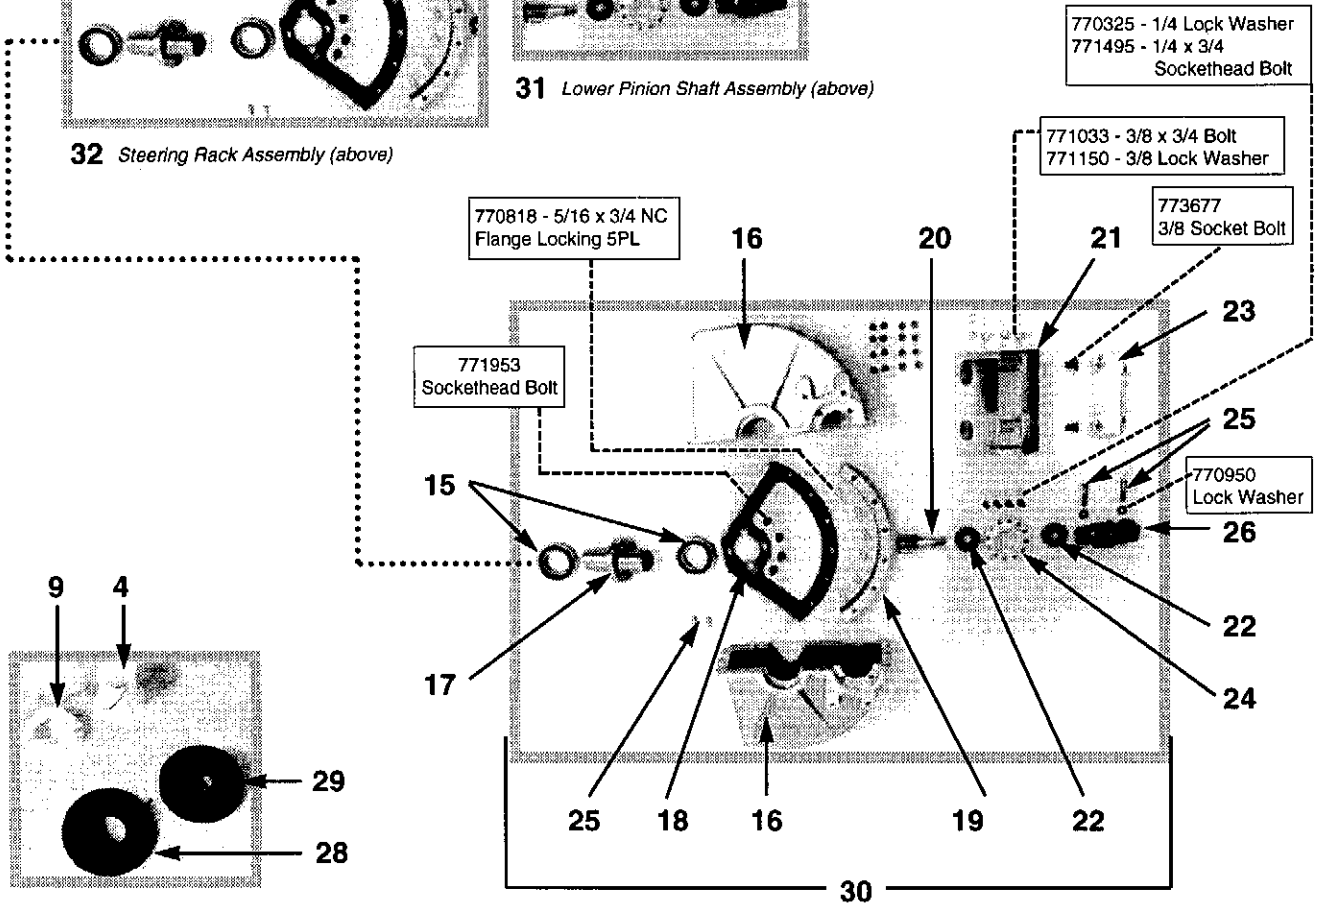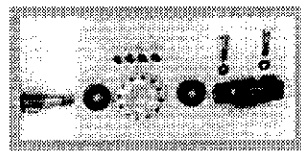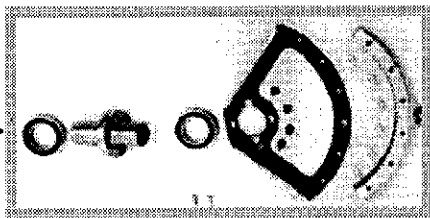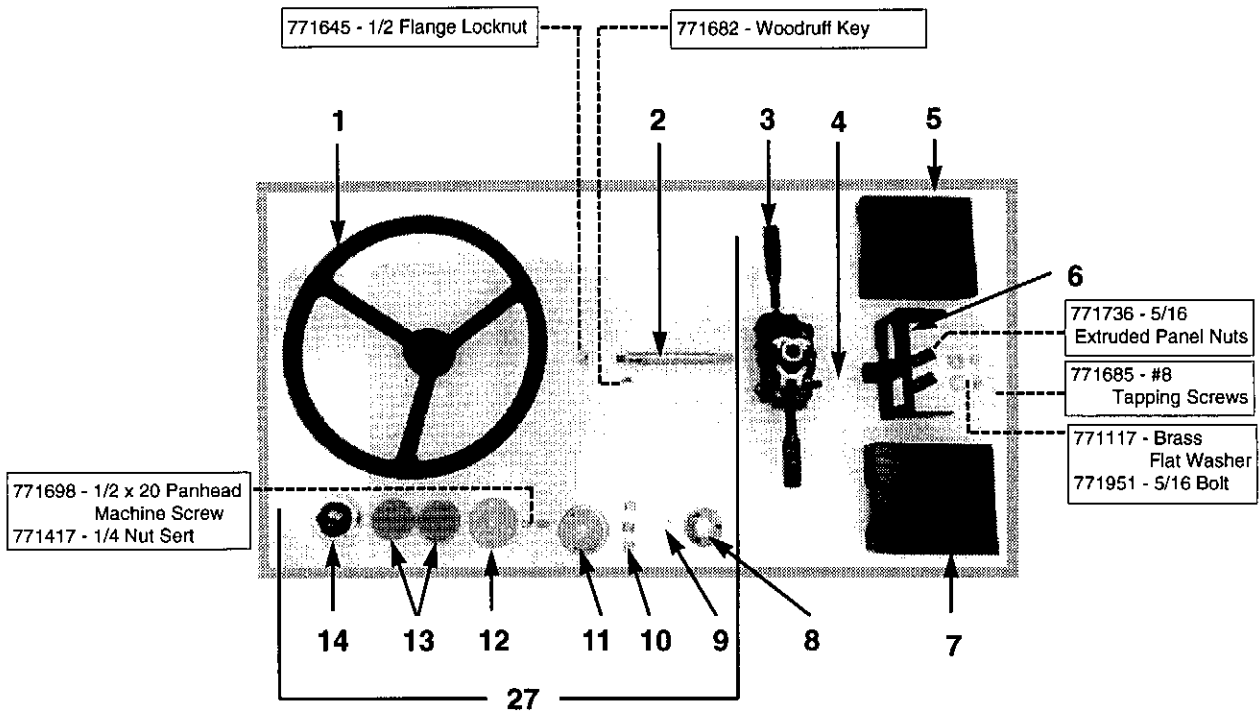

STEERING

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Steering Wheel	322702	1
2	Upper Steering Shaft	322654	1
3	Combination Switch	660991	1
4	Plastic Bushing-Steering	322770	1
5	Lower Steering Panel	322761	1
6	Steering Support Weldment	322764	1
7	Upper Steering Cover	322995	1
8	Washerplate Assembly	323532	1
9	Upper Steering Bushing	323602	1
10	Compression Spring	323513	3
11	Upper Steering Wheel Plate	323497	
12	Horn Cup Plate	322526	1
13	Puck-Horn Cup	324000	2
14	Horn Button Assembly	329004	1
15	Bearing (Gearbox)	321843	2
16	Gearbox Case L & R	321106	1
17	Hub-Steering	323561	1
18	Plate Mount Steering Assembly	321875	1
19	Rack-Steering	322018	1
20	Pinion Gear-Steering	321105	1
21	Steering Column Base	321179	1
22	Bearing	321157	2
23	Bracket-Steering Box	343879	1
24	Eccentric Housing	322620	1
25	Upper Steering Joint Bolt	320988	2
26	Joint-Steering	320990	1
27	Steering Wheel Assembly	329003	1
28	Groment-3/4 ID	191796	1
29	Groment-1/2 ID	191797	1
30	Gear Box Assembly	329000	1
31	Lower Pinion Shaft Assembly	329002	1
32	Steering Rack Assembly	329001	1



STEERING

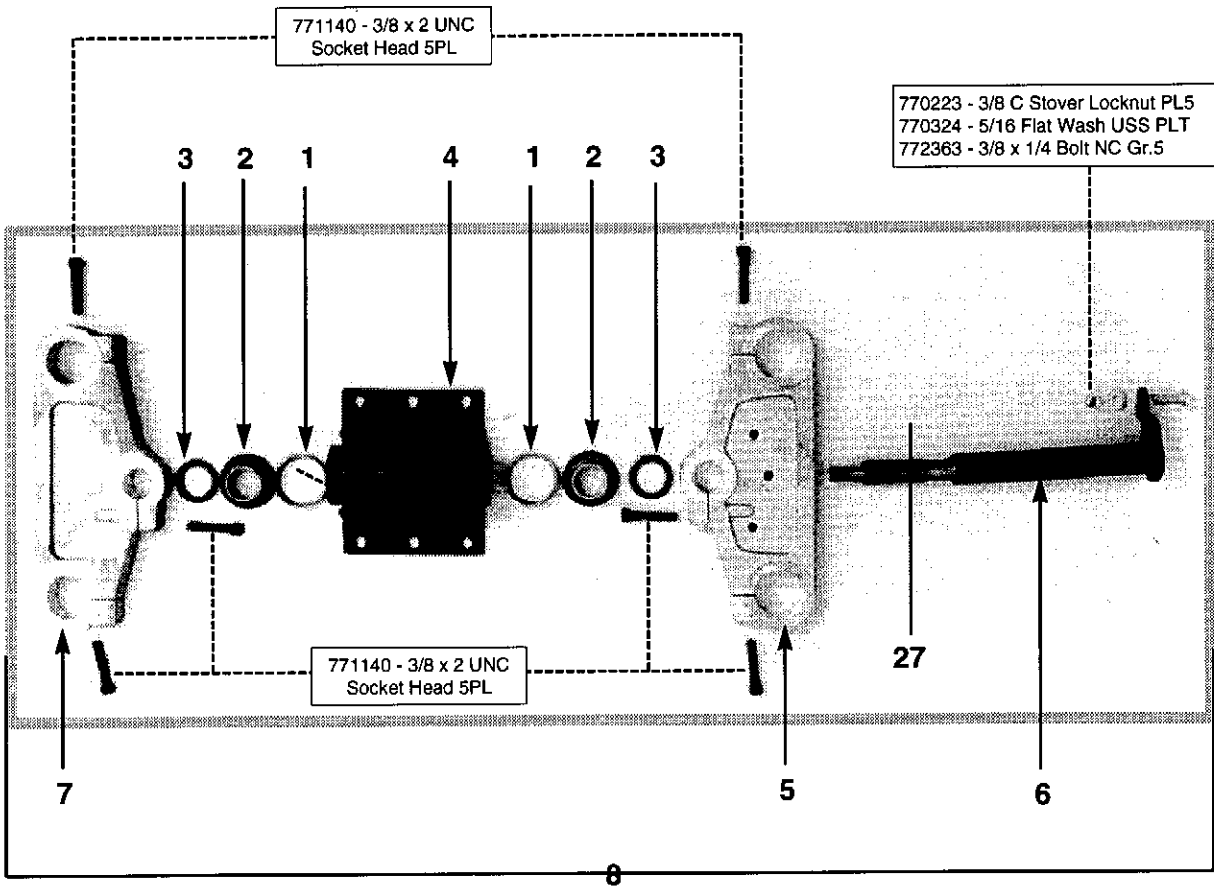

STEERING

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>Q'TY</i>
1	Tapered Cut	320056	2
2	Tapered Seal Cone, Bearing	320057	2
3	Washer-Machinery Bushing	321139	2
4	Trunion Tube	349019	1
5	Fork Support-Lower	342246	1
6	Steering Shaft	323816	1
7	Fork Support-Upper	342247	1
8	Fork Support Assembly	349001	1



FRONT SUSPENSION

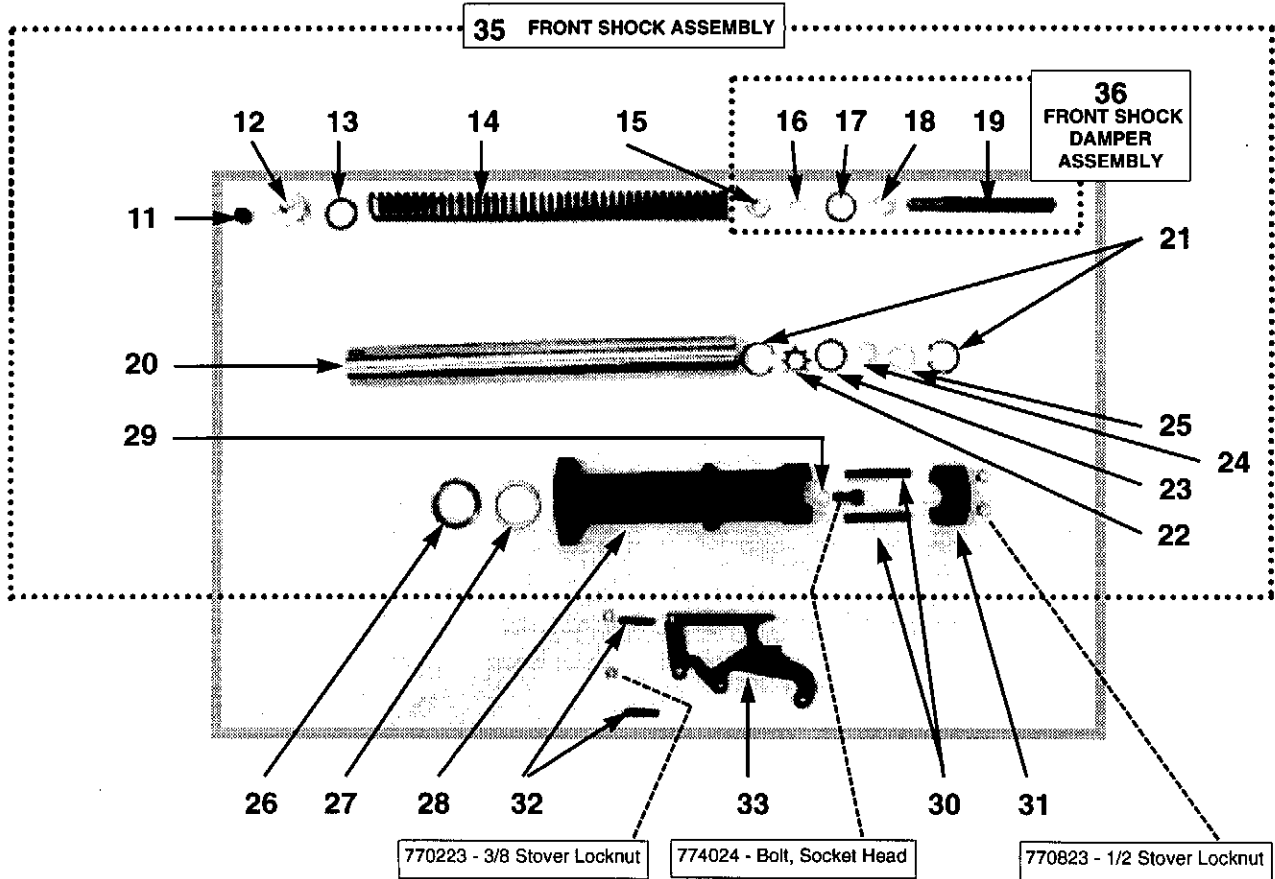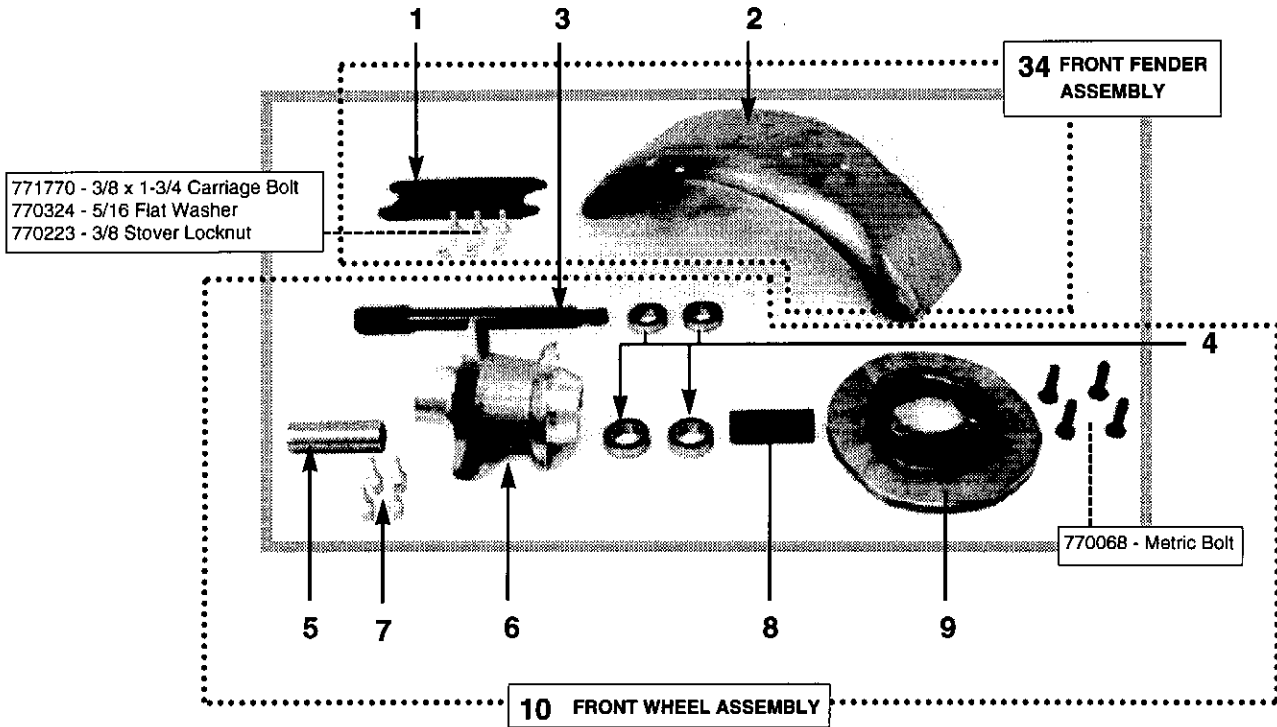

FRONT SUSPENSION

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Front Fender Support	531273	1
2	Front Fender	534000	1
3	Front Axle	342254	1
4	Bearing	343224	4
5	Axle Sleeve, Inner	343221	1
6	Front Hub	343219	1
7	Bolt-Wheel	371079	4
8	Axle Sleeve, Outer	342253	1
9	Plate-Disc	430756	1
10	Front Wheel Assembly	349003	1
11	Filler Plug	343668	1
12	Cap, Strut	343598	1
13	O-Ring-Strut Cap	341488	1
14	Compression Spring	344012	1
15	Hex Nut Damper Tube	344009	1
16	Washer Front Shock Damper	344005	1
17	Piston Uni-Ring	343594	1
18	Front Shock Damper Piston	344004	1
19	Tube, Shock Damper	344011	1
20	Strut, Front Shock	344001	1
21	Snap Ring	344017	2
22	Star Washer	343630	1
23	O-Ring 220	344008	1
24	M2OL Washer	344007	1
25	Washer-Damper	343631	1
26	Rod Wiper	343595	1
27	Loaded U Cup	343593	1
28	Reservoir, Front Shock	342251	1
29	1/2 inch Copper Washer	344006	1
30	Stud, Axle Support,, Fork	341120	2
31	Support, Front Axle	344000	1
32	Stud, Caliper Mount	341116	2
33	Mount-Brake Caliper	432803	1
34	Front Fender Assembly	539000	1
35	Front Shock Assembly	349002	2
36	Front Shock Damper Assembly	349004	2


TIRES & JACK

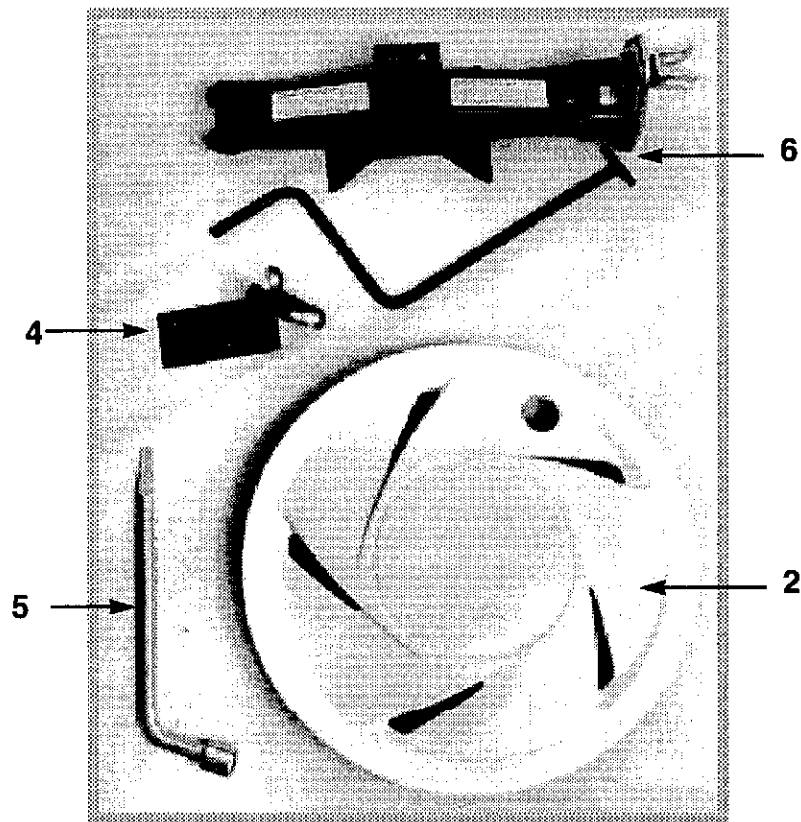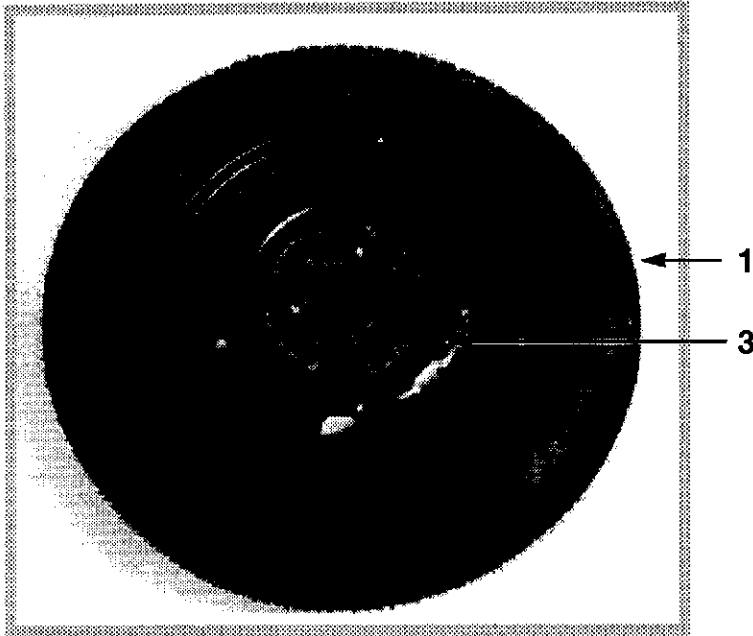

TIRES & JACK

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Tire	370059	3
2	Hub Cap (White Turbine)	371420	2
3	Wheel Rim	372619	3
4	Spare Tire Mount	374003	1
5	Lug Wrench	372735	1
6	Scissor Jack & Handle	370063	1

ENGINE & TRANSMISSION MOUNT

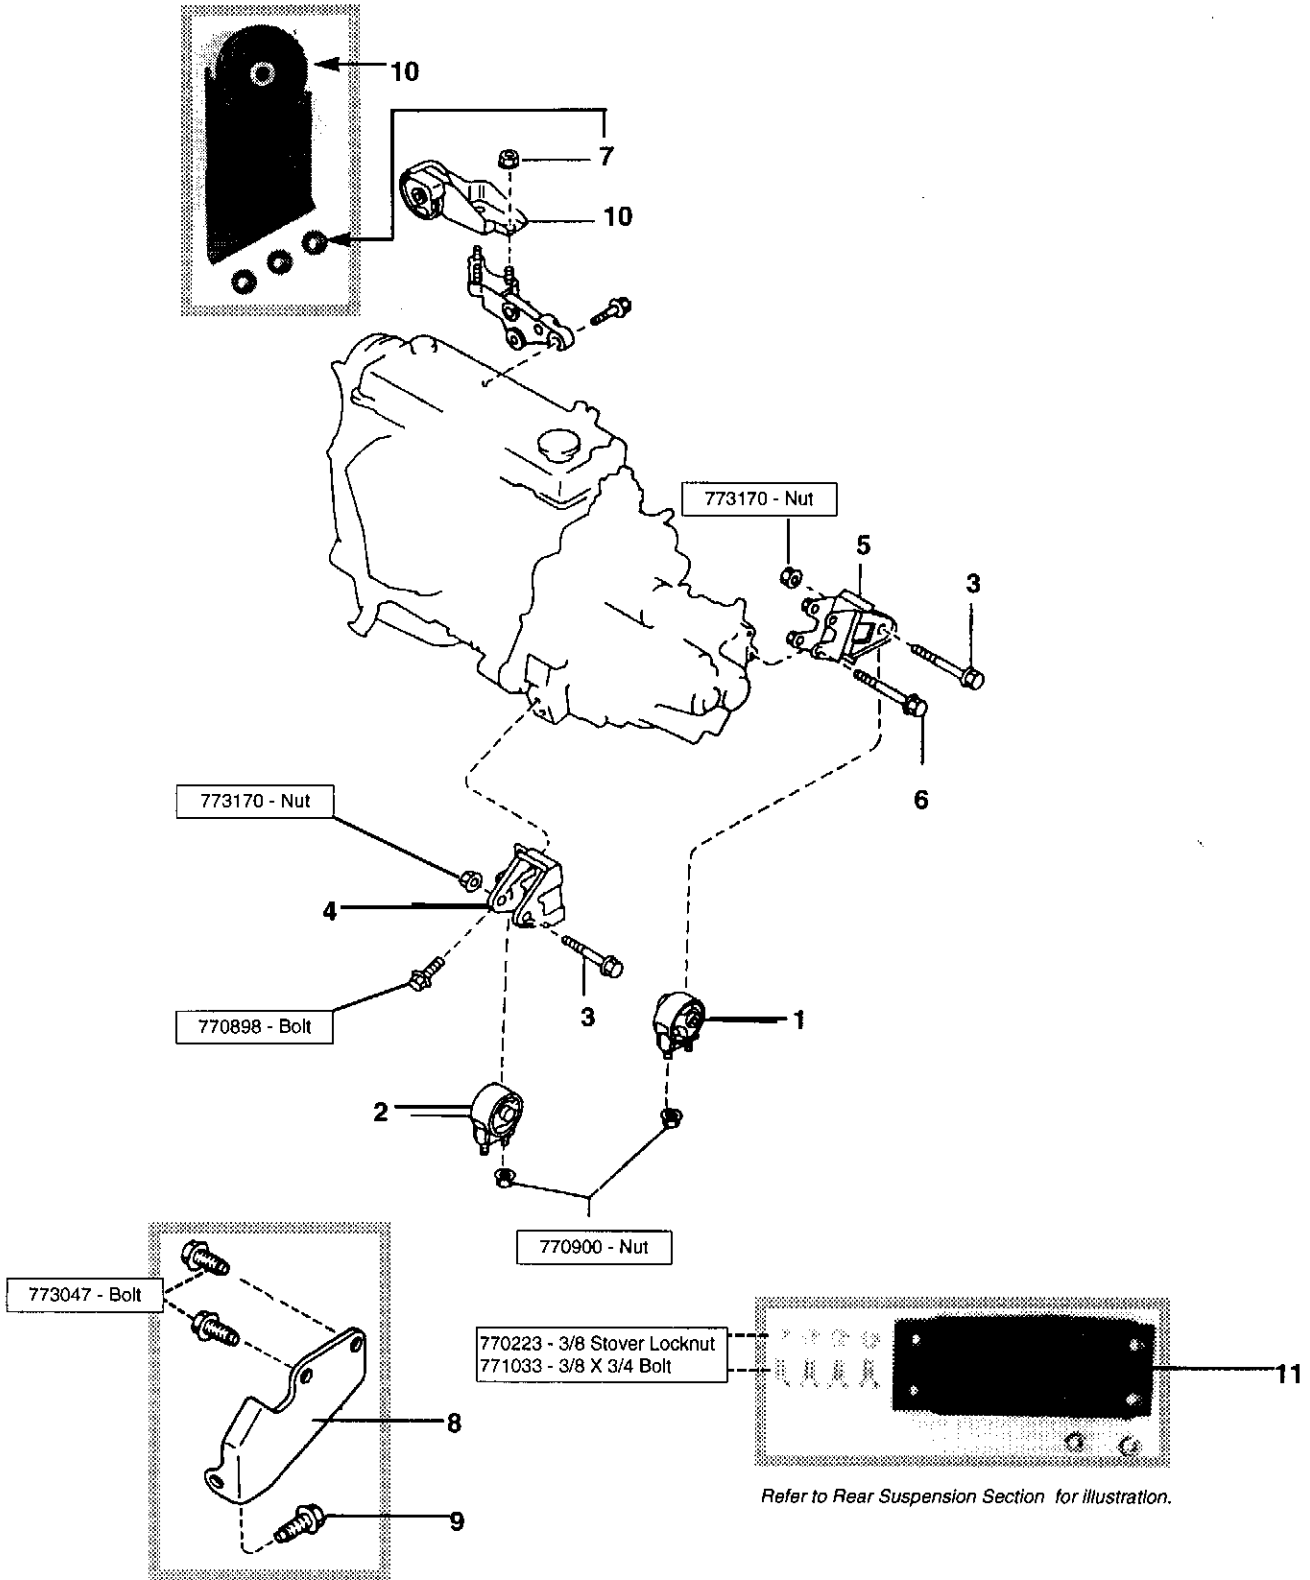



Refer to Engine Section for illustration.

Refer to Rear Suspension Section for illustration.

ENGINE & TRANSMISSION MOUNT

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>Q'TY</i>
1	Rubber Engine Mount #1	393085	1
2	Rubber Engine Mount #2	393086	1
3	Bolt-Rubber Engine Mounts	393087	2
4	Bracket Engine Mount #2	393081	1
5	Bracket Engine Mount #1	393080	1
6	Bolt-Engine Mount	393698	2
7	Nut-Engine Mount #3	393084	3
8	Plate Gusset-Front	190451	1
9	Bolt-Plate Gusset Front	153699	1
10	Upper Engine Mount	393771	1
11	Rear Engine Mount Bracket	394005	1


EXHAUST SYSTEM

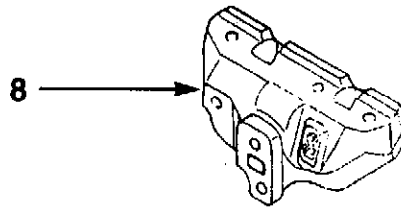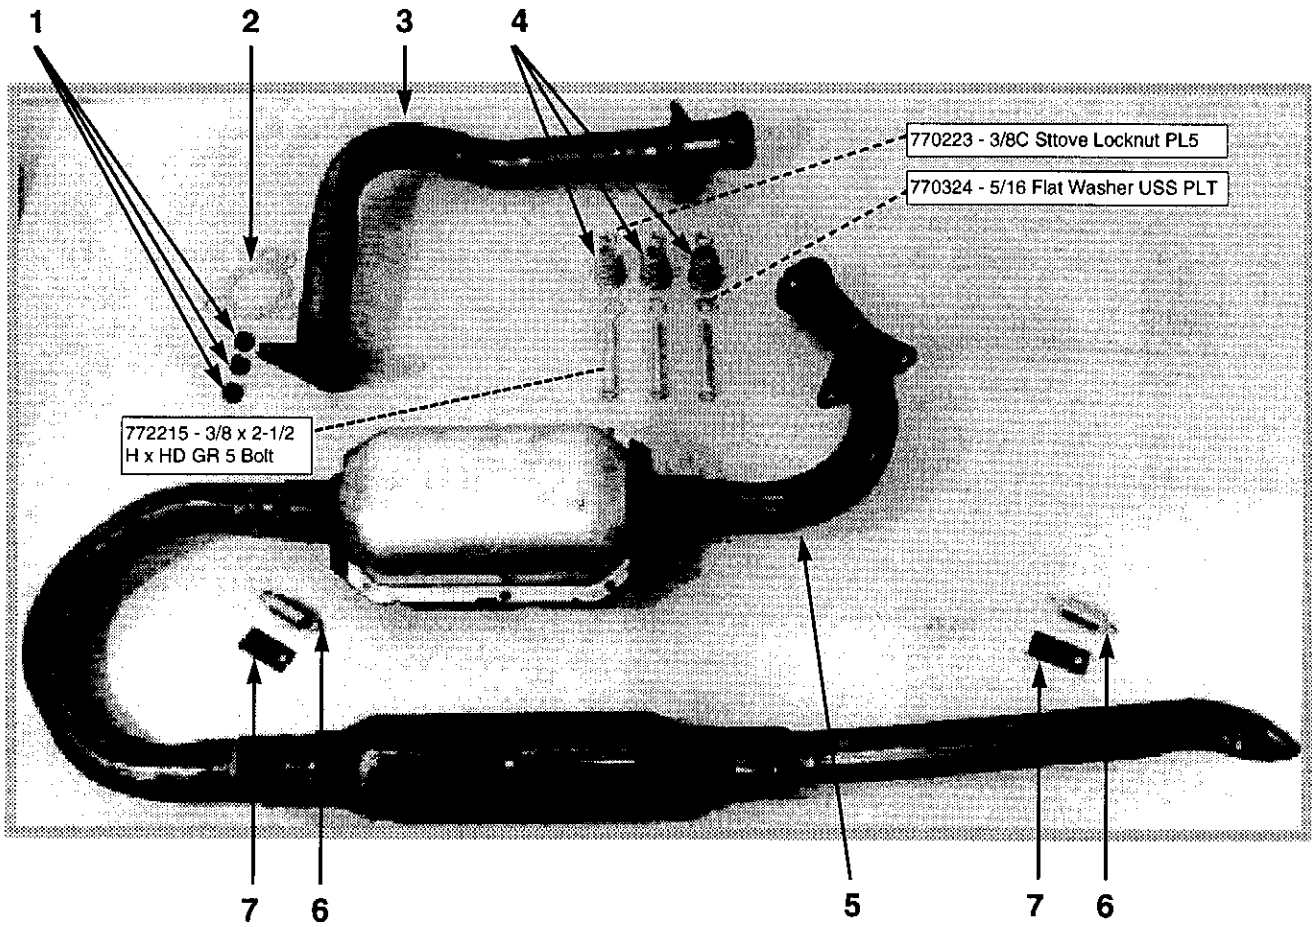

EXHAUST SYSTEM

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Nut-Exhaust	403362	3
2	Gasket Exhaust	403361	1
3	Down Pipe	404000	1
4	Spring-Exhaust	403360	3
5	Exhaust-Main System	404002	1
6	Hanger-Exhaust System	404001	2
7	Tab-Muffler Hanger	404004	2
8	Insulator Assembly	403149	1


ACCELERATOR

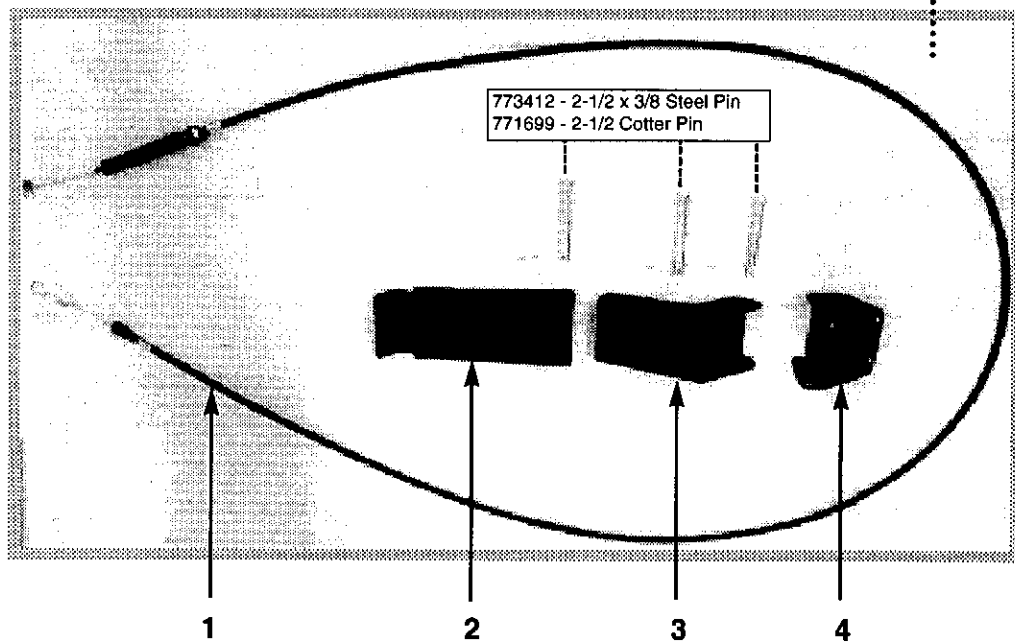

ACCELERATOR

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Throttle Cable	413538	1
2	Pedal-Accelerator	413575	1
3	Arm-Accelerator	413576	1
4	Mount-Accelerator	413577	1



FUEL TANK & LINE

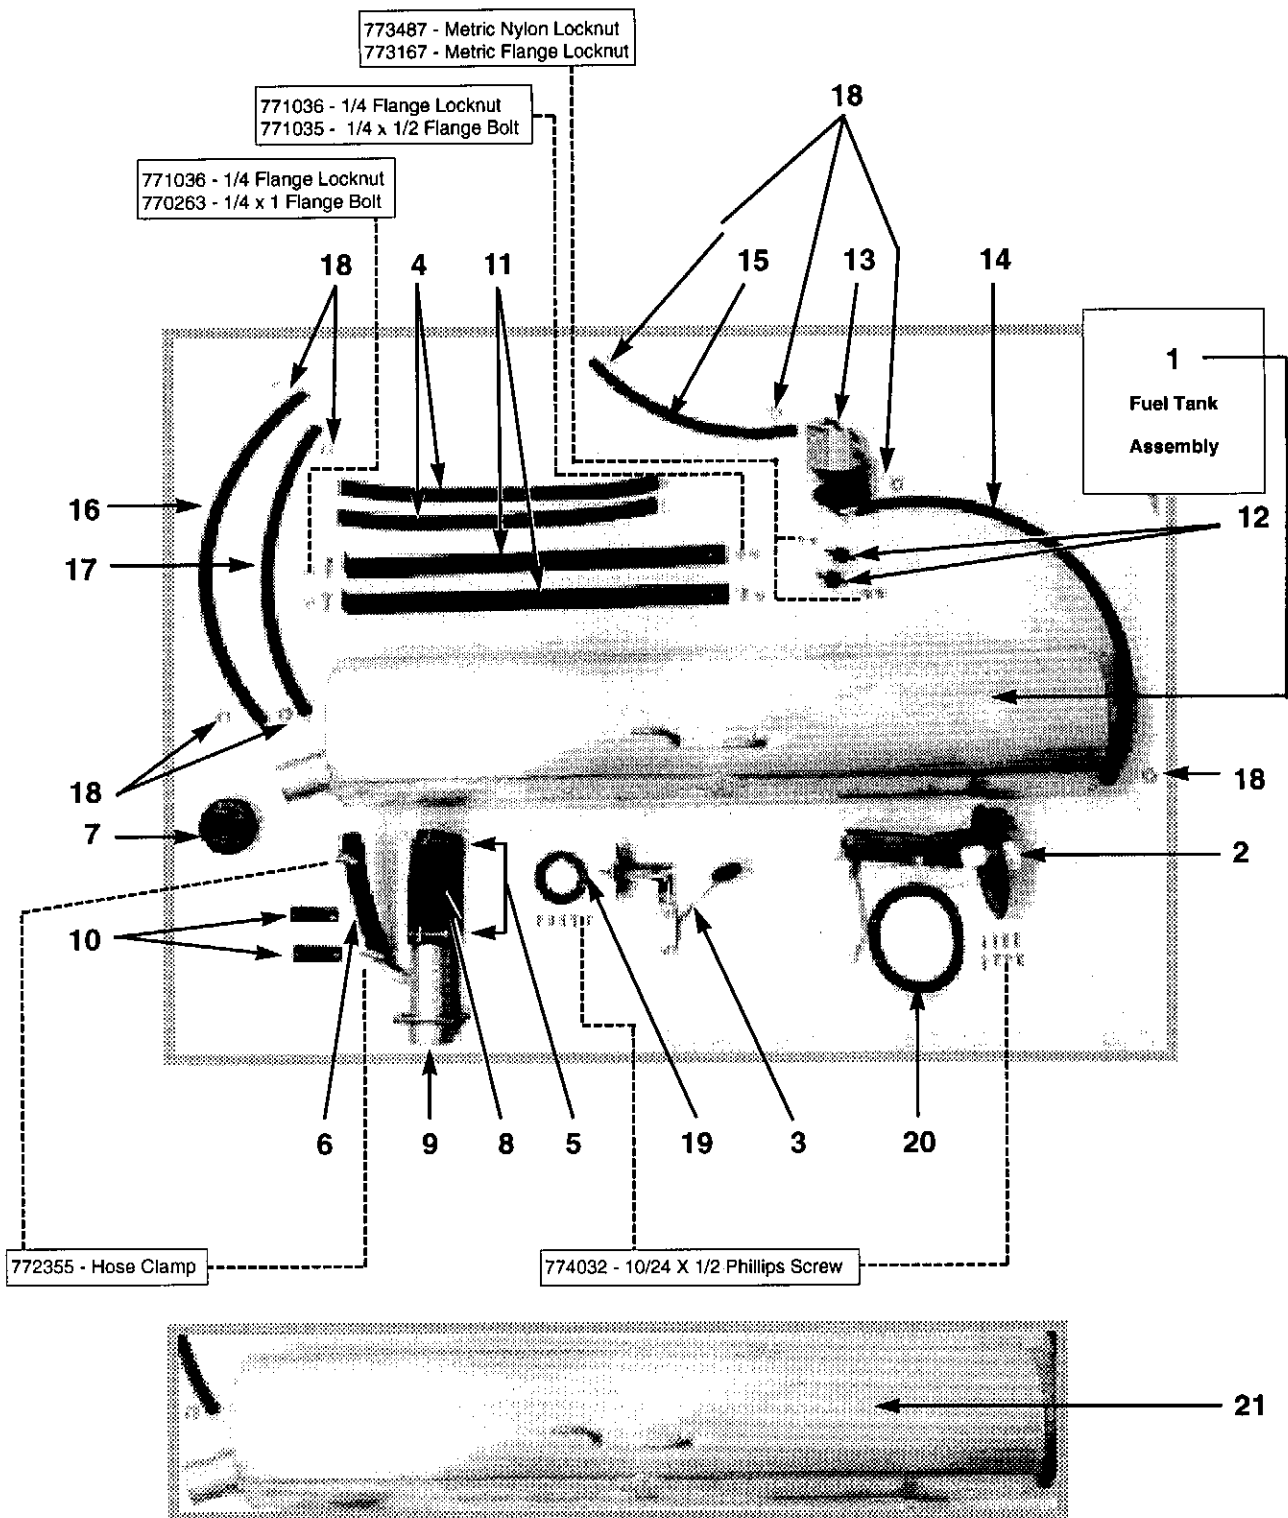

FUEL TANK & LINE

REF.	PART NAME	PART NO.	QTY
1	Fuel Tank Assembly	429000	1
2	Fuel Pump	423090	1
3	Fuel Level Sender	424004	1
4	Insulator Strap-17 inch	684005	2
5	Clamp-Filler Hose	423695	2
6	Hose-Fuel Overflow	424007	1
7	Cap-Filler	423131	1
8	Hose Joint	423298	1
9	Spout-Fuel Filler	424001	1
10	Gas Spout Support	424002	2
11	Strap-Gas Tank	423717	2
12	Rubber-Mounting	133026	2
13	Fuel Filter Assembly	423016	1
14	Fuel Line Hose-24 inch	424005	1
15	Fuel Line Hose-12 inch	423826	1
16	Fuel Line Hose-20 inch	423827	1
17	Fuel Line-16 1/4 inch	421732	1
18	Hose Clip	133015	8
19	Gasket-Fuel Sender	421924	1
20	Gasket-Fuel Pump	420255	1
21	Fuel Tank	423620	1
	Locking Fuel Cap <i>(not Shown)</i>	423010	1


BRAKE SYSTEM

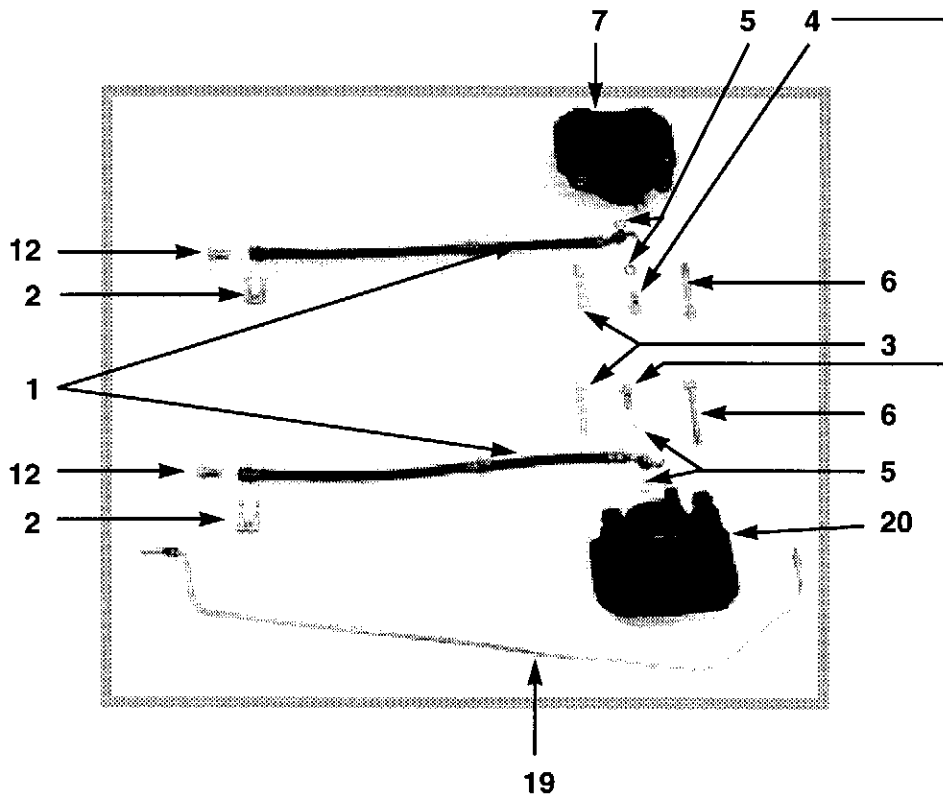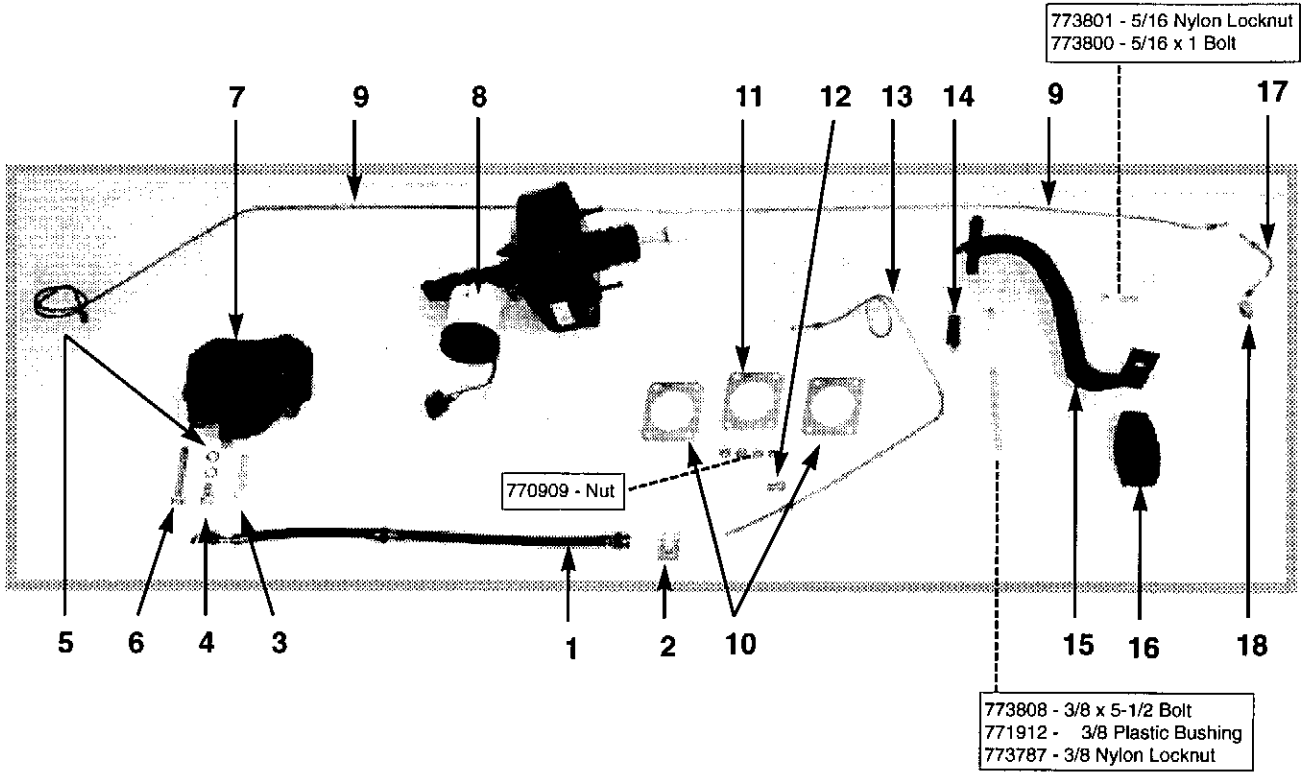

BRAKE SYSTEM

REF.	PART NAME	PART NO.	QTY
1	Hose-Flexible	430938	3
2	Clip-Flexible Hose	430936	3
3	Bolt-Caliper Brake	430760	3
4	Bolt-Connector	430937	3
5	Connector-Bolt Washer	430935	6
6	Bolt-Wheel Cylinder	430759	3
7	Caliper-R.H. Rear Brake	430761	2
8	Master Vacuum Assembly	431078	1
9	Main Brake Line	432130	1
10	Seal	433095	2
11	Spacer	433096	1
12	Adapter	432069	3
13	Front Brake Line-40"	432132	1
14	Momentary Switch	661021	1
15	Brake Arm	433802	1
16	Rubber Brake Pedal	432374	1
17	Right. Rear Brake Line-8"	432133	1
18	Tees (Hydraulic Brake)	431076	1
19	Rear Cross Brake Line 36"	432131	1
20	Caliper-LH Brake	430762	1
21	Vacuum Hose <i>(not illustrated)</i>	431733	1
22	Clip-Vacuum Hose <i>(not illustrated)</i>	770926	2


PARKING BRAKE

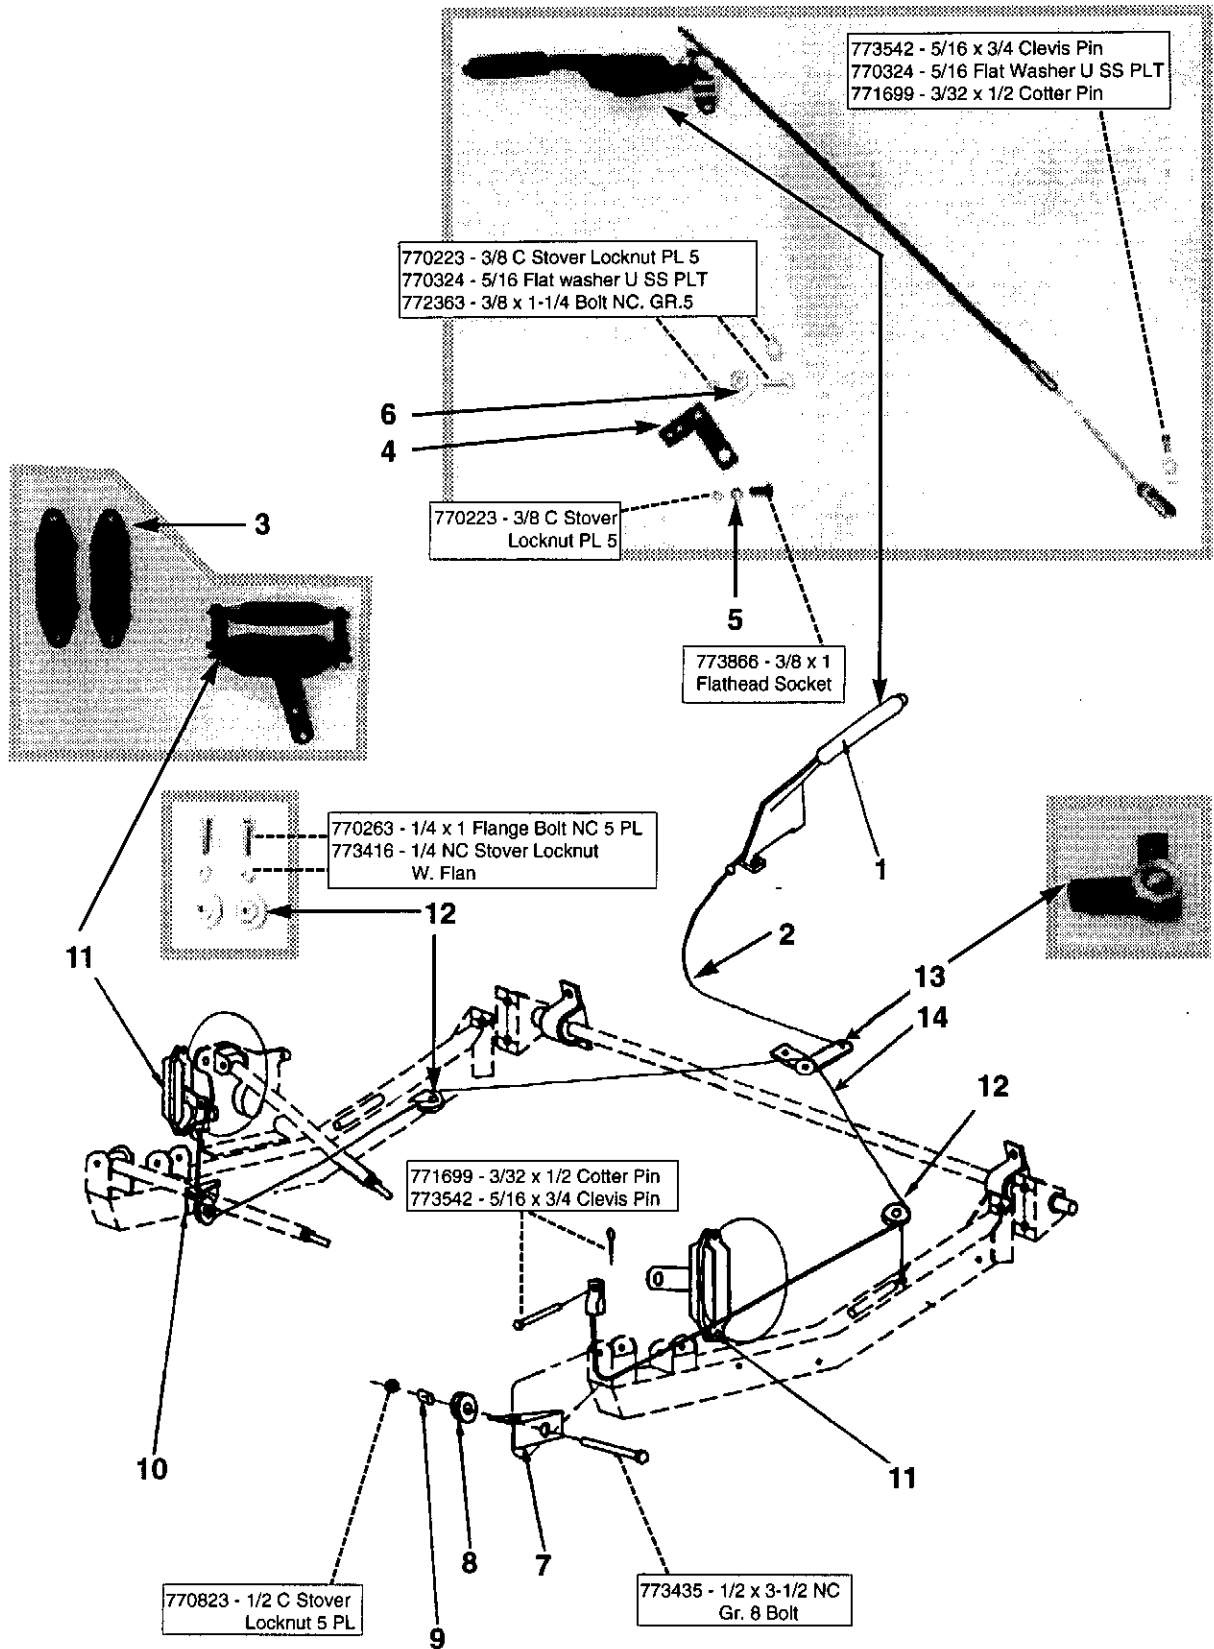

PARKING BRAKE

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Lever-Park Brake	443097	1
2	Emergency Brake Cable	442569	1
3	Pad-Caliper Replacement (one pair)	443205	1
4	Park Brake Cable L Bracket	443681	1
5	Bushing-Park Brake Bracket	443777	1
6	Pulley-Roller	583688	1
7	RH Cable Bracket	442888	1
8	Pulley-Emergency Brake	442868	2
9	Bushing-Pulley	442867	2
10	LH Cable Bracket	442887	1
11	Brake Caliper-Parking	442605	2
12	Pulley	583873	2
13	Parking Brake Bracket Assembly	449000	1
14	Brake Cable L-R	442886	1




CHANGE CONTROL

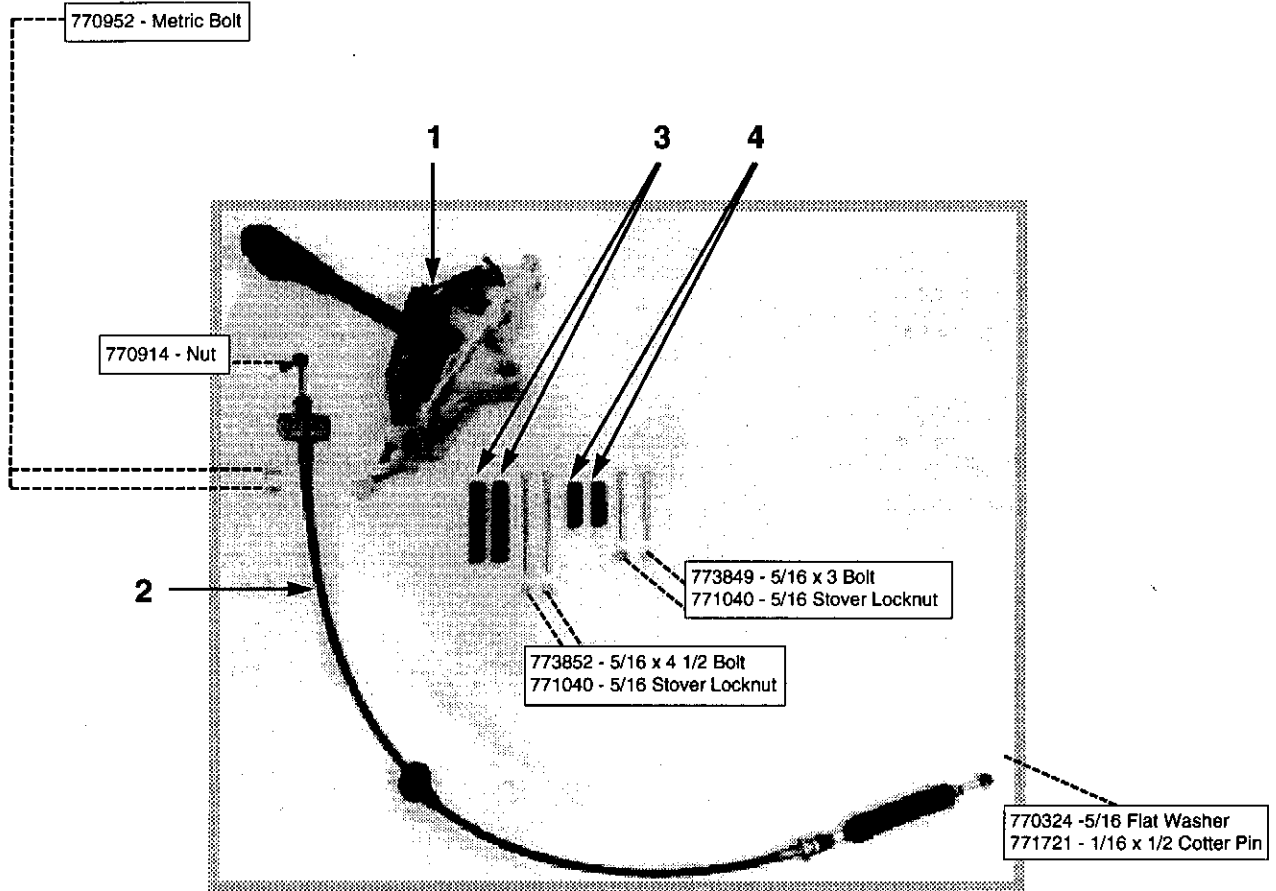

CHANGE CONTROL

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Change Compartment	463098	1
2	Cable Control	463101	1
3	Spacer-Lower Shifter Mount	463764	2
4	Spacer-Lower Shifter Mount	463765	2


BUMPERS

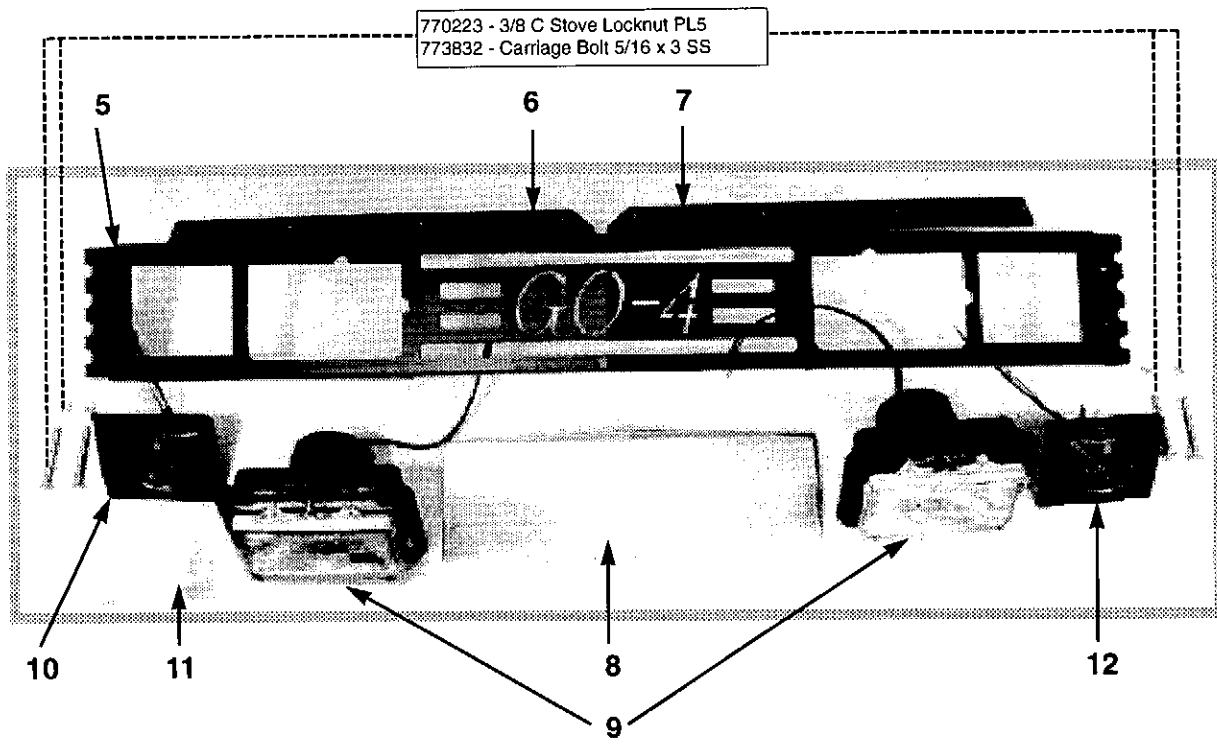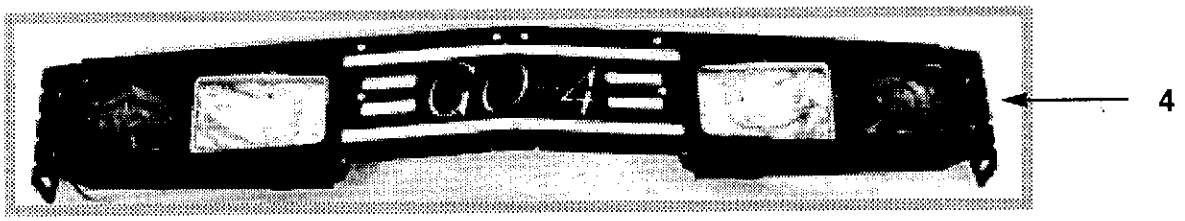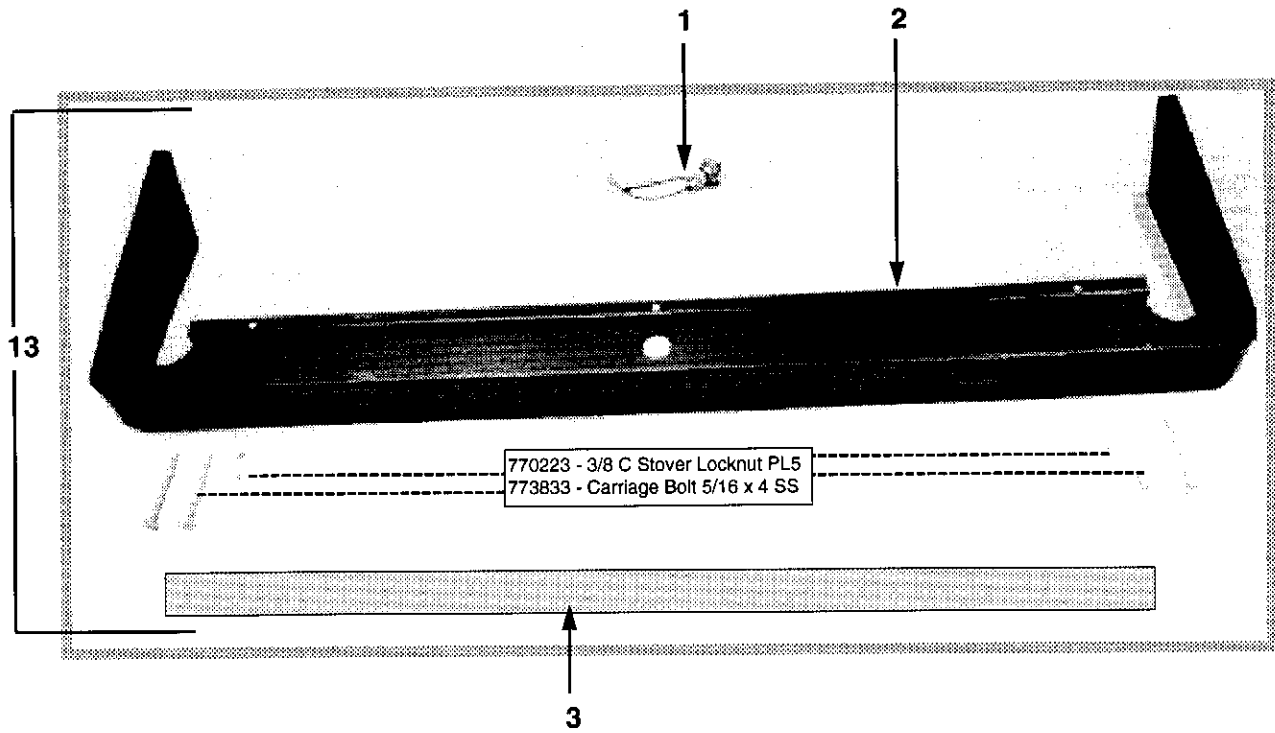

BUMPERS

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	License Plate Lamp Assembly	519004	1
2	Bumper-Rear	504003	1
3	Panel-Rear Bumper Filler	504000	1
4	Bumper-Front Assembly	509000	1
5	Bumper-Front	503422	1
6	Support-Nose Cone RH	503838	1
7	Support-Nose Cone LH	503837	1
8	Backing Plate-Front Bumper	503590	1
9	Headlight Assembly	510073	2
10	Signal Light Assembly-Front RH	519000	1
11	Turn Signal Retainer-Front	513828	2
12	Signal Light Assembly-Front LH	519001	1
13	Rear Bumper Assembly	509001	1


LIGHTING

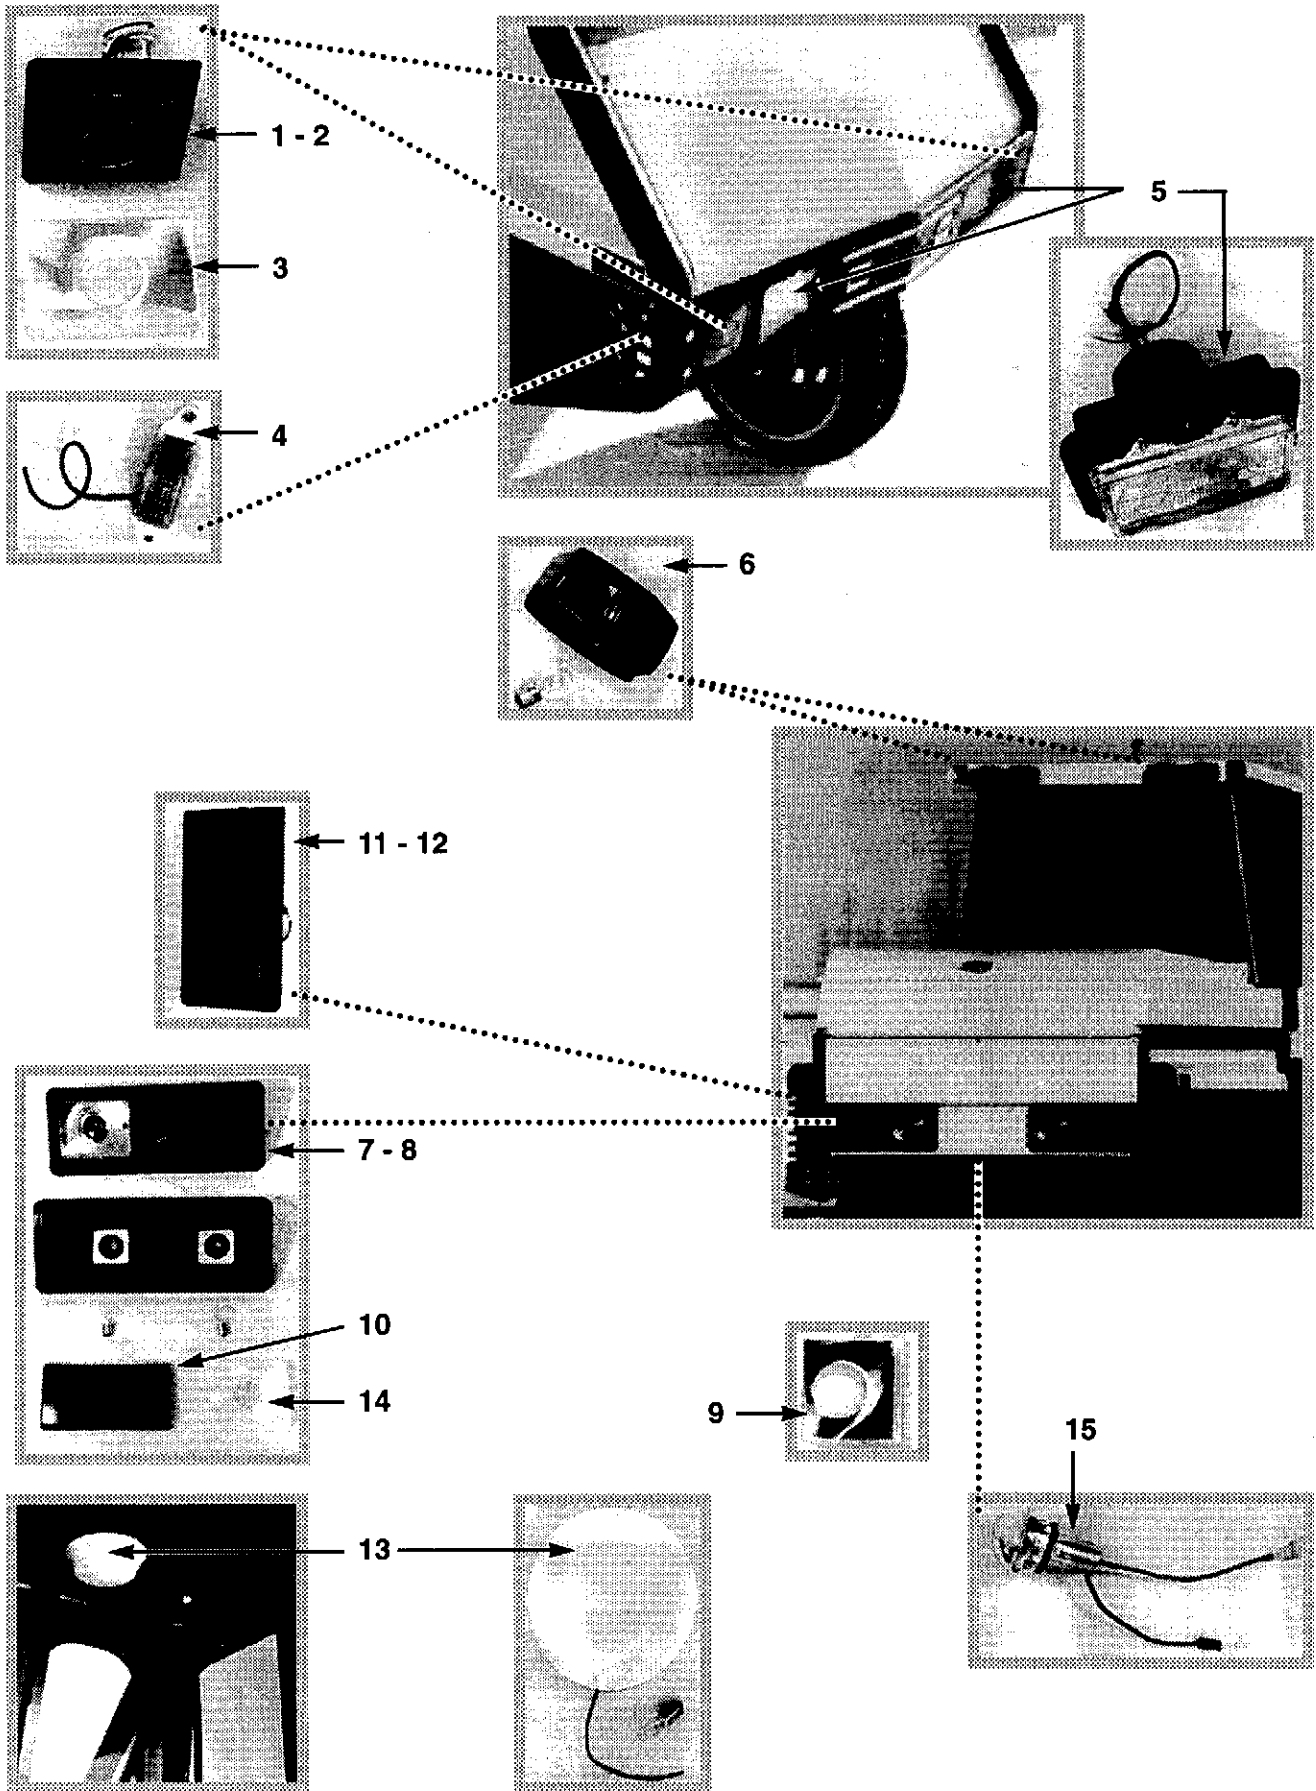

LIGHTING

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Signal Light Assembly-Front RH	519000	1
2	Signal Light Assembly-Front LH	519001	1
3	Turn Signal Retainer	513828	2
4	Light-Front Side Marker	514001	2
5	Headlight Assembly	510073	2
6	Clearance Light-Red	511029	4
7	Tail- light-Right Rear	513583	1
8	Tail- light-Left Rear	513584	1
9	Retainer-Rear Tail Light	514000	2
10	Red Taillight Cover	514002	2
11	Signal Light Assembly-Rear RH	519002	1
12	Signal Light Assembly-Rear LH	519003	1
13	Dome Light Assembly with Switch	510075	1
14	Clear Taillight Cover	514003	2
15	License Plate Lamp Assembly	519004	1

BODY PANELS

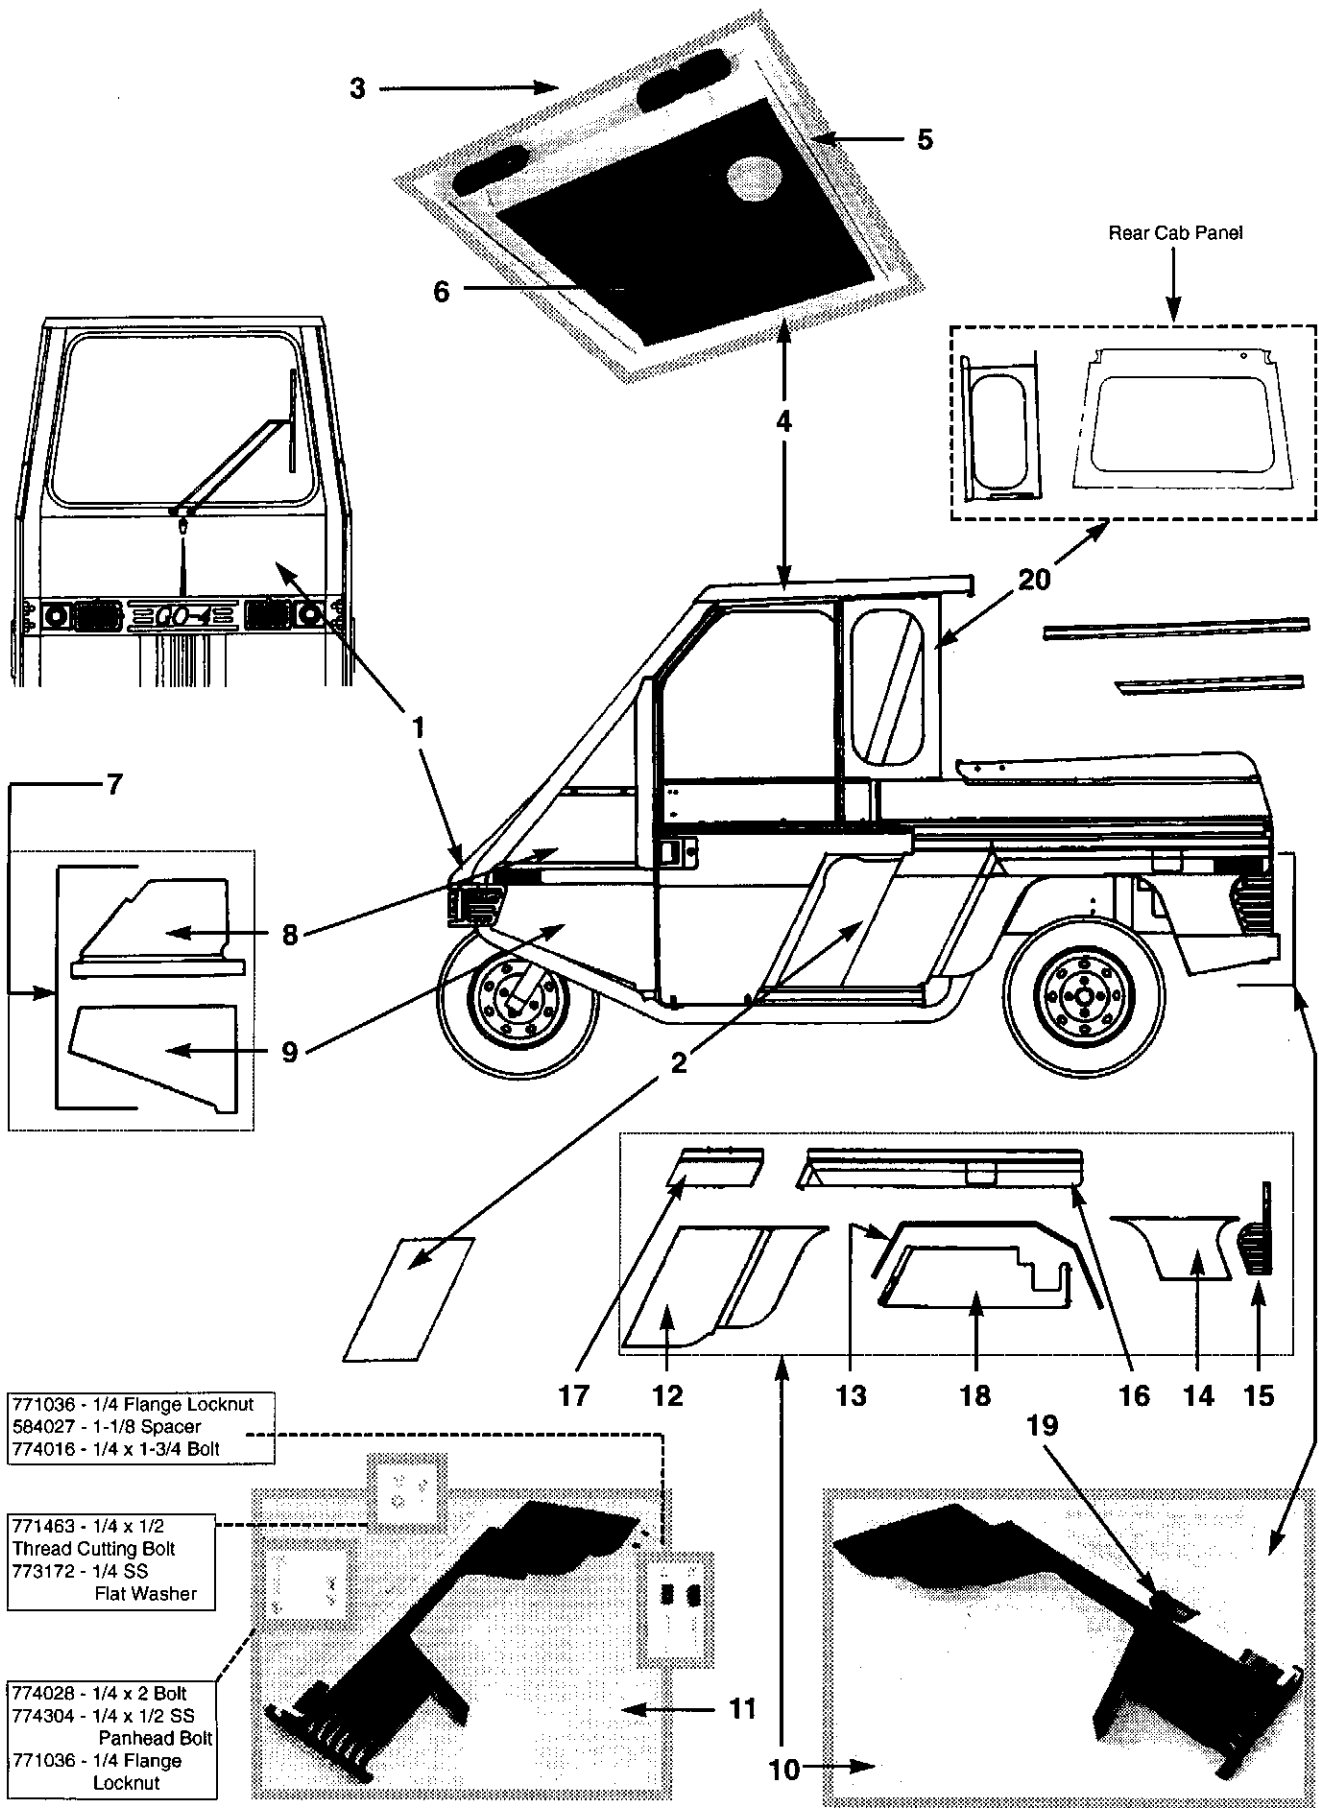

771036 - 1/4 Flange Locknut
 584027 - 1-1/8 Spacer
 774016 - 1/4 x 1-3/4 Bolt



771463 - 1/4 x 1/2 Thread Cutting Bolt
 773172 - 1/4 SS Flat Washer

774028 - 1/4 x 2 Bolt
 774304 - 1/4 x 1/2 SS Panhead Bolt
 771036 - 1/4 Flange Locknut



BODY PANELS

REF.	PART NAME	PART NO.	QTY
1	Hood-Front	533418	1
2	Panel-Front, Engine Intake	534021	2
	Panel-Front, Engine Intake with A/C <i>(not illustrated)</i>	534022	2
3	Roof Assembly	539001	1
4	Roof Panel	533469	1
5	Top Window Slider-Roof	534020	2
6	Headliner	533863	1
7	Front Filler Panel Assembly-LH	539003	1
	Front Filler Panel Assembly-RH <i>(not illustrated)</i>	539002	1
8	Filler Panel-Upper Front LH	533543	1
	Filler Panel-Upper Front RH <i>(not illustrated)</i>	533544	1
9	Filler Panel-Lower Front LH	533564	1
	Filler Panel-Lower Front RH <i>(not illustrated)</i>	533565	1
10	Fender Assembly-LH	539005	1
11	Fender Assembly-RH	539004	1
12	Panel-Engine Intake LH	534005	1
	Panel-Engine Intake RH <i>(not illustrated)</i>	534002	1
13	Splashguard	534015	2
14	Fender Panel-Rear Corner LH	533484	1
	Fender Panel-Rear Corner RH <i>(not illustrated)</i>	533485	1
15	Tail Light Cover-LH	533482	1
	Tail Light Cover-RH <i>(not illustrated)</i>	533483	1
16	Panel-Fender Upper Stepside, LH	534011	1
	Panel-Fender Upper Stepside, RH <i>(not illustrated)</i>	534012	1
17	Side Access Panel-Upper, LH	534019	1
	Side Access Panel-Upper, RH <i>(not illustrated)</i>	534018	1
18	Fender Well-Inner, LH	533729	1
	Fender Well-Inner, RH <i>(not illustrated)</i>	533730	1
19	Edge Protector	684016	1
20	Rear Cab Panel	533686	1

BODY PANELS

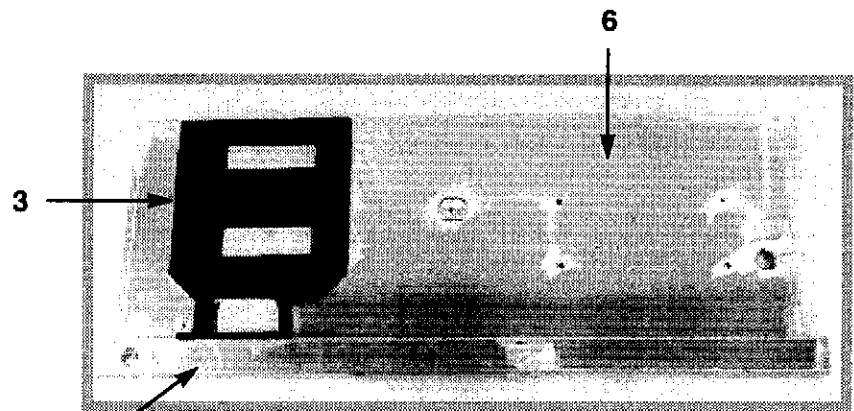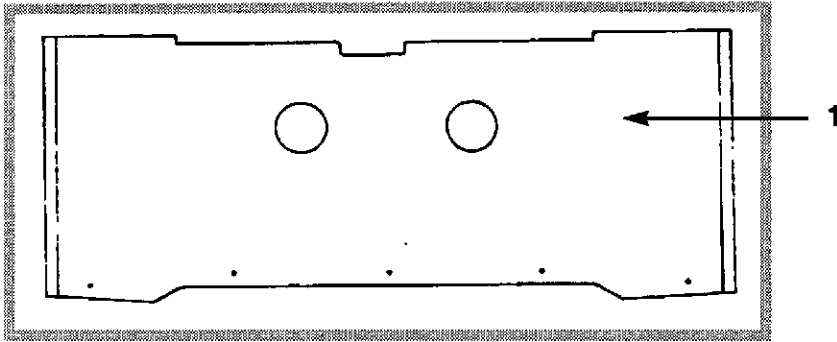

DASH BASE ASSEMBLY - Above picture is the bottom view and the lower picture is the top view.



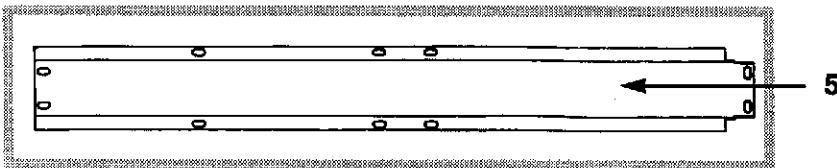
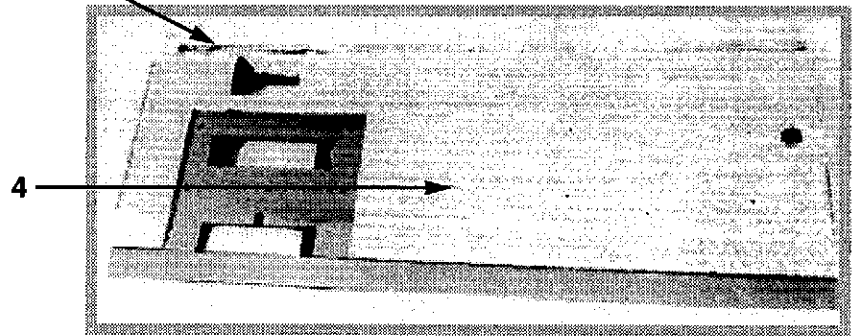


WIRING TRAY- Extends from front to rear of Vehicle, underneath the floor panel.



BODY PANELS

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>Q'TY</i>
1	Dash Top	533603	1
2	Dash Base Assembly	539008	1
3	Gasket-Heater to Dash Base	614006	1
4	Insulation Foil	682975	1
5	Wiring Tray	533573	2
6	Dash Base	533714	1

INTERIOR BODY PANELS

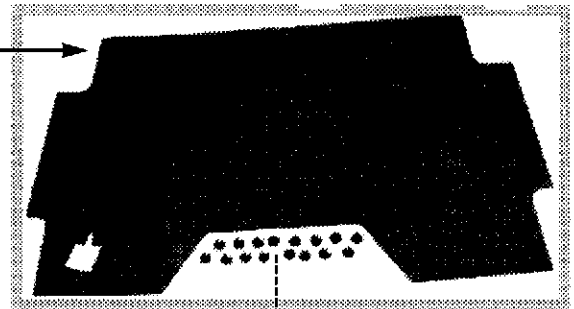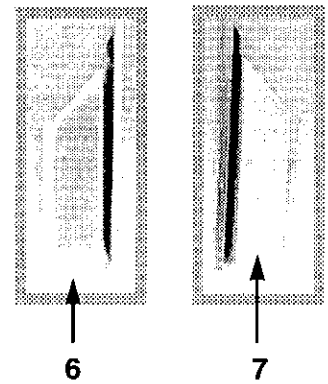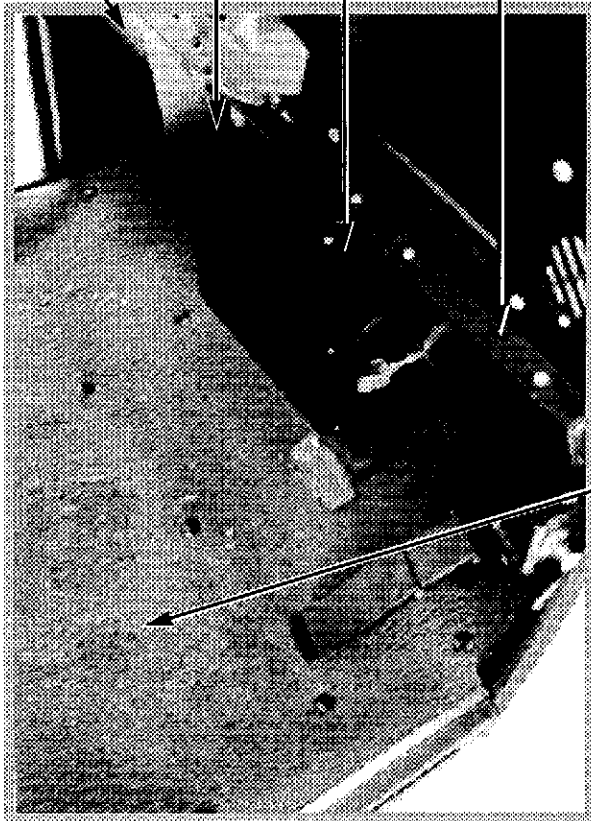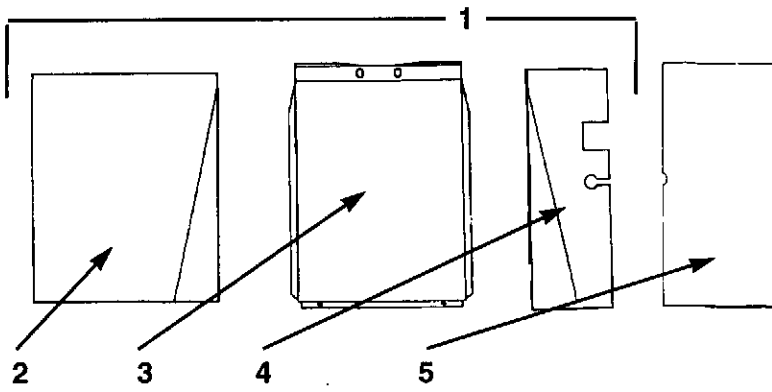

771099 - Floor Mounting Tabs

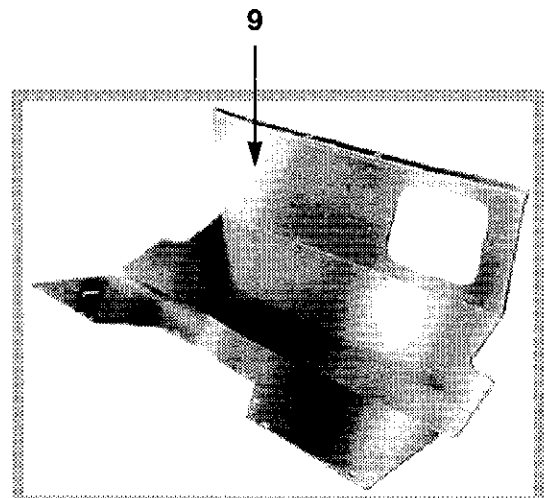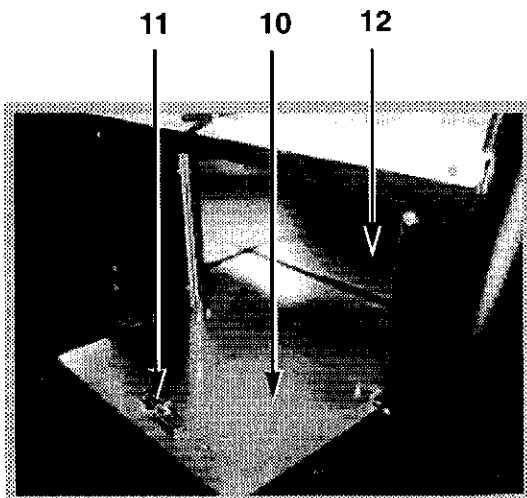


INTERIOR BODY PANELS

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Console Assembly-Front	539006	1
2	Console Panel, LH Outer	533806	1
3	Console Panel, RH Inner	533805	1
4	Console Panel, LH Inner	533807	1
5	Console Panel, RH Outer	533804	1
6	Panel-Floor Filler LH	633861	1
7	Panel-Floor Filler RH	633860	1
8	Floor Mat 96	683865	1
9	Panel-Floor	533465	1
10	Personal Compartment Door	534024	1
11	Lock & Key-Personal Compartment Door	530656	1
12	Personal Compartment	534023	1


SEAT & SEAT BELTS




1

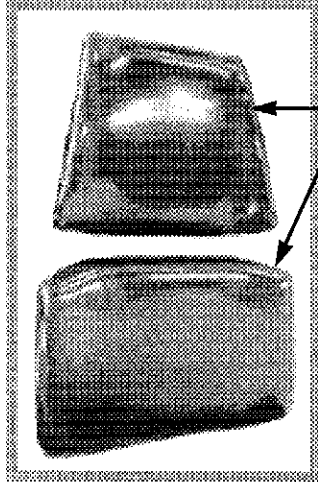

2

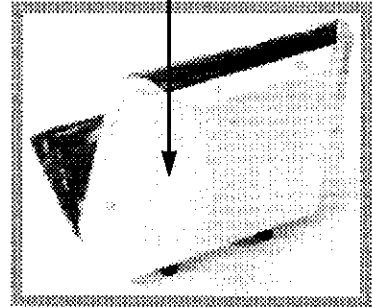

3

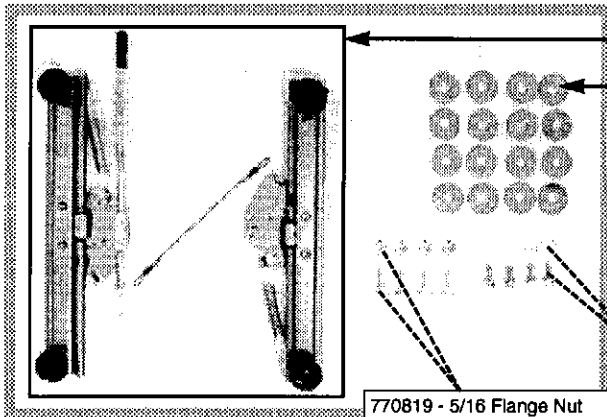


4

5

771689 - 1/4 STD. Z.P. Washer
770279 - 1/4 x 3/4 Flange Bolt

770819 - 5/16 Flange Nut
770079 - 5/16 x 1 Carriage Bolt

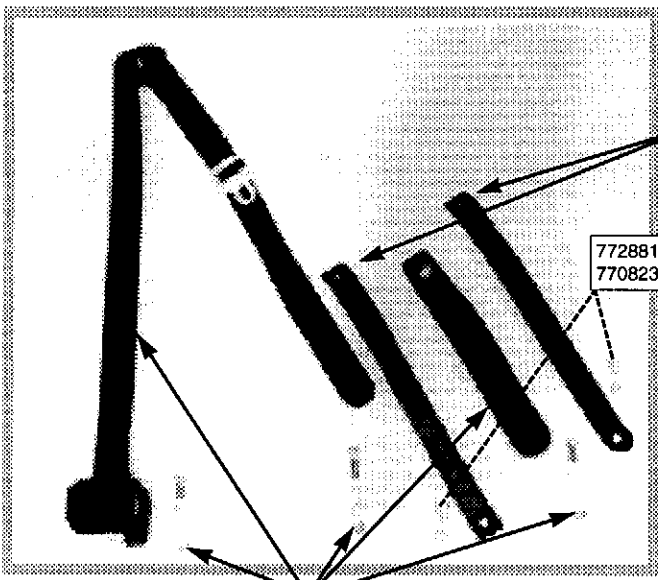


9

772891 - 1/2 x 3/4 Gr.5 NC Bolt
770823 - 1/2 C Stover Nut

8

6

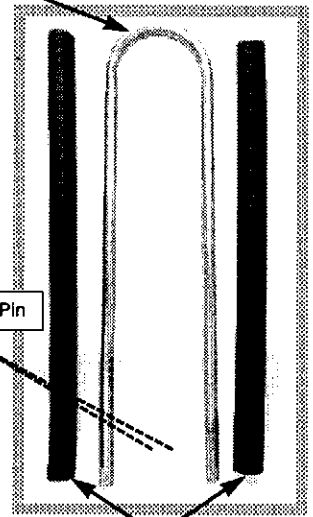


7

771147 - 3/16 x 1 1/2 Cotter Pin

SEAT & SEAT BELTS

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Seat Cushion Assembly	579001	1
2	Seat Cushion	572793	1
3	Seat Panel	572579	1
4	Seat Adjustment Track	570024	1
5	Spacer	343233	16
6	Tube-Head Restraint	572944	1
7	Guard-Head Restraint	684009	2
8	Shoulder Belt	570026	1
9	Seat Belt Anchor Strap	573794	2



DOOR, Lower

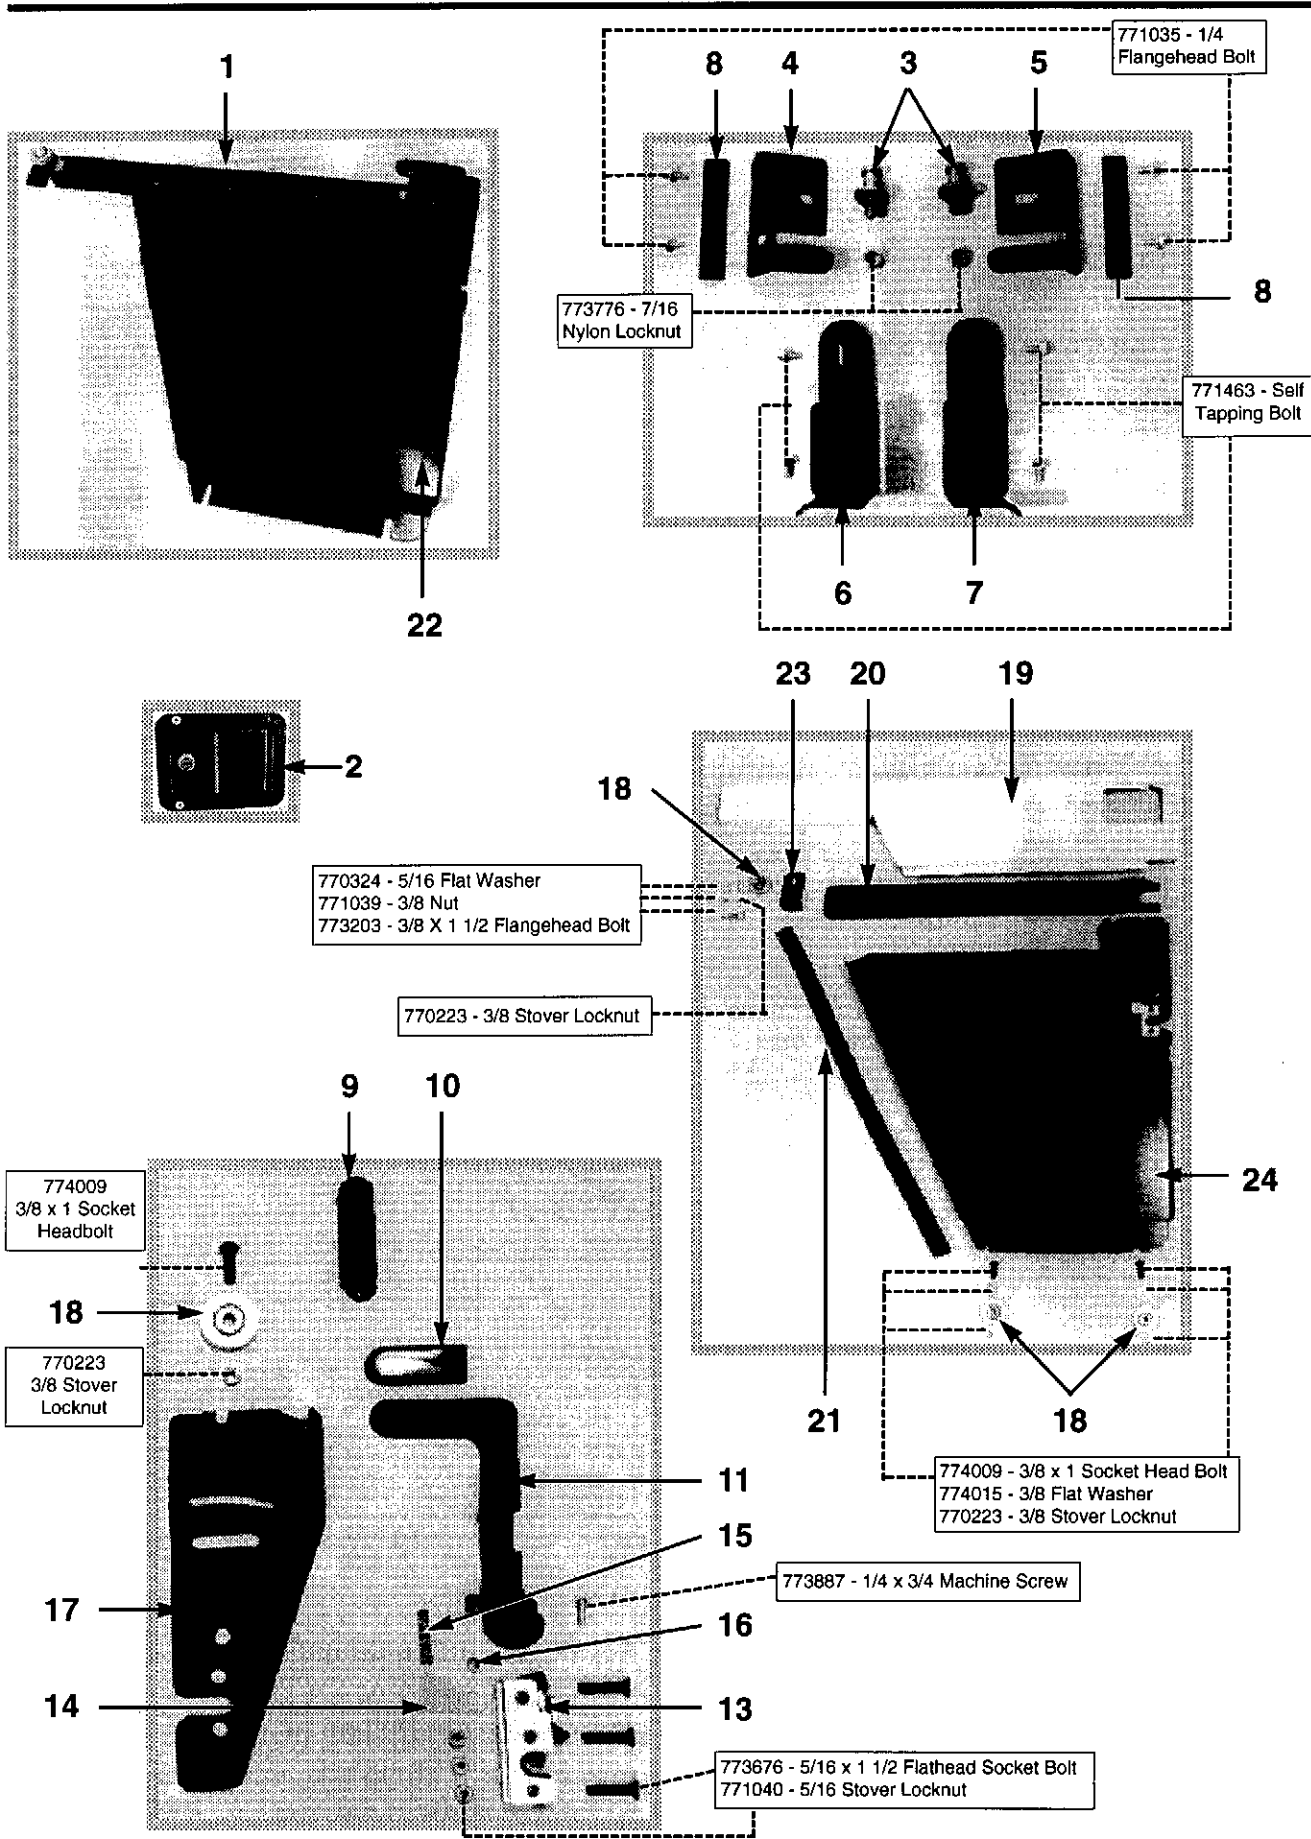

DOOR, Lower

REF.	PART NAME	PART NO.	QTY
1	Door-LH Assembly	589001	1
	Door-RH Assembly <i>(not shown)</i>	589000	1
2	Paddle Handle, Locking	583376	1
3	Pin-Door Striker	583379	2
4	Striker-RH Door	583742	2
5	Striker-LH Door	583574	1
6	Retainer-Inside Window, RH	584016	1
7	Retainer-Inside Window, LH	584015	1
8	Anchor Plate-Door Striker	583653	2
9	Handle-Outer Door	584013	2
10	Grip-Door Handle, Red	584004	2
11	Handle-Inside Door, RH	584006	1
	Handle-Inside Door, LH <i>(not shown)</i>	583811	1
13	Latch-RH Door	583846	1
	Latch-LH Door <i>(not shown)</i>	583845	1
14	Support-Door Handle Spring	584007	2
15	Spring-Inside Handle	583812	2
16	Bushing-Door Latch	584008	2
17	Stiffener- Door Latch RH	583738	1
	Stiffener- Door Latch LH <i>(not shown)</i>	583540	1
18	Pulley-Roller	583688	4
19	Panel-Door Upper, RH	583739	1
	Panel-Door Upper, LH <i>(not shown)</i>	583710	1
20	Rail-Door Upper, RH	584010	1
	Rail-Door Upper, LH <i>(not shown)</i>	584003	1
21	Door Seal	684003	2
22	Panel-Door Inner, RH	583741	1
	Panel-Door Inner, LH <i>(not shown)</i>	583712	1
23	Support-Window Roller, Rear	584000	2
24	Panel-Lower Door, LH	583711	1
	Panel-Lower Door, RH <i>(not shown)</i>	583740	1



DOOR WINDOWS

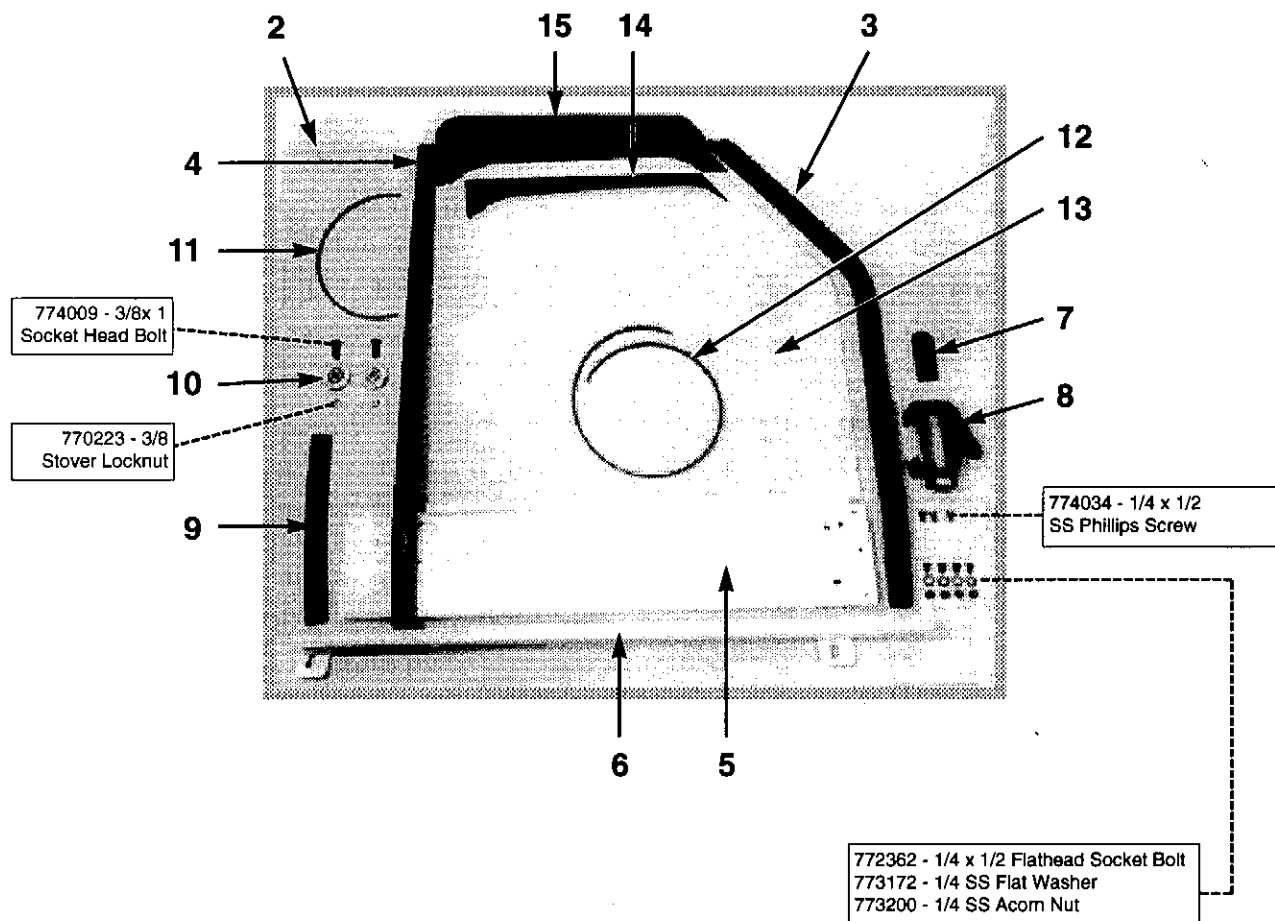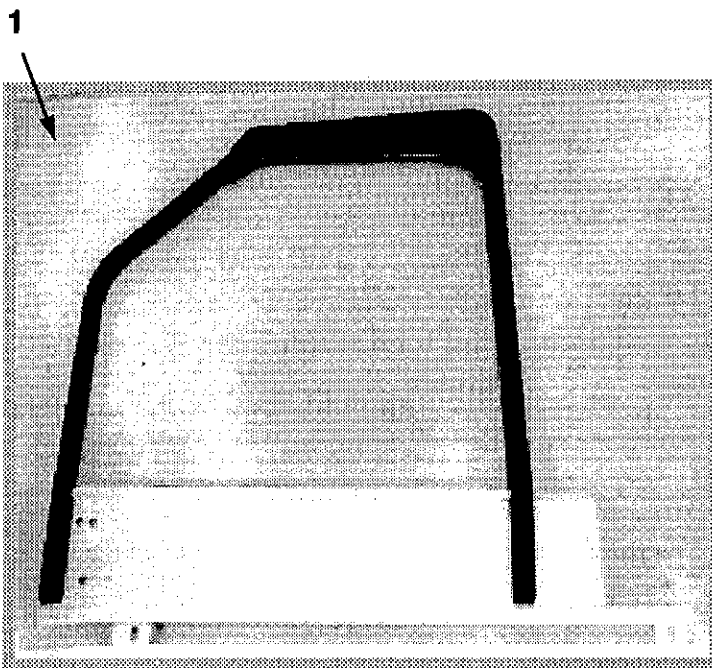

DOOR WINDOWS

REF.	PART NAME	PART NO.	QTY
1	Window-LH Assembly	589003	1
2	Window-RH Assembly	589002	1
3	Frame-Door Window RH Front	584020	1
	Frame-Door Window LH Front <i>(not shown)</i>	584019	1
4	Frame-Door Window RH Rear	584018	1
	Frame-Door Window LH Rear <i>(not shown)</i>	584017	1
5	RH Lower Window Frame	584024	1
	LH Lower Window Frame <i>(not shown)</i>	584023	1
6	RH Window Roller Support	584022	1
	LH Window Roller Support <i>(not shown)</i>	584021	1
7	Grip-Window Handle,Black	584005	2
8	Latch-Inside Window Assembly	589004	2
9	Seal-Window Frame	684015	2
10	Pulley-Roller	583688	2
11	Top Window Seal	584026	2
12	Bottom-Window Seal	584025	2
13	Door Glass	633535	2
14	Guide-Outer Top Window RH	583825	1
	Guide-Outer Top Window LH <i>(not shown)</i>	583824	1
15	Frame-Window Top RH	583635	1
	Frame-Window Top LH <i>(not shown)</i>	583634	1



HEATING

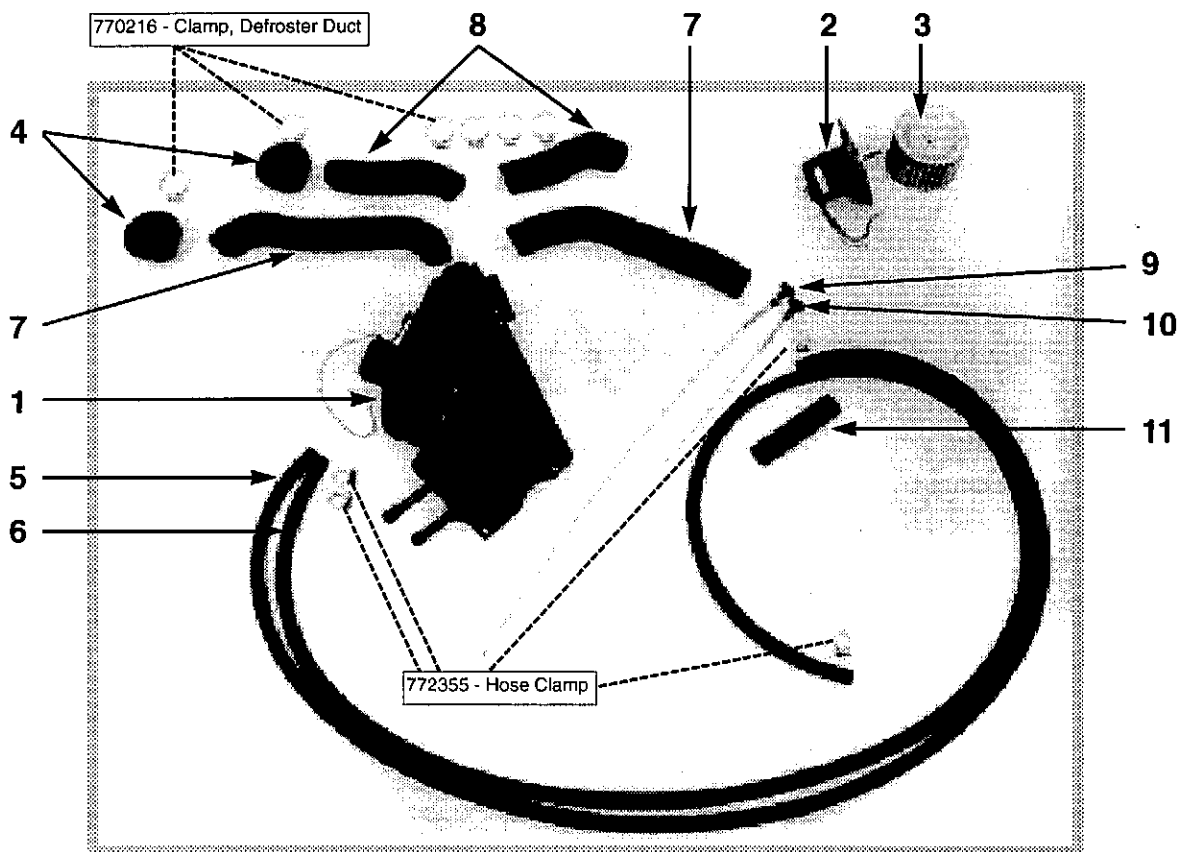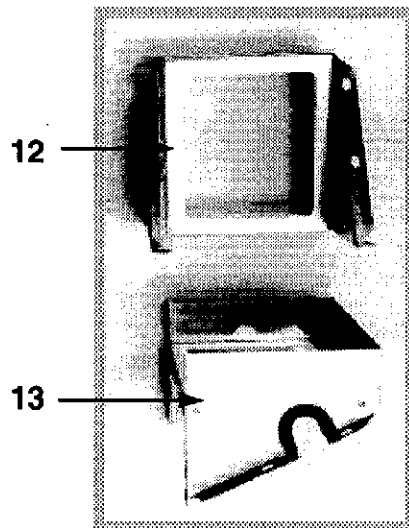

HEATING

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Heater (20,000 BTU)	613750	1
2	Heater Motor	614023	1
3	Heater Blower Fan	614024	1
4	Adjustable Defroster Vent	610009	2
5	Heater Hose, Return	612136	1
6	Heater Hose, Supply	613725	1
7	Duct-Heater, RH	613752	2
8	Duct-Heater, LH	613899	2
9	Cable-Heater Directional	611548	1
10	Cable-Defroster	613888	1
11	Guard-Heater Hose, Supply	684007	1
12	LH Shroud Assembly	619007	1
13	RH Shroud Assembly	619008	1


AIR CONDITIONER — Bracket, Pulley & Belt

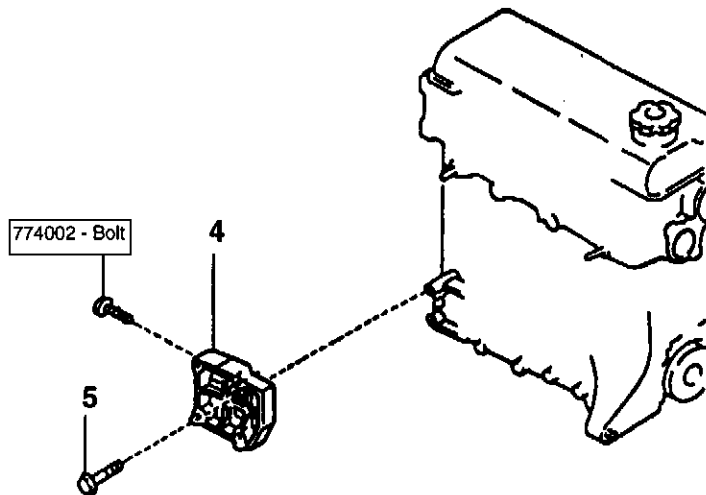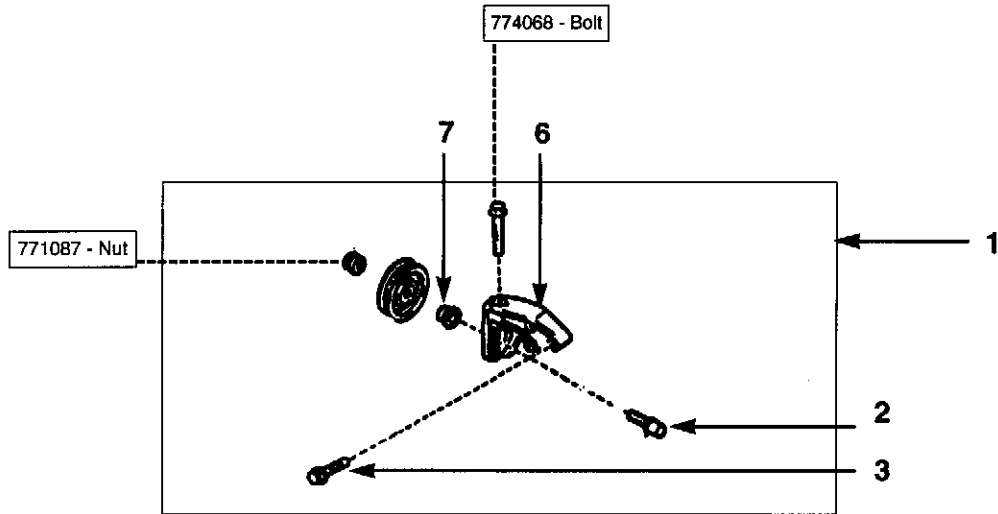

AIR CONDITIONER — Bracket, Pulley & Belt

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>Q'TY</i>
1	A/C Idle Pulley	613493	1
2	Shaft-Idle Pulley	613494	1
3	Bolt-A/C Idle Pulley	613168	1
4	Bracket-A/C Pulley	613495	1
5	Bolt-A/C Compressor Mount, Block	610449	1
6	Bracket-Idle Pulley	154026	1
7	Collar	154023	1
8	Belt-A/C <i>(not shown)</i>	613893	1


AIR CONDITIONER

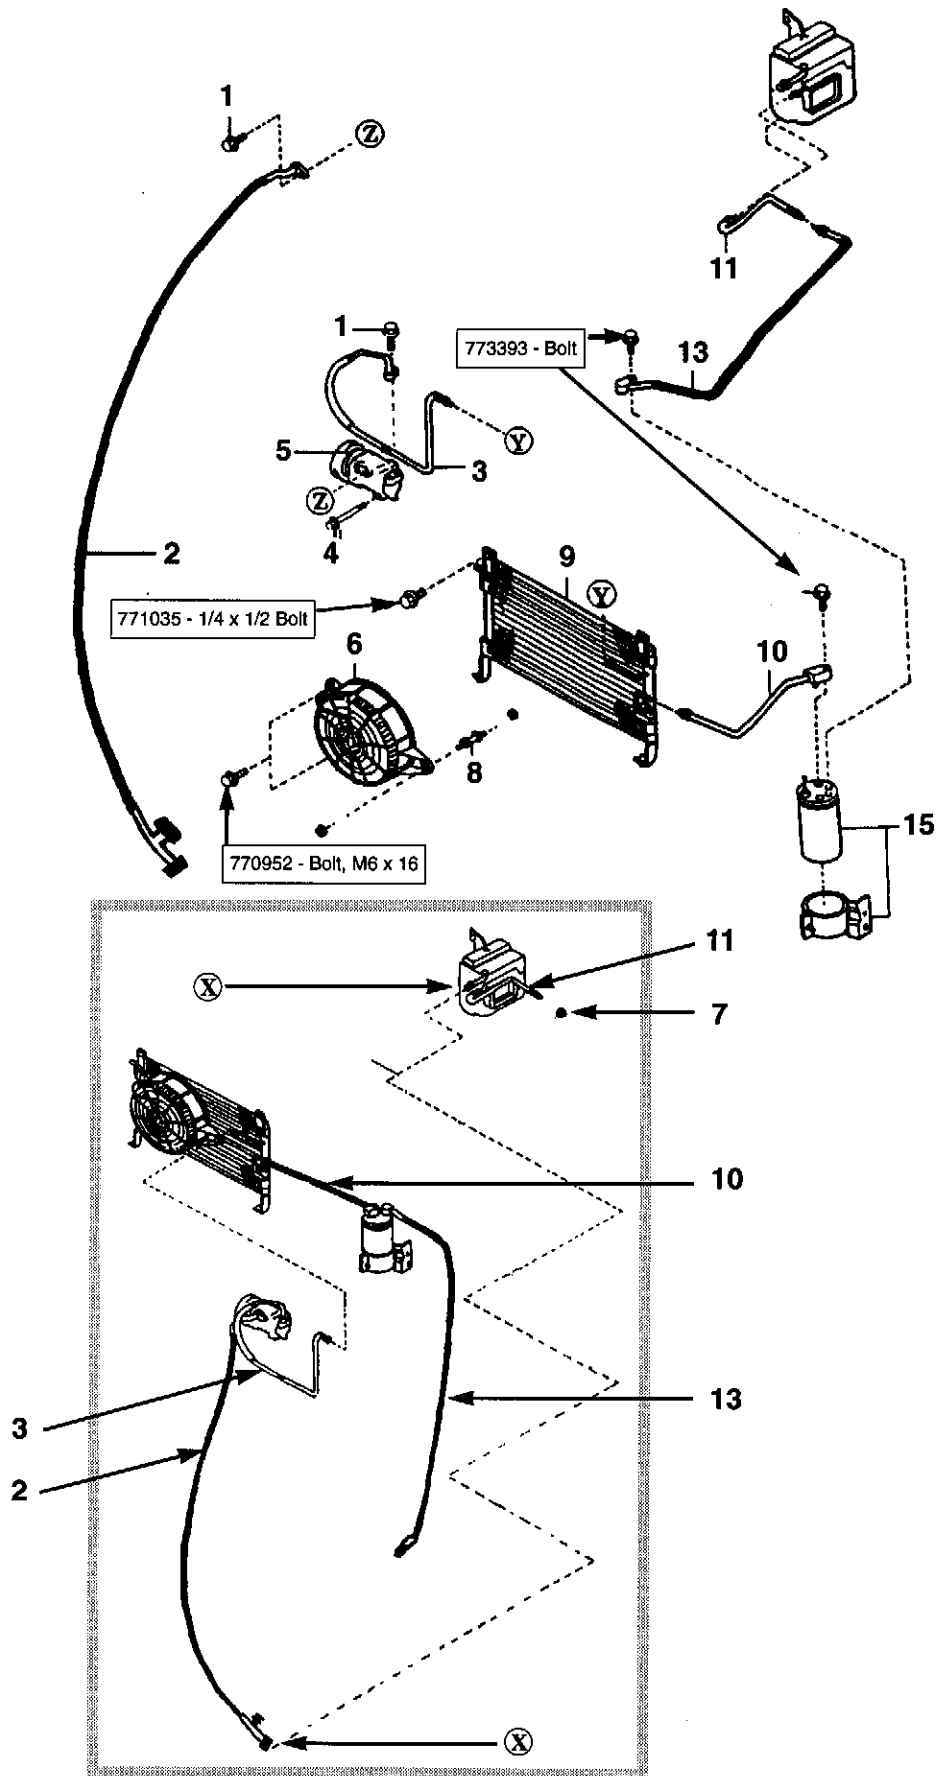

AIR CONDITIONER

REF.	PART NAME	PART NO.	QTY
1	Bolt-Hoses to Compressor	613737	2
2	Line-Evaporator to Compressor	619005	1
3	Discharge Line-A/C Compressor to Condenser	613134	1
4	Bolt-Compressor to Bracket Assembly	613133	1
5	A/C Compressor	613109	1
6	A/C Fan Assembly-Condensor	613142	1
7	Grommet	191798	2
8	Rubber Mounting	133026	1
9	A/C Condenser	613139	1
10	Line-A/C Condenser to Liquid Drier	613136	1
11	Line-A/C Equalizer	613138	1
13	Line-A/C Liquid Drier to Evaporator	613137	1
14	Line-A/C Condenser Suction Drier	613136	1
15	A/C Receiver Drier	613141	1
	Mount-Condenser LH <i>(not illustrated)</i>	613223	1
	Mount-Condenser RH <i>(not illustrated)</i>	613224	1
	Bracket-Upper Condenser Mount <i>(not illustrated)</i>	613609	1
	Belt-Air Conditioner <i>(not illustrated)</i>	613893	1
	Mount-Receiver Drier <i>(not illustrated)</i>	614003	1
	Mount-Condenser Fan <i>(not illustrated)</i>	614007	1


AIR CONDITIONER

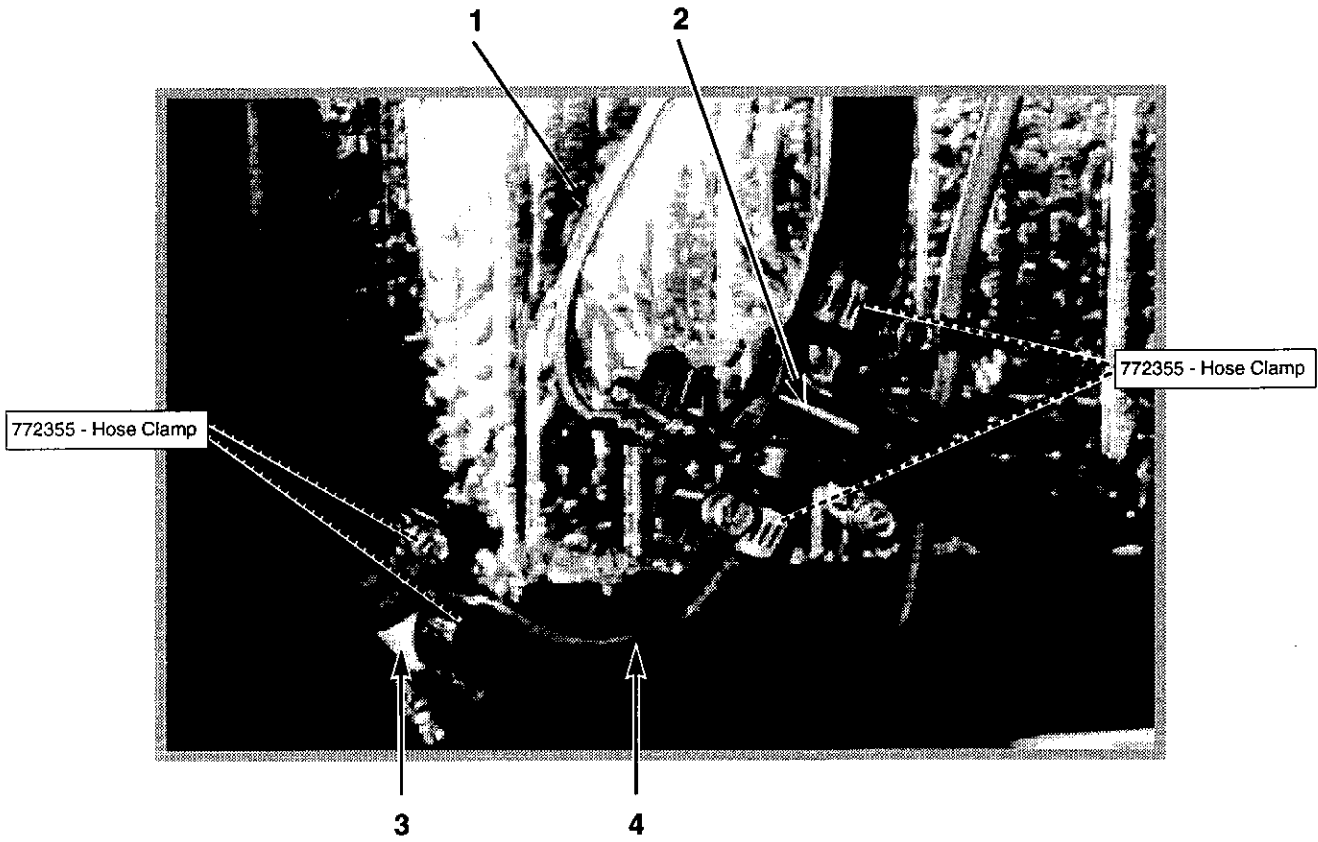

AIR CONDITIONER

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Cable Heater Directional	611548	1
2	3-way Control Valve	614020	1
3	Plastic T Insert	614022	1
4	Heater Hose-3 Way to Insert	614012	1


AIR CONDITIONER — Cooling Unit

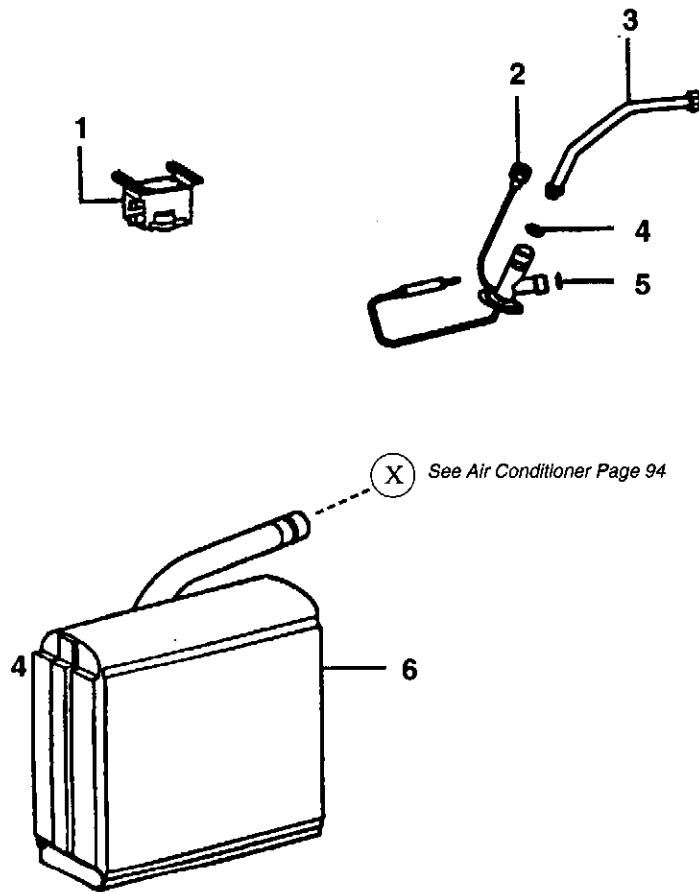

AIR CONDITIONER — Cooling Unit

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	A/C Thermostat	614025	1
2	A/C Expansion Valve	614026	1
3	A/C Expansion Valve to Evaporator Line	614027	1
4	O-Ring-A/C Expansion Valve to Evaporator Valve	614028	1
5	O-Ring-A/C Equalizer Line	614029	1
6	A/C Evaporator Core	613507	1


UPPER TRUNK ASSEMBLY

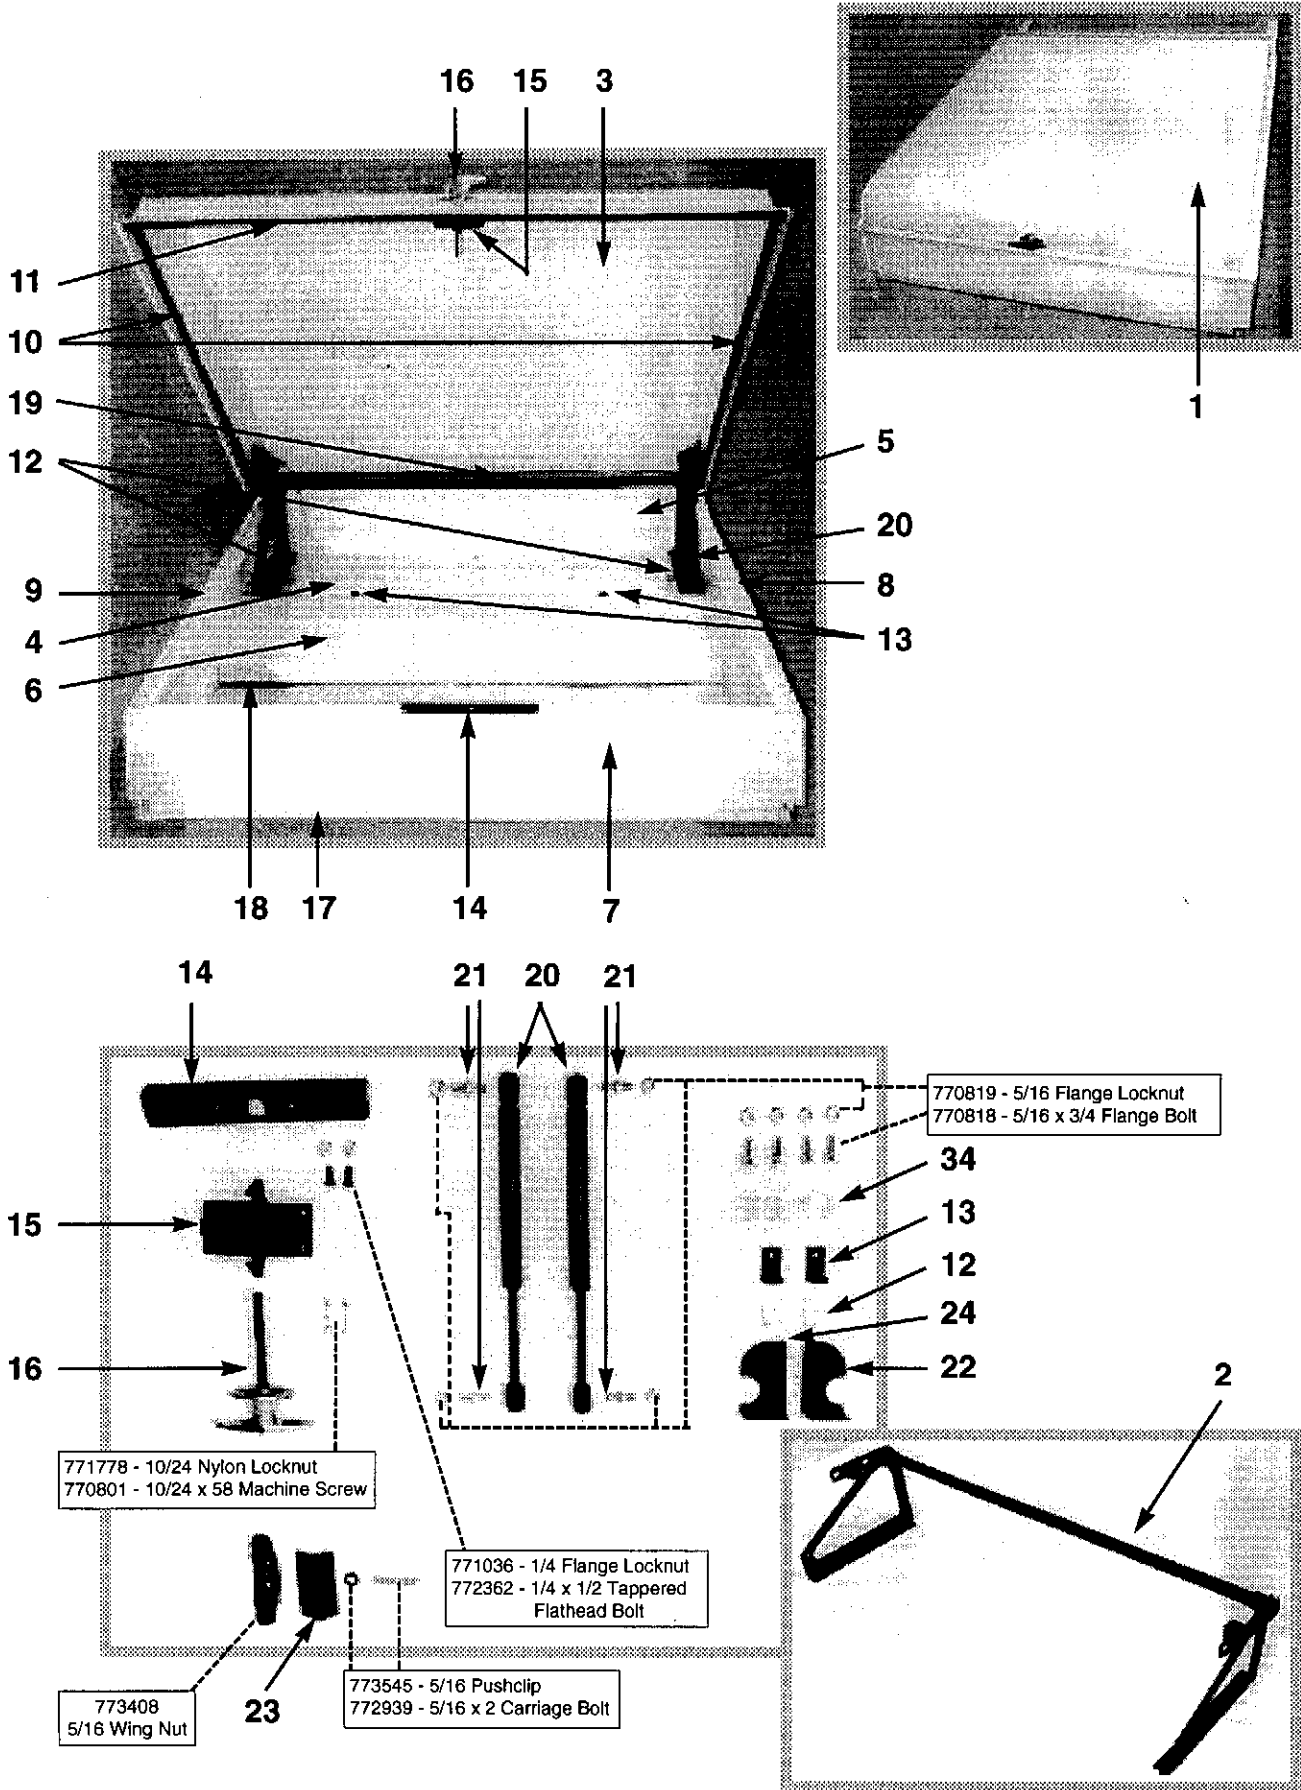

UPPER TRUNK ASSEMBLY

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Upper Trunk Assembly	629001	1
2	Hinge-Upper Trunk	624003	1
3	Lid- Upper Trunk	624001	1
4	Panel-Engine Inspection	624009	1
5	Panel-Upper Trunk Front	624006	1
6	Panel-Trunk Floor	624008	1
7	Panel-Upper Trunk, Rear	623504	1
8	Panel-Trunk, RH Side	623818	1
9	Panel-Upper Trunk, LH Side	623817	1
10	Seal-Upper Trunk Lid, Side	684014	2
11	Seal-Upper Trunk Rear Lid	684012	1
12	Hinge-Engine Inspection Panel	624017	1
13	Latch-Engine Inspection Panel	624016	2
14	Trunk Lid Striker	623197	1
15	Latch, Trunk Lid	621019	1
16	T-Handle, Trunk	621052	1
17	Seal-Upper Trunk, Lower Panel	684004	1
18	Seal-Upper Trunk, Floor	684020	1
19	Seal-Upper Trunk, Front Panel & Lid	684013	1
20	Gas Prop	621007	2
21	Ball Stud	621008	4
22	Trunk Hinge, Filler Panel, LH	624011	1
23	Trunk Retainer	623498	1
24	Trunk Hinge Filler Panel, RH	624012	1
34	Bushing-Plastic	621469	2



LOWER TRUNK

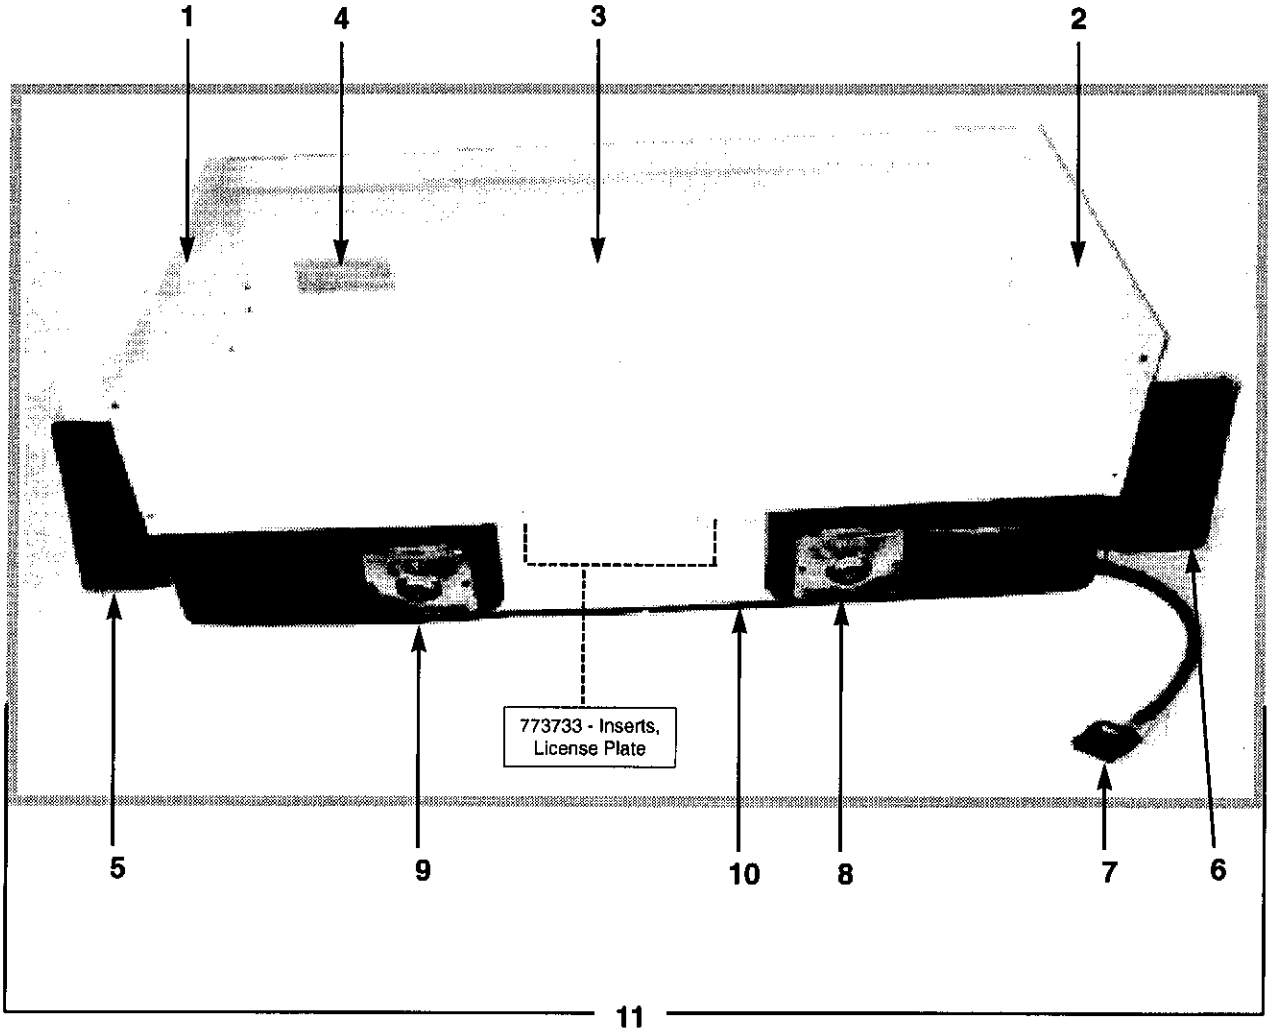


LOWER TRUNK

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Panel-LH Lower Trunk	623522	1
2	Panel-RH Lower Trunk	623523	1
3	Box-Lower Trunk	623521	1
4	Tire Pressure Decal	691050	1
5	Signal Light Assembly-LH Rear	519003	1
6	Signal Light Assembly-RHRear	519002	1
7	Rear Electrical Harness	672878	1
8	Tailight-RH Rear	513583	1
9	Tailight-LH Rear	513584	1
10	Seal-Lower Trunk	684004	1
11	Bottom Trunk Assembly	629000	1

WINDOWS

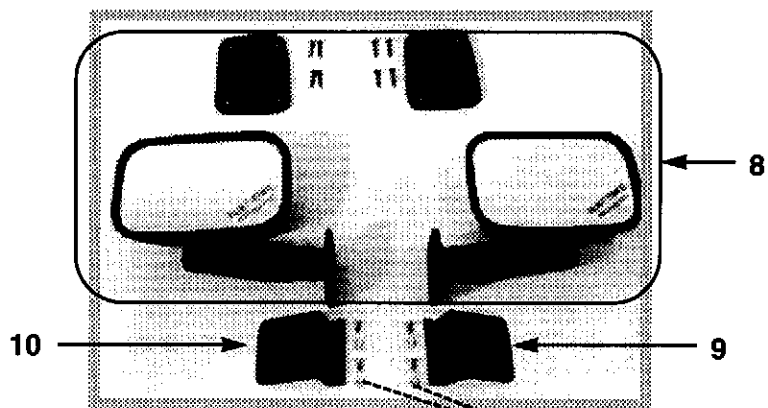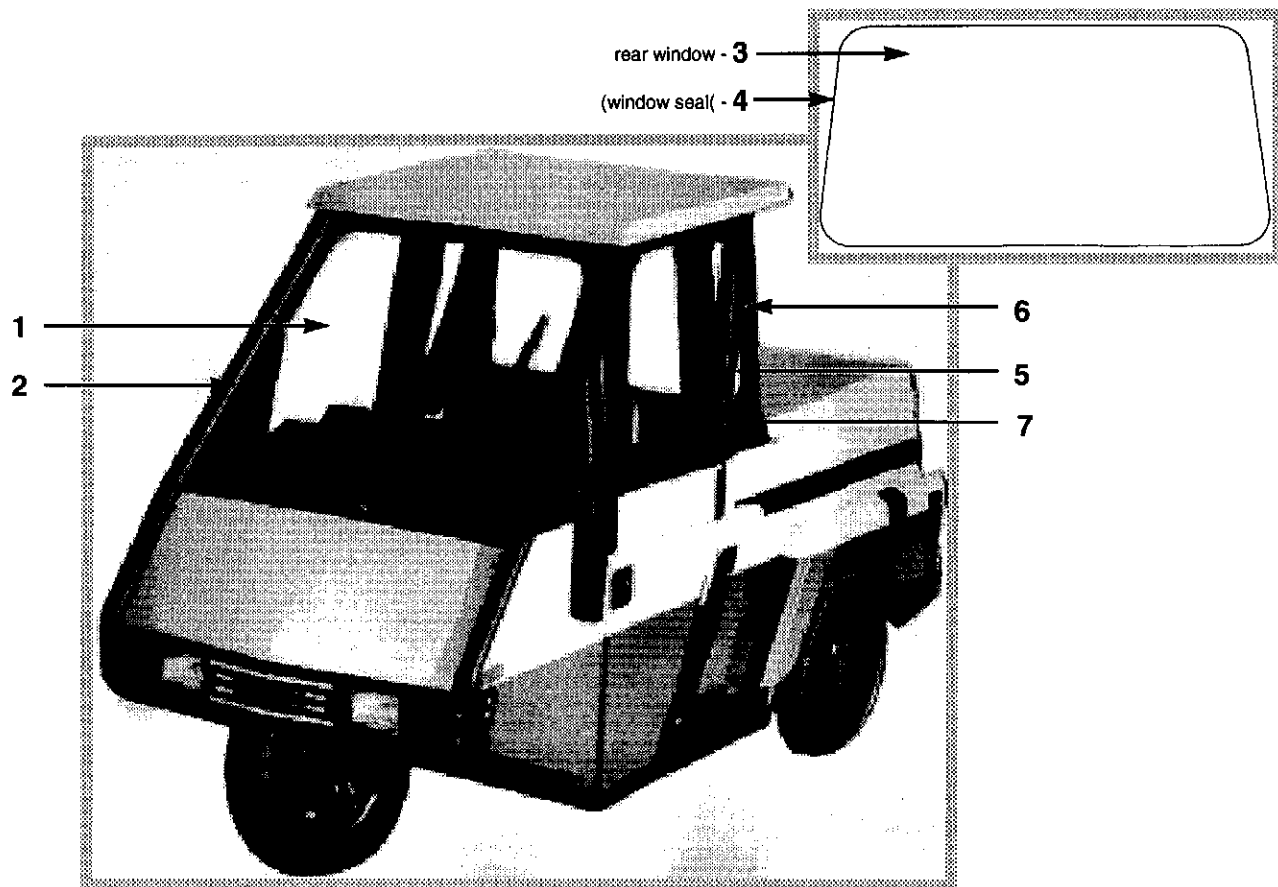


774034 - 1/2 SS Screw
771036 - 1/4 Flange Locknut

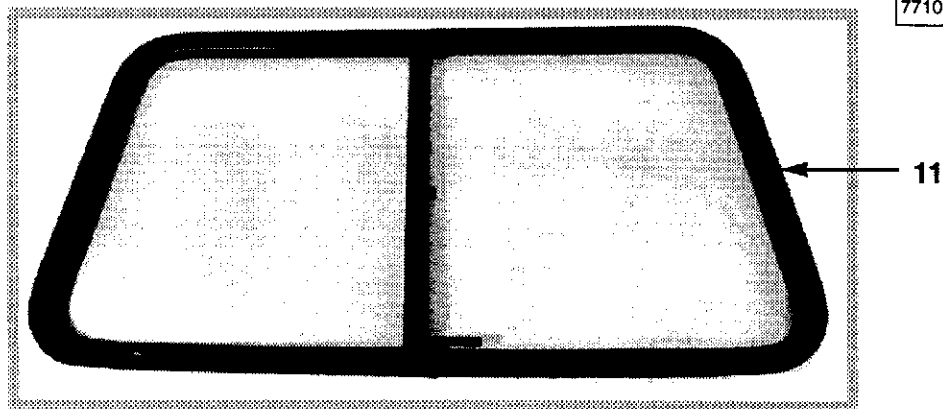

WINDOWS

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Front Window	630994	1
2	Front Glass Seal	682259	1
3	Rear Window	630995	1
4	Rear Window Seal	684010	1
5	Side Glass Window	633528	2
6	Side Glass Seal	683724	2
7	Door Glass, Window	633535	2
8	Mirror Assembly	633637	2
9	Bracket-Mirror RH	533844	1
10	Bracket-Mirror LH	533843	1
11	Sliding Rear Window Assembly	632309	1


WINDSHIELD WIPER

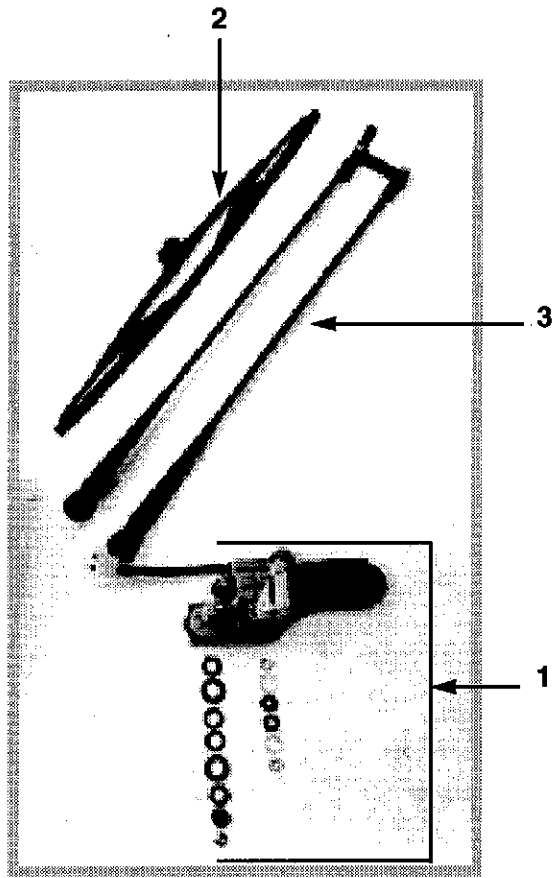

WINDSHIELD WIPER

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	2-Speed Wiper Motor	644000	1
2	Wiper Blade	644001	1
3	Parallel Wiper Arm	644002	1


ELECTRICAL PANEL ASSEMBLY

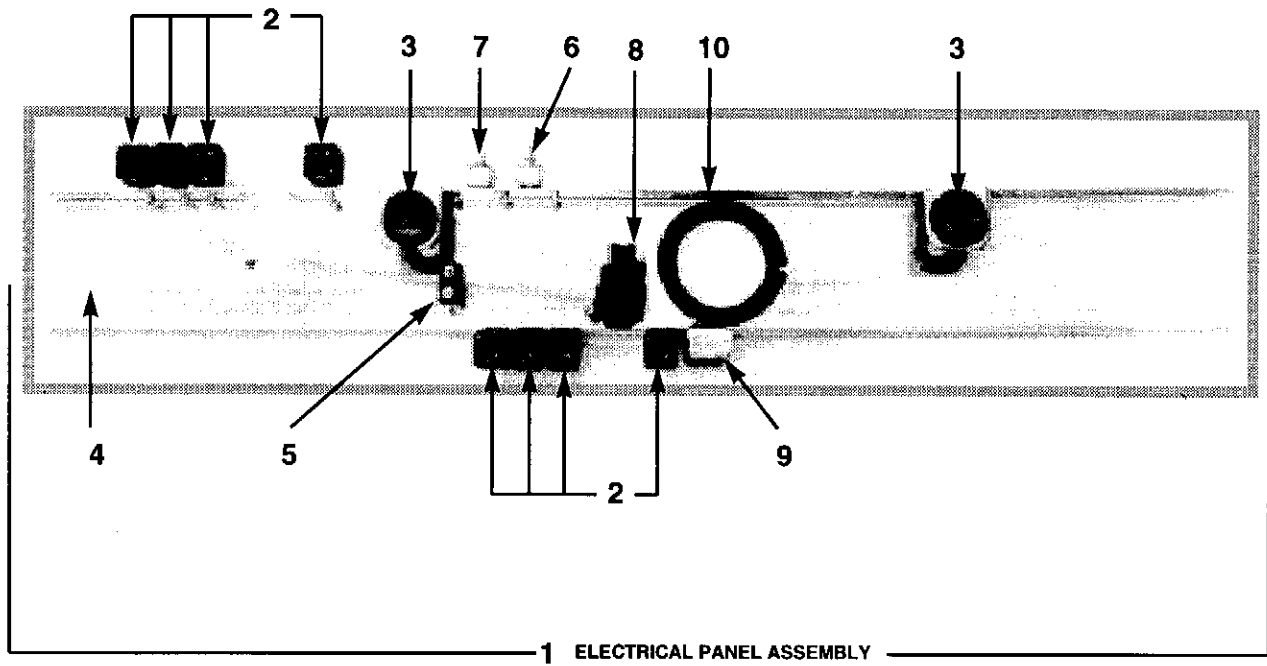

ELECTRICAL PANEL ASSEMBLY

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>Q'TY</i>
1	Electrical Panel Assembly	679000	1
2	Relay-4 Plug	661752	8
3	Radiator Bracket-Upper	153798	2
4	Electrical Panel	533779	1
5	50 Amp Circuit Breaker	662227	1
6	20 Amp Circuit Breaker	662916	1
7	15 Amp Circuit Breaker	662915	1
8	Fuel Pump Switch	663335	1
9	Fuel Pump Relay	663638	1
10	Edge Protector	684019	1



ELECTRICAL PANEL ASSEMBLY

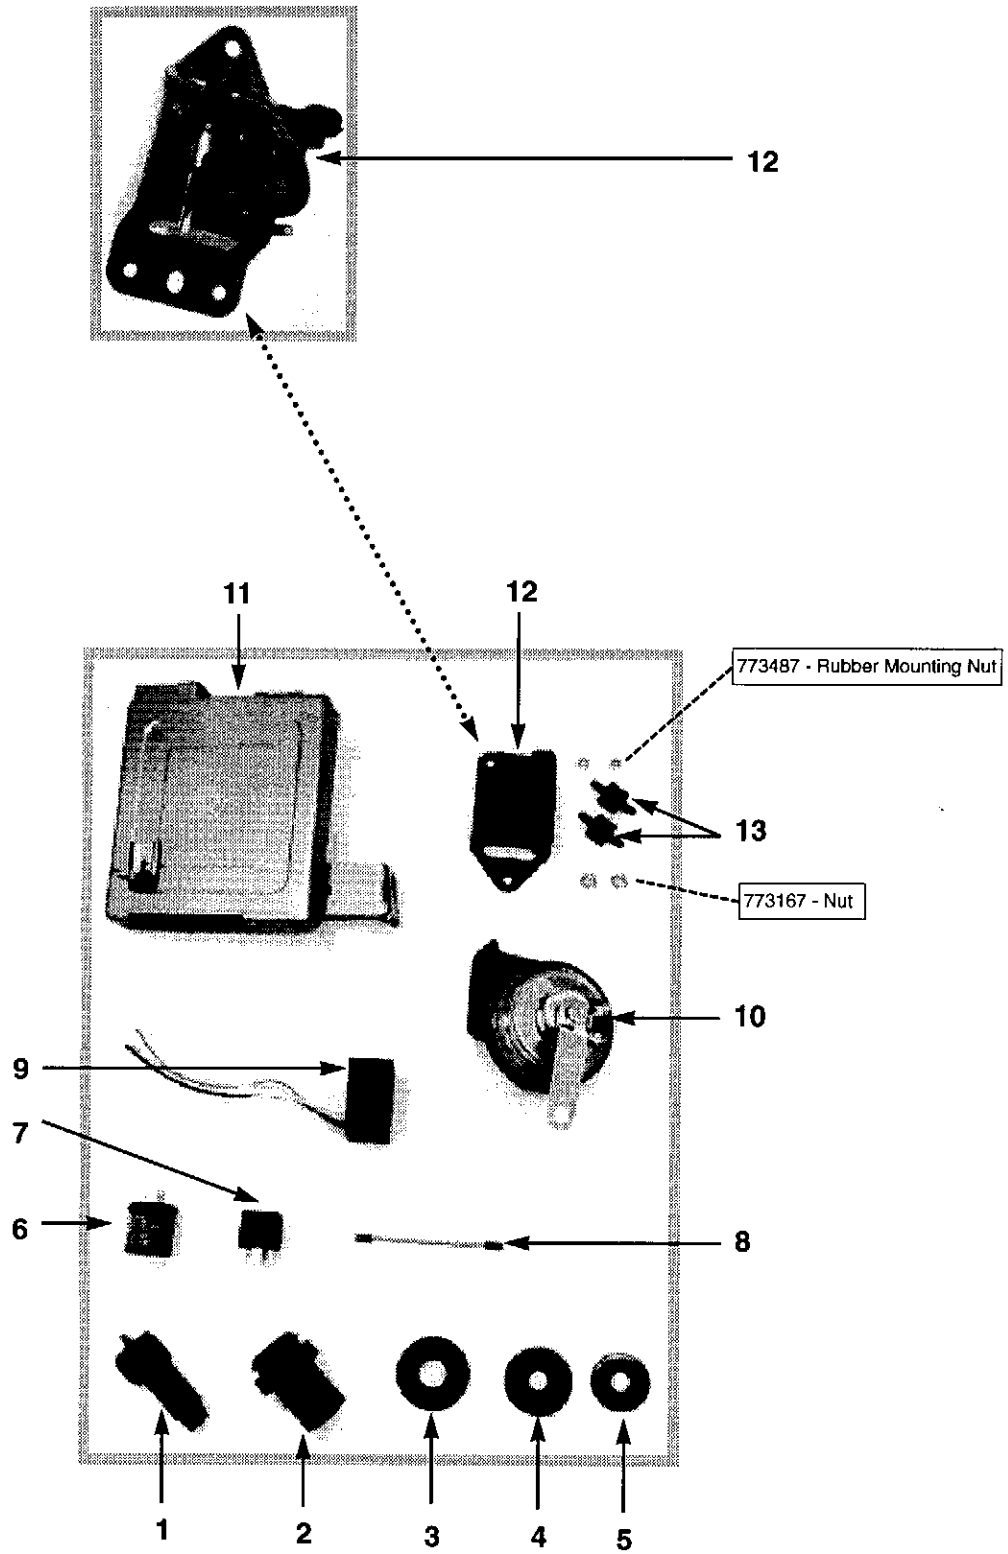

ELECTRICAL PANEL ASSEMBLY

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Alternator Boot	673011	1
2	Grommet	683815	1
3	Grommet-1-1/4 x 3/4 I.D.	191796	1
4	Grommet-1-1/4 x 1/2 I.D.	191797	1
5	Grommet-1 x 1/2 I.D.	191798	4
6	2 Prong Flasher	661044	1
7	Relay-4 Prong	661752	1
8	Jumper Wire-Circuit Breaker	678002	1
9	Potted Speed Switch	663251	1
10	Horn-Double Contact	663524	1
11	E.G.I. Unit	663110	1
12	Valve Assembly-Solenoid	183349	1
13	Rubber Mounting	133026	2





WIRING HARNESS

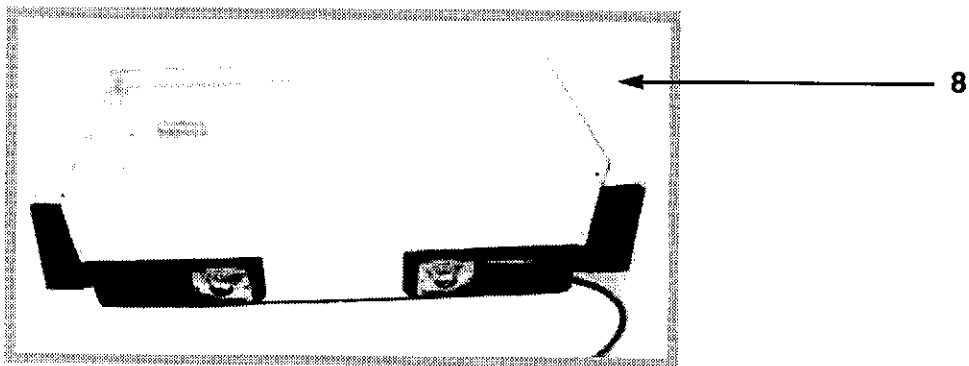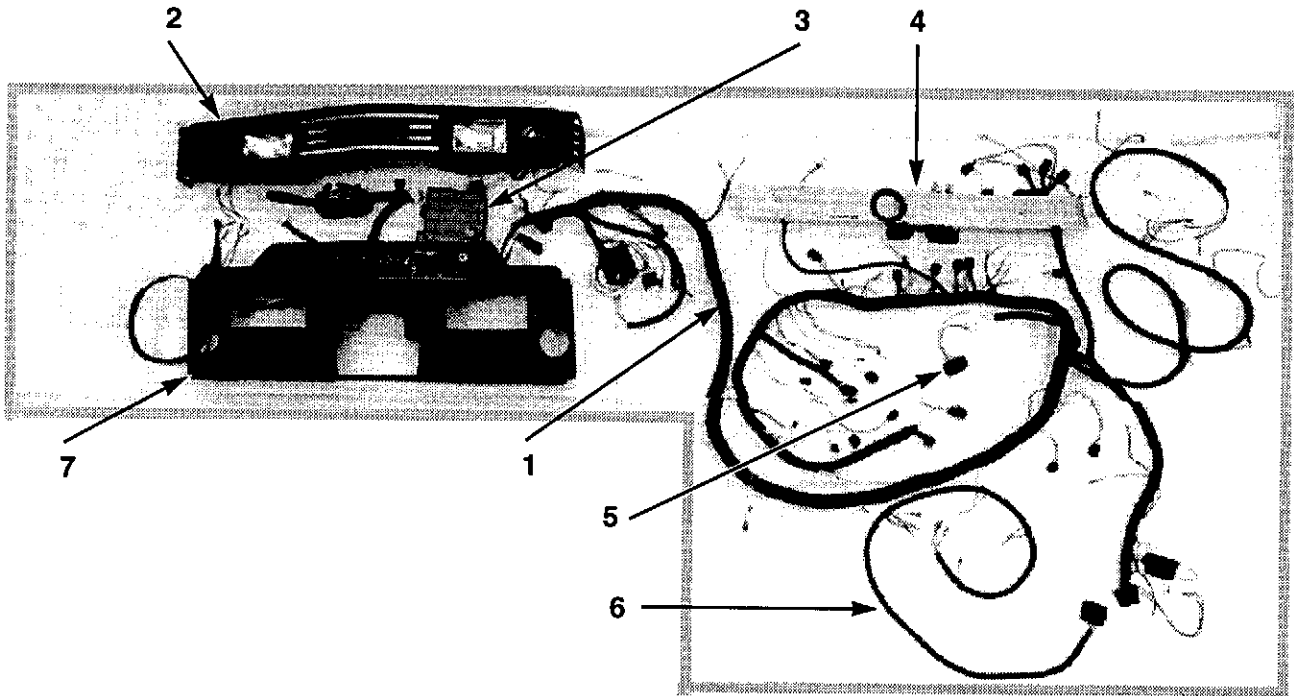

WIRING HARNESS

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Main Harness	673667	1
2	Bumper-Front Assembly	509000	1
3	E.G.I. Unit	663110	1
4	Electrical Panel Assembly	679000	1
5	Potted Speed Switch	663251	1
6	Rear Harness	672878	1
7	Dash Assembly	559000	1
8	Bottom Trunk Assembly	629000	1


DASH & WIRING HARNESS

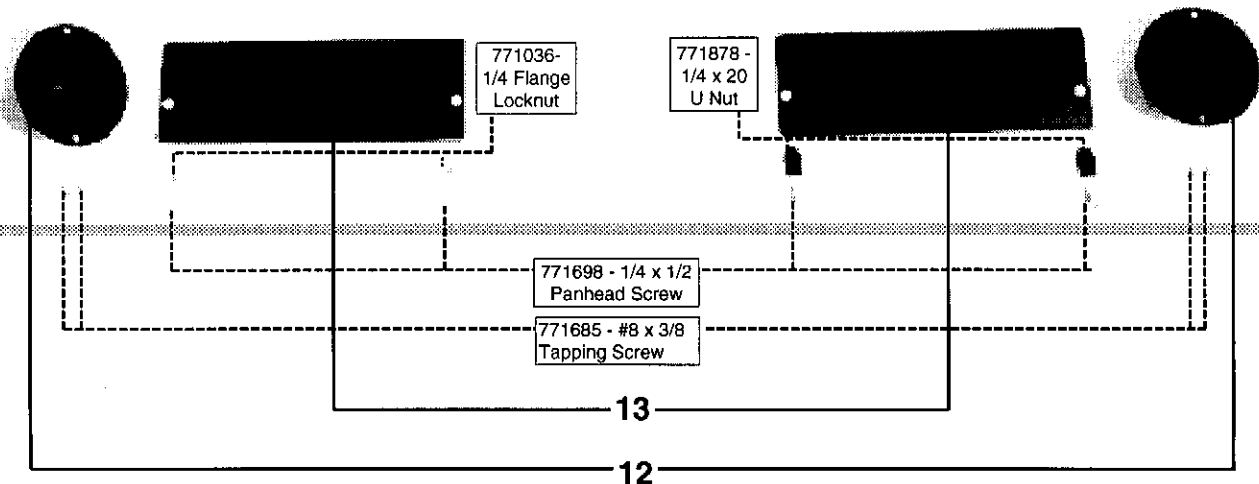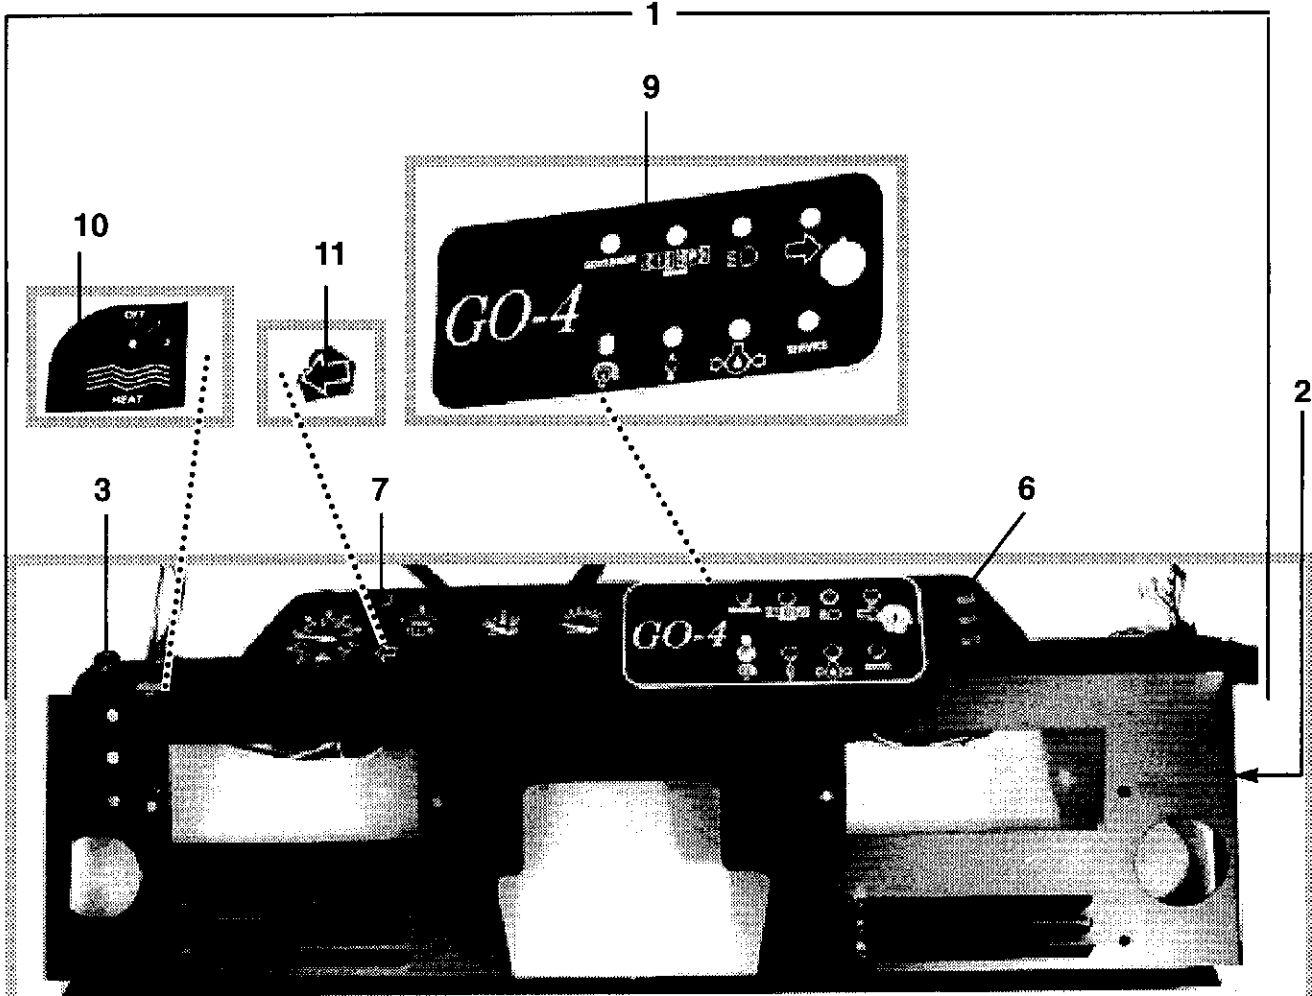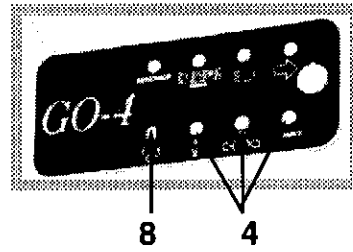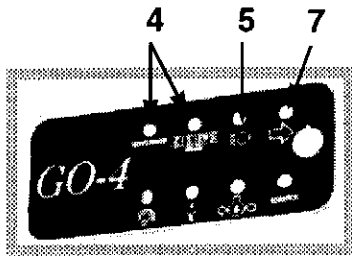

DASH & WIRING HARNESS

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Dash Assembly	559000	1
2	Panel-Dash Instrument	533723	1
3	Heater-2 Speed Switch	660023	1
4	Red Light-Dash	662043	5
5	Blue Light-Dash	662044	1
6	Illuminated Locker Switch	662836	3
7	Green Light-Dash	662045	2
8	Push/Pull Switch	663383	1
9	Decal-Dash	694002	1
10	Decal-Heater Switch	694003	1
11	Decal-Turn Signal LH	694004	1
12	Adjustable Defroster Vent	610009	2
13	Panel-Dash Inspection	534010	2

CAUTION PLATES

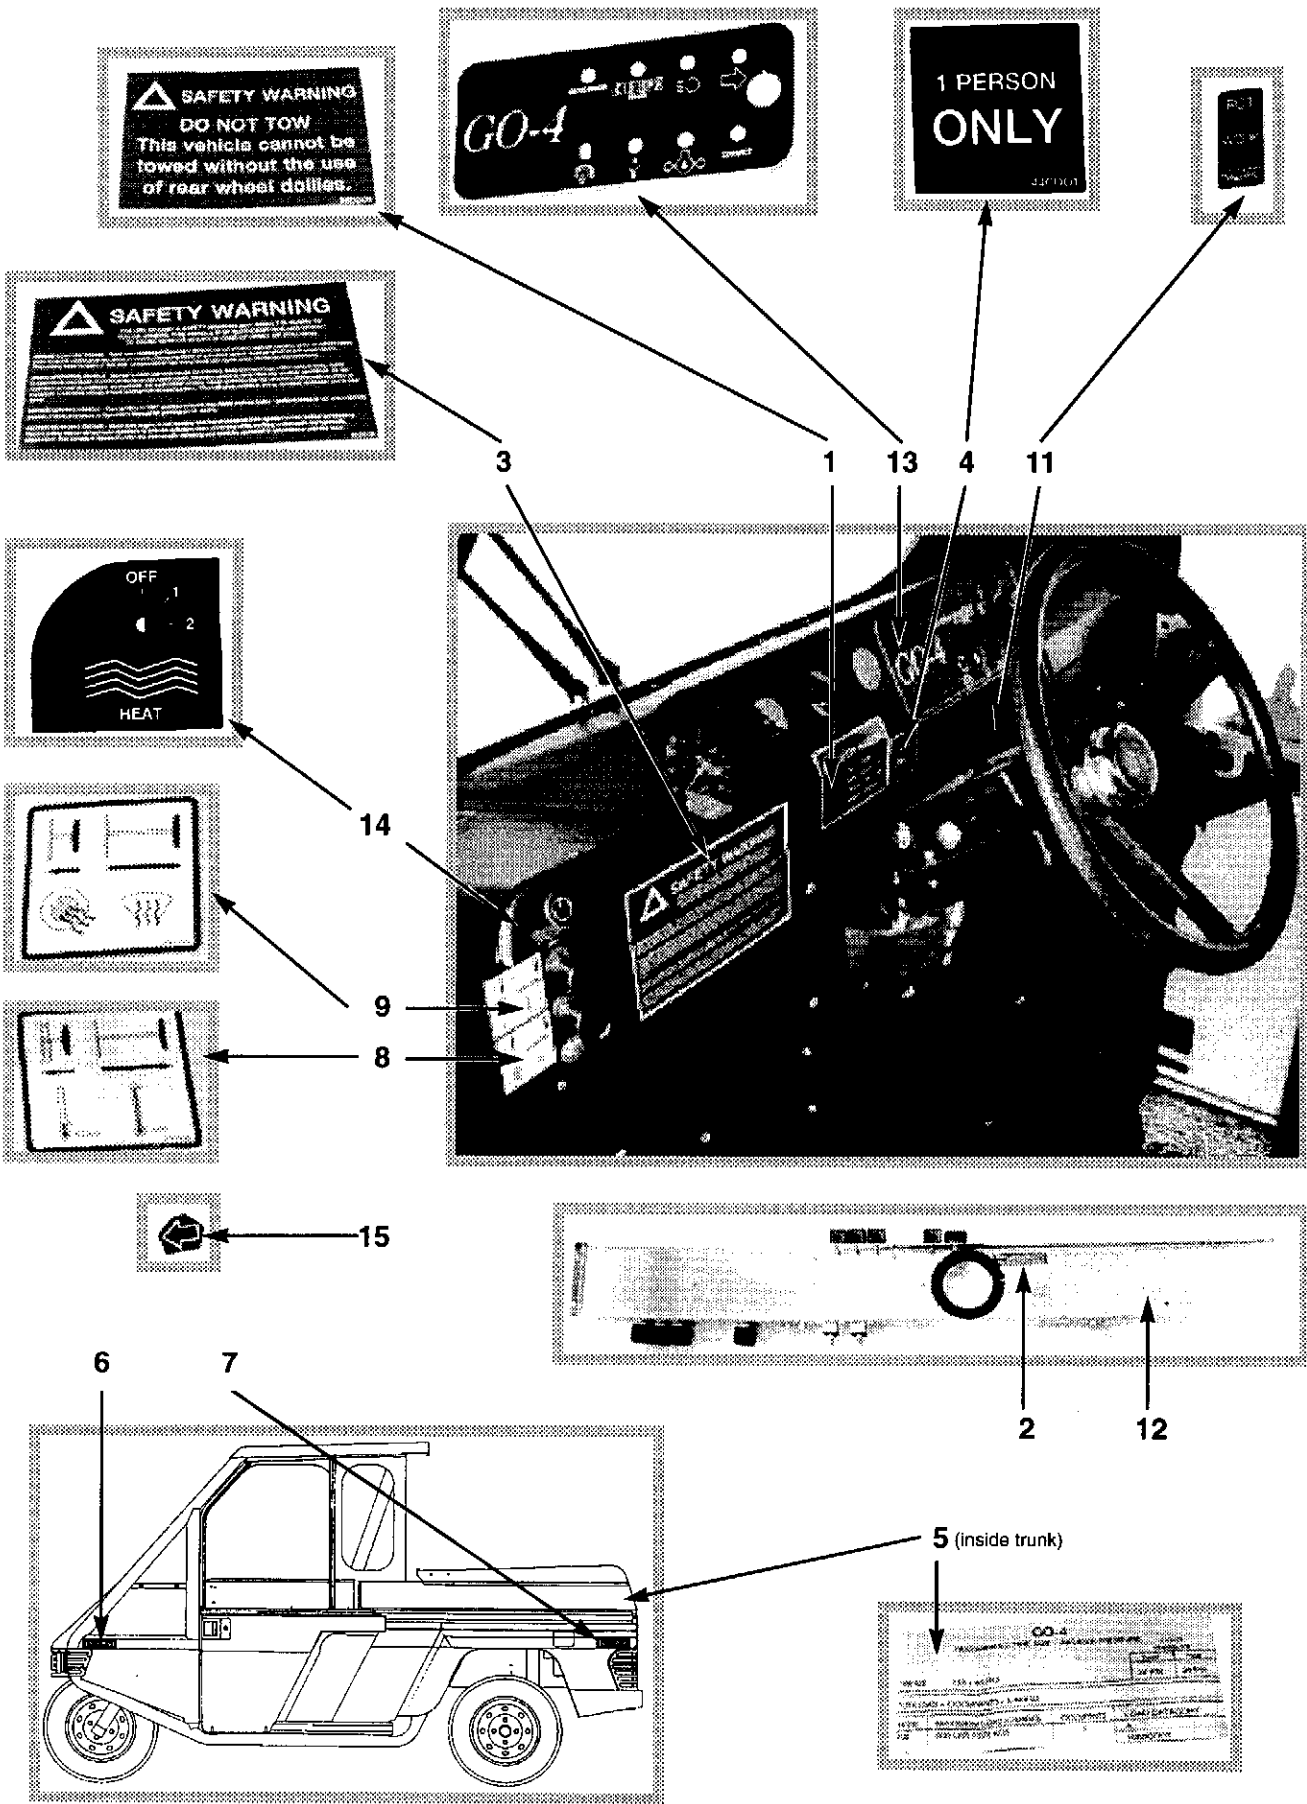

CAUTION PLATES

<i>REF.</i>	<i>PART NAME</i>	<i>PART NO.</i>	<i>QTY</i>
1	Safety Warning (4.25 x 3) Decal	690035	1
2	Warning (3.75 x 1) Decal	690036	1
3	Safety Warning (7.5 x 4.5) Decal	690037	1
4	1 Person Only Decal	690044	1
5	Tire Pressure Decal	691050	1
6	Reflective Tape-Amber	691755	2
7	Reflective Tape-Red	691754	2
8	Heater Defrost Control Decal	692062	1
9	Temperature Control Decal	692065	1
11	Rot, Work Hazard	692850	1
12	Decal-Emission Control, 1966	694001	1
13	Decal-Dash	694002	1
14	Decal-Heater Switch	694003	1
15	Decal-Turn Signal, LH	694004	1

— AMENDMENTS —
